


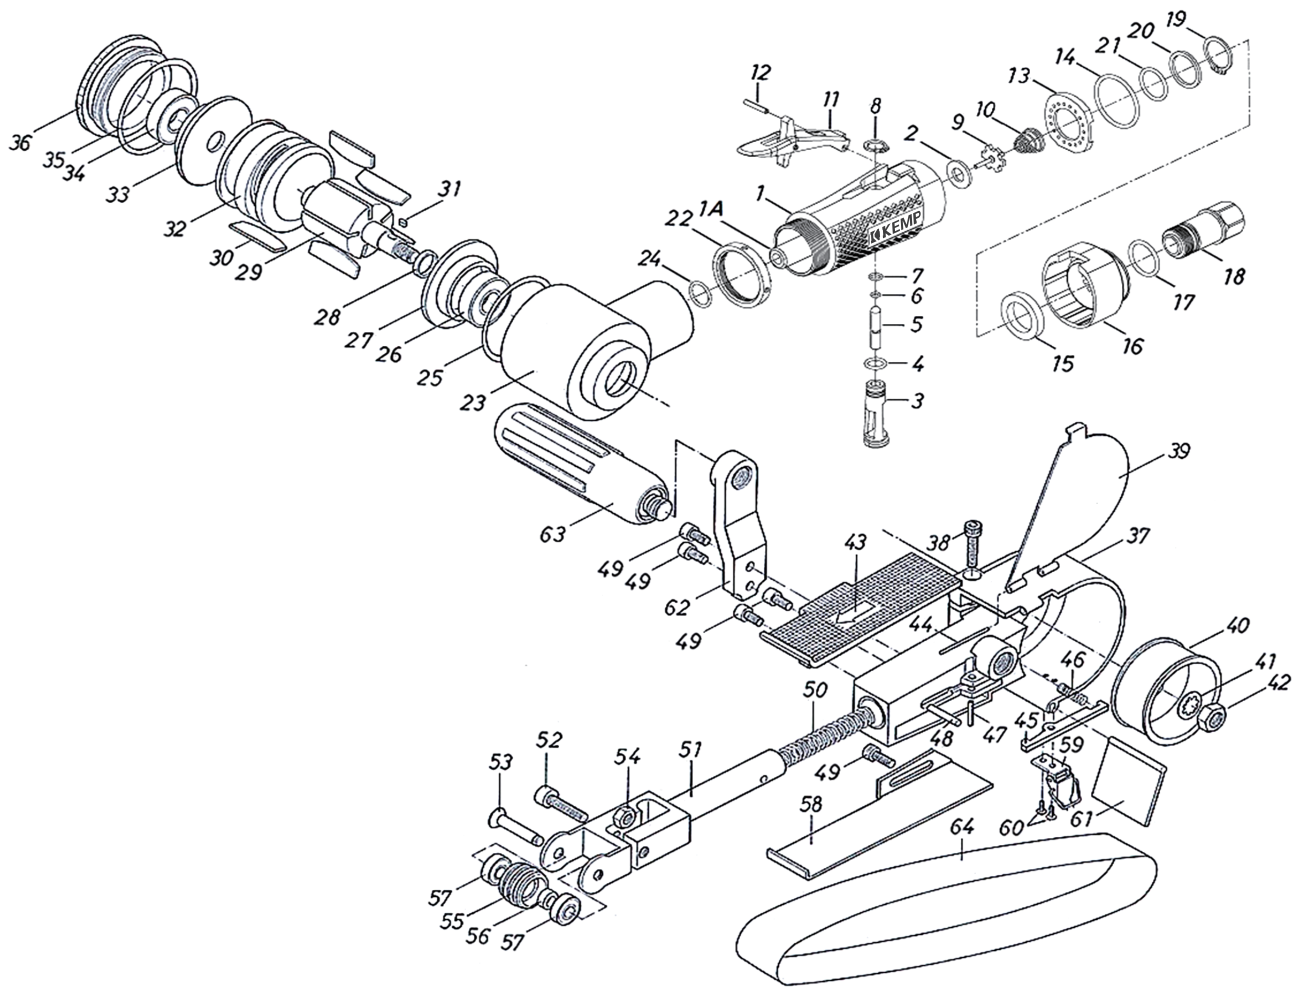

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
1	154 02 430 001	Housing	1	33	154 02 430 033	Rear End Plate	1
1A	154 02 430 201	Insert	1	34	154 02 430 034	Ball Bearing	1
2	154 02 430 002	Seal	1	35	154 02 430 035	O-Ring	1
3	154 02 430 003	Regulator	1	36	154 02 430 036	Motor Nut	1
4	154 02 430 004	O-Ring	1	37	154 02 430 037	Guard Body	1
5	154 02 430 005	Valve Stem	1	38	154 02 430 038	Adjust Screw	1
6	154 02 430 006	O-Ring	1	39	154 02 430 039	Guard	1
7	154 02 430 007	O-Ring	1	40	154 02 430 040	Drive Pulley	1
8	154 02 430 008	Spring Ring	1	41	154 02 430 041	Washer	1
9	154 02 430 009	Throttle	1	42	154 02 430 042	Lock Nut	1
10	154 02 430 010	Spring	1	43	154 02 430 043	Finger Plate	1
11	154 02 430 011	Safety Lever	1	44	154 02 430 044	Roll Pin	1
12	154 02 430 012	Lever Pin	1	45	154 02 430 045	Stopper	1
13	154 02 430 013	Air Control Ring	1	46	154 02 430 046	Stopper Spring	1
14	154 02 430 014	O-Ring	1	47	154 02 430 047	Roll Pin	1
15	154 02 430 015	Felt	1	48	154 02 430 048	Stopper Pin	1
16	154 02 430 016	Rear Cap	1	49	154 02 430 049	Cap Screw	5
17	154 02 430 017	O-Ring	1	50	154 02 430 050	Tension Spring	1
18	154 02 430 018	Air Inlet	1	51	154 02 430 051	Tension Arm	1
19	154 02 430 019	Snap Ring	1	52	154 02 430 052	Counter Sink	1
20	154 02 430 020	Spacer	1	53	154 02 430 053	Idle Shaft	1
21	154 02 430 021	O-Ring	1	54	154 02 430 054	Lock Nut	1
22	154 02 430 022	Lock Nut	1	55	154 02 430 055	Idle Pulley	1
23	154 02 430 023	Motor Housing	1	56	154 02 430 056	Collar	1
24	154 02 430 024	O-Ring	1	57	154 02 430 057	Ball Bearing	2
25	154 02 430 025	O-Ring	1	58	154 02 430 058	Shoe	1
26	154 02 430 026	Ball Bearing	1	59	154 02 430 059	Cover Latch	1
27	154 02 430 027	Front End Plate	1	60	154 02 430 060	Cap Screw	2
28	154 02 430 028	Spacer	1	61	154 02 430 061	Dust Cover	1
29	154 02 430 029	Rotor	1	62	154 02 430 062	Handle Bracket	1
30	154 02 430 030	Rotor Blade	6	63	154 02 430 063	Handle	1
31	154 02 430 031	Key	1	64	154 02 430 064	Grinding Belt	1
32	154 02 430 032	Cylinder	1				