


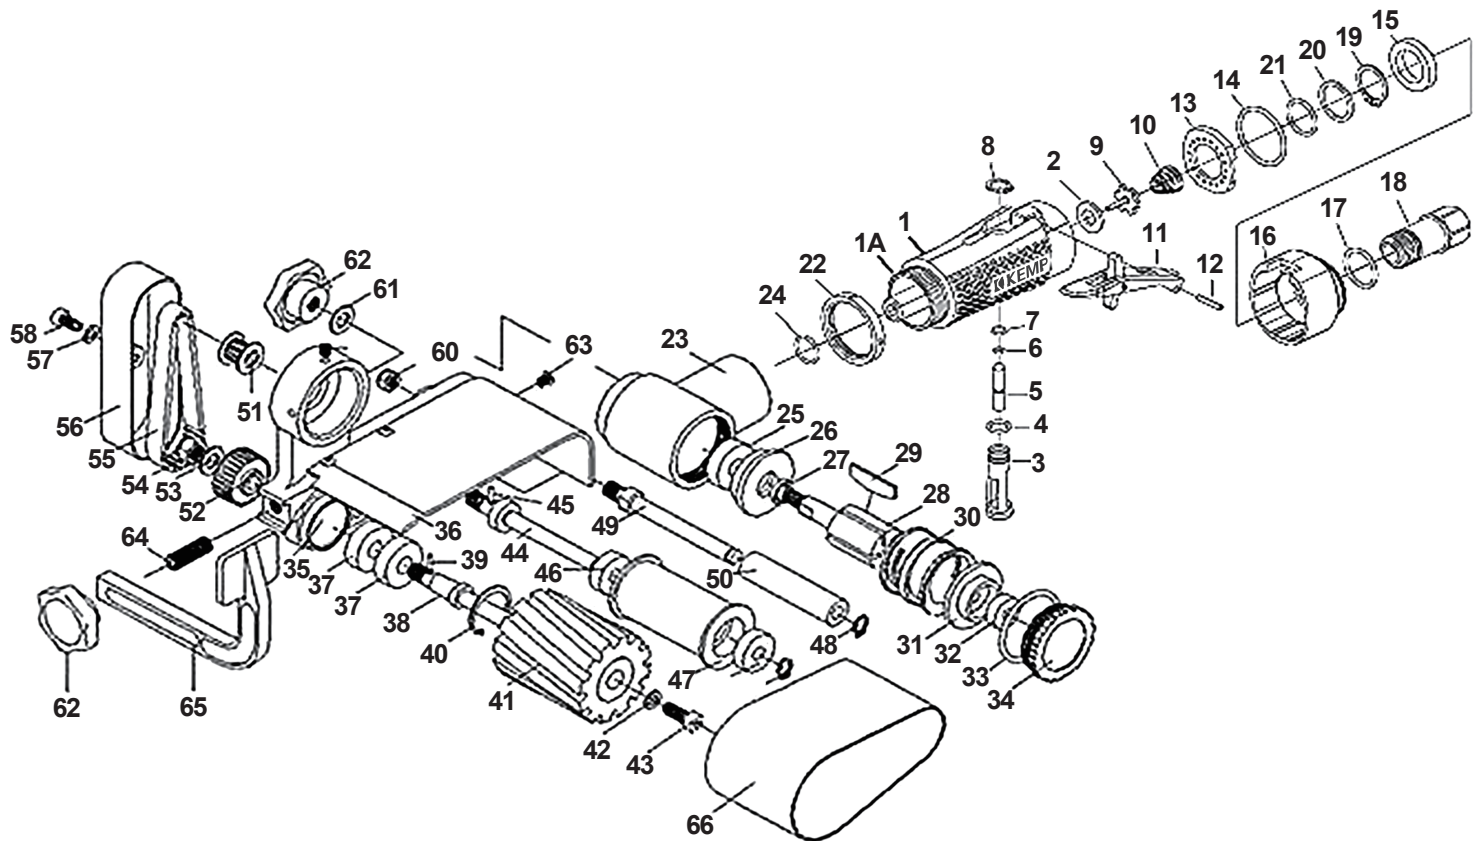

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
1	154 02 460 001	Housing	1	34	154 02 460 034	Motor Nut	1
1A	154 02 460 201	Insert	1	35	154 02 460 035	Frame	1
2	154 02 460 002	Seal	1	36	154 02 460 036	Wheel Cover	1
3	154 02 460 003	Regulator	1	37	154 02 460 037	Ball Bearing	2
4	154 02 460 004	O-Ring	1	38	154 02 460 038	Drive Shaft	1
5	154 02 460 005	Valve Stem	1	39	154 02 460 039	Roll Pin	1
6	154 02 460 006	O-Ring	1	40	154 02 460 040	Retainer	1
7	154 02 460 007	O-Ring	1	41	154 02 460 041	Drive Roller	1
8	154 02 460 008	Spring Ring	1	42	154 02 460 042	Washer	1
9	154 02 460 009	Throttle	1	43	154 02 460 043	Screw	1
10	154 02 460 010	Spring	1	44	154 02 460 044	Idle Shaft	1
11	154 02 460 011	Safety Lever	1	45	154 02 460 045	Roll Pin	1
12	154 02 460 012	Lever Pin	1	46	154 02 460 046	Ball Bearing	2
13	154 02 460 013	Air Control Ring	1	47	154 02 460 047	Idle Roller	1
14	154 02 460 014	O-Ring	1	48	154 02 460 048	Snap Ring	2
15	154 02 460 015	Felt	1	49	154 02 460 049	Lever Shaft	1
16	154 02 460 016	Rear Cap	1	50	154 02 460 050	Lever Roller	1
17	154 02 460 017	O-Ring	1	51	154 02 460 051	Pulley(A)	1
18	154 02 460 018	Air Inlet	1	52	154 02 460 052	Pulley(B)	1
19	154 02 460 019	Ring	1	53	154 02 460 053	Washer	1
20	154 02 460 020	Spacer	1	54	154 02 460 054	Nut	1
21	154 02 460 021	O-Ring	1	55	154 02 460 055	Belt	1
22	154 02 460 022	Lock Nut	1	56	154 02 460 056	Belt Cover	1
23	154 02 460 023	Motor Housing	1	57	154 02 460 057	Washer	1
24	154 02 460 024	O-Ring	1	58	154 02 460 058	Set Screw	1
25	154 02 460 025	Ball Bearing	1	59	154 02 460 059	Set Screw	2
26	154 02 460 026	Front End Plate	1	60	154 02 460 060	Nut	1
27	154 02 460 027	Spacer	1	61	154 02 460 061	Washer	1
28	154 02 460 028	Rotor	1	62	154 02 460 062	Knob	2
29	154 02 460 029	Rotor Blade	5	63	154 02 460 063	Screw	3
30	154 02 460 030	Cylinder	1	64	154 02 460 064	Screw	1
31	154 02 460 031	Rear End Plate	1	65	154 02 460 065	Polishing Guide	1
32	154 02 460 032	Ball Bearing	1	66	154 02 460 066	Sander	1
33	154 02 460 033	O-Ring	1				