


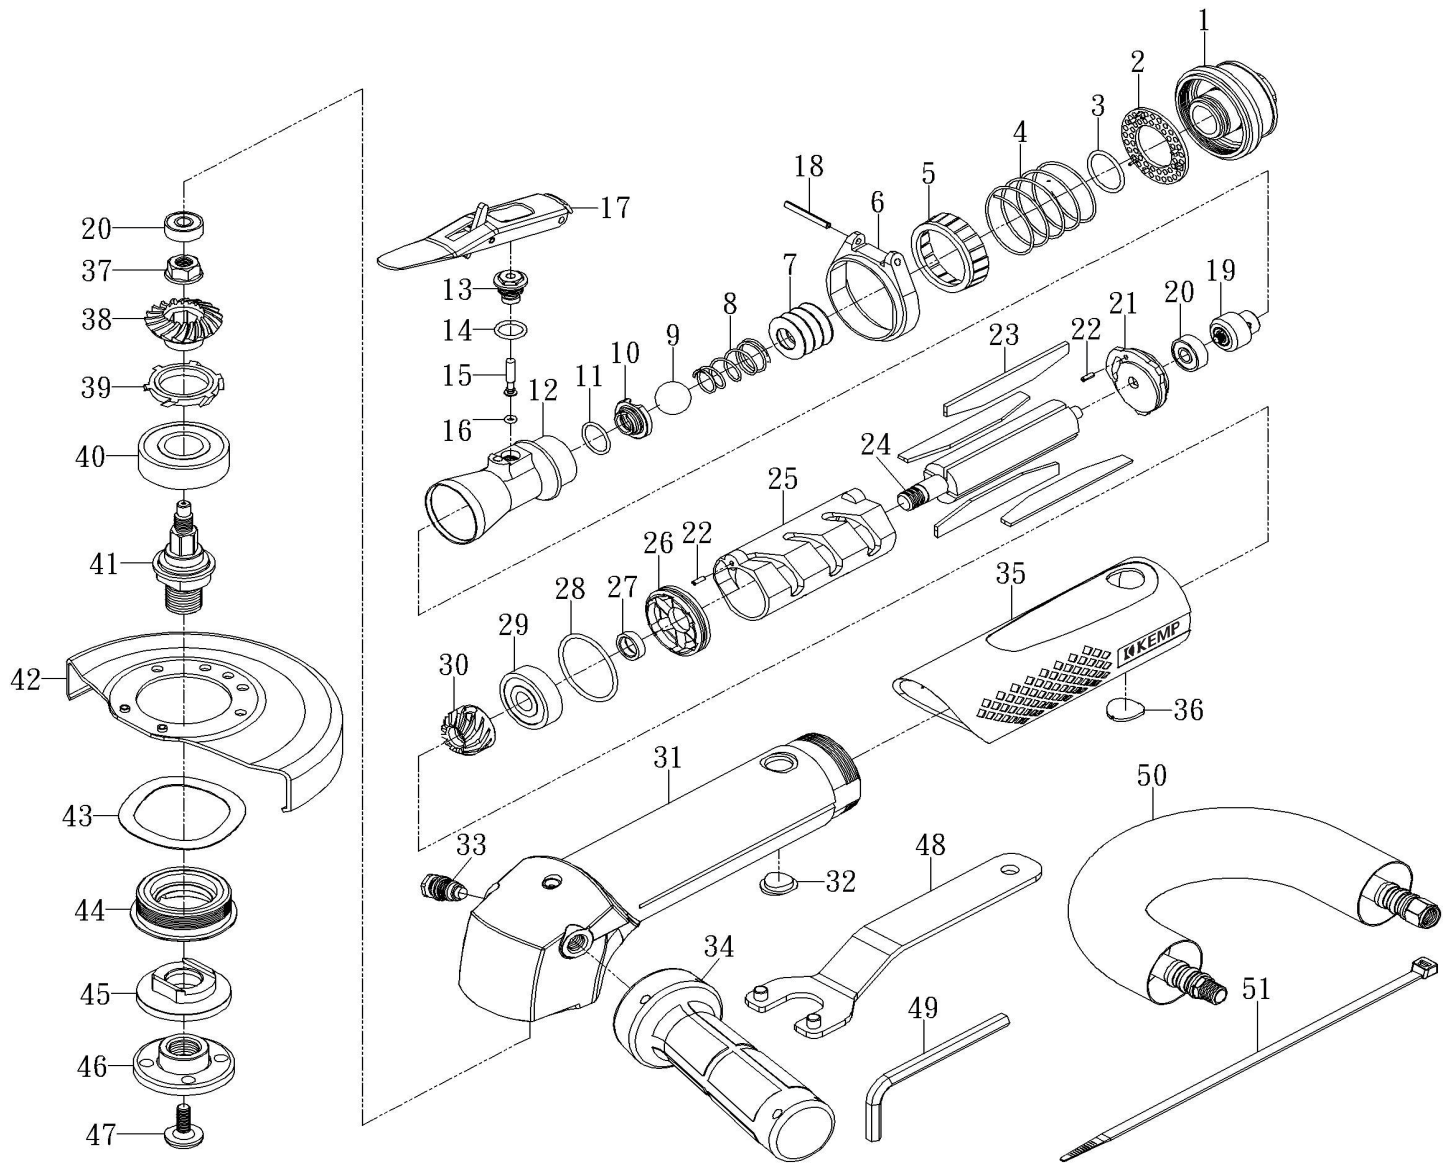

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
1	162 02 250 001	Adapter	1	27	162 02 250 027	Plate Spacer	1
2	162 02 250 002	Silencer	1	28	162 02 250 028	O-Ring	1
3	162 02 250 003	O-Ring	1	29	162 02 250 029	Bearing	1
4	162 02 250 004	Spring	1	30	162 02 250 030	Bevel Gear	1
5	162 02 250 005	Valve	1	31	162 02 250 031	Housing	1
6	162 02 250 006	Lever Bracket	1	32	162 02 250 032	Cover	1
7	162 02 250 007	Disc Spring	1	33	162 02 250 033	Stopfinger Complete	1
8	162 02 250 008	Spring	1	34	162 02 250 034	Vibration-Damping Handle	1
9	162 02 250 009	Ball	1	35	162 02 250 035	Housing Cover	1
10	162 02 250 010	Valve Seat	1	36	162 02 250 036	External Cover	1
11	162 02 250 011	O-Ring	1	37	162 02 250 037	Nut	1
12	162 02 250 012	Valve Body	1	38	162 02 250 038	Bevel Gear	1
13	162 02 250 013	Bushing	1	39	162 02 250 039	Deflecotr	1
14	162 02 250 014	O-Ring	1	40	162 02 250 040	Bearing	1
15	162 02 250 015	Valve Pin	1	41	162 02 250 041	Shaft	1
16	162 02 250 016	O-Ring	1	42	162 02 250 042	Disc Cover	1
17	162 02 250 017	Safety Lever	1	43	162 02 250 043	Washer	1
18	162 02 250 018	Pin	1	44	162 02 250 044	Plug	1
19	162 02 250 019	Governor	1	45	162 02 250 045	Rear Flange	1
20	162 02 250 020	Bearing	2	46	162 02 250 046	Front Flange	1
21	162 02 250 021	Rear End Plate	1	47	162 02 250 047	Safety Screw	1
22	162 02 250 022	Pin	2	48	162 02 250 048	Pin Wrench	1
23	162 02 250 023	Blade	4	49	162 02 250 049	Hexagon Wrench	1
24	162 02 250 024	Rotor	1	50	162 02 250 050	Exhaust Hose	1
25	162 02 250 025	Cylinder	1	51	162 02 250 051	Hose Clamp	2
26	162 02 250 026	Front End Plate	1				