


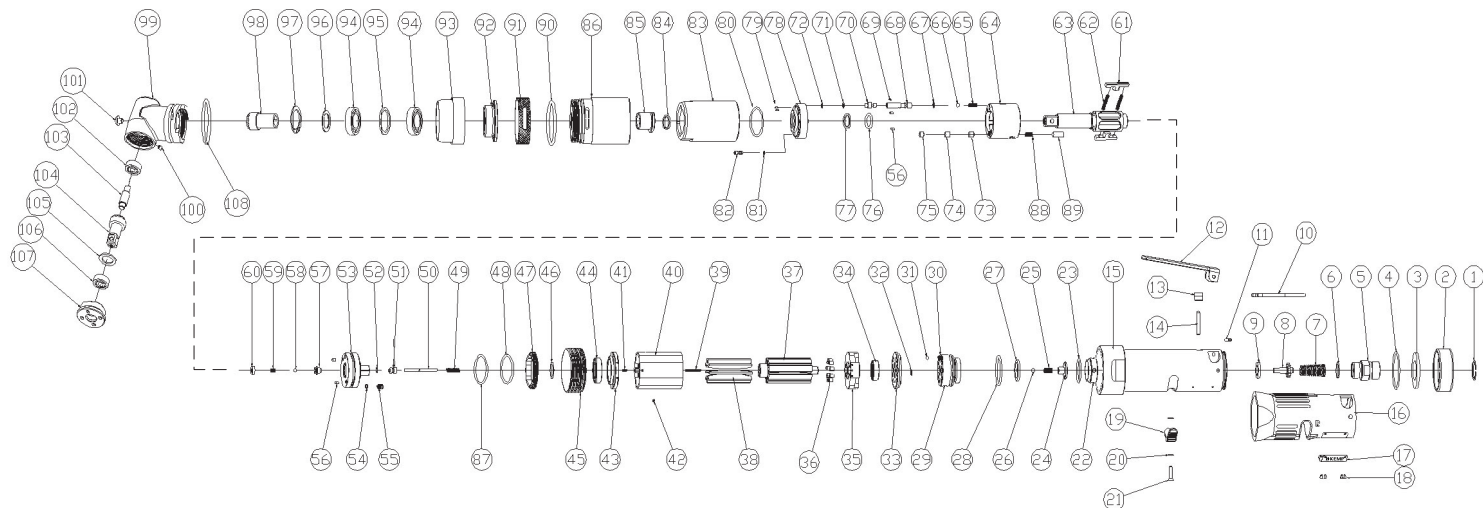

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
1	101 31 124 001	Snap	1	55	101 31 124 055	Pulse screw	1
2	101 31 124 002	Exhaust Block set	1	56	101 31 124 056	Pin	4
3	101 31 124 003	muffler	1	57	101 31 124 057	Oil return valve	1
4	101 31 124 004	O-Ring	1	58	101 31 124 058	Ball	1
5	101 31 124 005	Connect set fast-19NPT	1	59	101 31 124 059	Oil return spring	1
6	101 31 124 006	O-Ring	1	60	101 31 124 060	Oil return valve at	1
7	101 31 124 007	Spring	1	61	101 31 124 061	Drive Blade	2
8	101 31 124 008	Air inlet Valve	1	62	101 31 124 062	Blade Spring	2
9	101 31 124 009	Washer	1	63	101 31 124 063	Main Shaft-D	1
10	101 31 124 010	After the rings	1	64	101 31 124 064	Oil hydraulic cylinder	1
11	101 31 124 011	Pin	1	65	101 31 124 065	Spring	1
12	101 31 124 012	Handle	1	66	101 31 124 066	Ball	1
13	101 31 124 013	Switch place	1	67	101 31 124 067	O-Ring	1
14	101 31 124 014	Valve axle of the switch	1	68	101 31 124 068	Control core	1
15	101 31 124 015	Straight Housing	1	69	101 31 124 069	Pin	1
16	101 31 124 016	Rubber Grip	1	70	101 31 124 070	Adjust Screw	1
17	101 31 124 017	The positive plate	1	71	101 31 124 071	O-Ring	1
18	101 31 124 018	Rivet	4	72	101 31 124 072	Spacer sleeve	1
19	101 31 124 019	R.L switch	1	73	101 31 124 073	Pressure relief valve two	1
20	101 31 124 020	Washer	1	74	101 31 124 074	Pressure relief valve	1
21	101 31 124 021	Screw	1	75	101 31 124 075	Jam	1
22	101 31 124 022	Rear Balanced Switch	1	76	101 31 124 076	XO-Ring	1
23	101 31 124 023	O-Ring	1	77	101 31 124 077	XO-Washer	1
24	101 31 124 024	piston	1	78	101 31 124 078	Liner Plate	1
25	101 31 124 025	Spring	1	79	101 31 124 079	Pin	1
26	101 31 124 026	Ball	1	80	101 31 124 080	O-Ring	1
27	101 31 124 027	Washer	1	81	101 31 124 081	O-Ring	1
28	101 31 124 028	O-Ring	1	82	101 31 124 082	Oil Screw	1
29	101 31 124 029	Equilibrate the switch	1	83	101 31 124 083	Linet Casing	1
30	101 31 124 030	Spring	1	84	101 31 124 084	Washer	1
31	101 31 124 031	Ball	1	85	101 31 124 085	Bushing	1
32	101 31 124 032	O-Ring	1	86	101 31 124 086	Front Casing	1
33	101 31 124 033	Wind direction plate	1	87	101 31 124 087	Washer	1
34	101 31 124 034	Bearing	1	88	101 31 124 088	The pressure relief spring	1
35	101 31 124 035	Front plate	1	89	101 31 124 089	Pressure relief valve three	1
36	101 31 124 036	Rubber plug	9	90	101 31 124 090	O-Ring	1
37	101 31 124 037	Rotor	1	91	101 31 124 091	Lever Bushing	1
38	101 31 124 038	Rotor Blade	9	92	101 31 124 092	Plate	1
39	101 31 124 039	Pin	1	93	101 31 124 093	Packing Nut	1
40	101 31 124 040	Cylinder	1	94	101 31 124 094	Bearing	2
41	101 31 124 041	Pin	1	95	101 31 124 095	Washer	1
42	101 31 124 042	Pin	1	96	101 31 124 096	Washer	1
43	101 31 124 043	Rear plate	1	97	101 31 124 097	Snap	1
44	101 31 124 044	Bearing	1	98	101 31 124 098	Drive Gear	1
45	101 31 124 045	Connexion sets	1	99	101 31 124 099	90° Bending	1
46	101 31 124 046	Driving seat gasket	1	100	101 31 124 100	Screw	1
47	101 31 124 047	Pressure plate	1	101	101 31 124 101	Screw	1
48	101 31 124 048	O-Ring	1	102	101 31 124 102	Bearing	1
49	101 31 124 049	Spring	1	103	101 31 124 103	Bushing Protector	1
50	101 31 124 050	Transmission Plate piston pole	1	104	101 31 124 104	Turning Shaft Gear	1
51	101 31 124 051	Transmission Plate piston	1	105	101 31 124 105	Washer	1
52	101 31 124 052	O-Ring	1	106	101 31 124 106	Bearing	1
53	101 31 124 053	Transmission Plate	1	107	101 31 124 107	Bearing Cover	1
54	101 31 124 054	O-Ring	1	108	101 31 124 108	O-Ring	1