


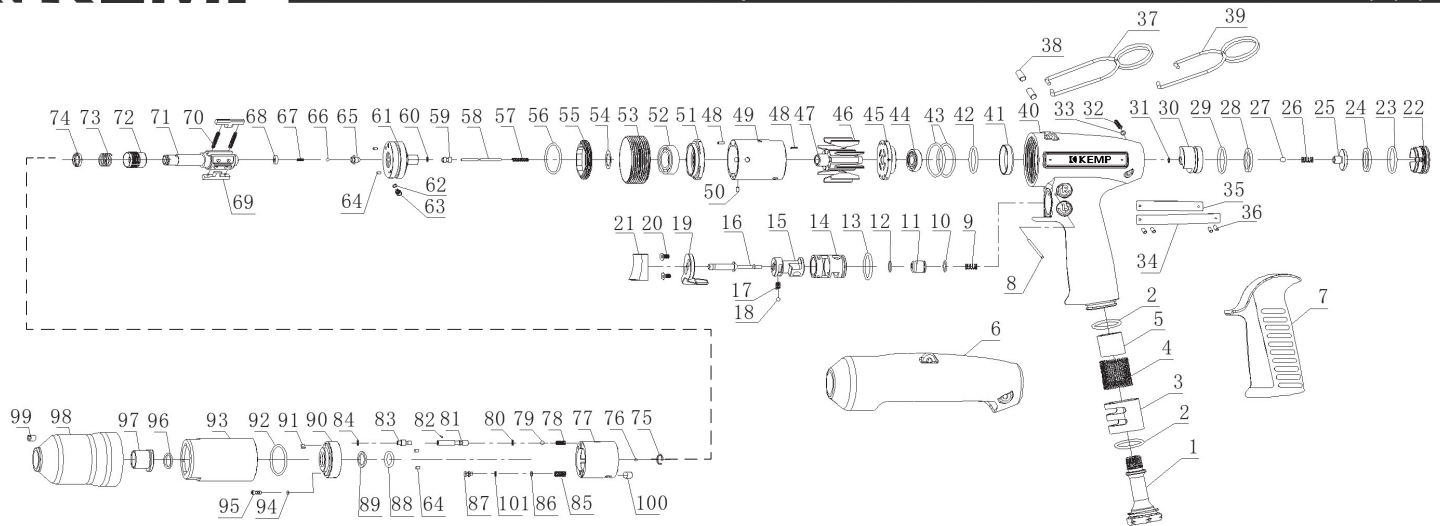

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
1	101 31 110 001	Exharst Body 19NPT	1	52	101 31 110 052	Bearing	1
2	101 31 110 002	O-Ring	2	53	101 31 110 053	Connexion sets	1
3	101 31 110 003	Exhaust Block set	1	54	101 31 110 054	Driving seat gasket	1
4	101 31 110 004	Exhaust nets	1	55	101 31 110 055	Pressure plate	1
5	101 31 110 005	muffler	1	56	101 31 110 056	O-Ring	1
6	101 31 110 006	A gun shaped body	1	57	101 31 110 057	Spring	1
7	101 31 110 007	Rubber Grip	1	58	101 31 110 058	Transmission Plate piston pole	1
8	101 31 110 008	Pin	1	59	101 31 110 059	Transmission Plate piston	1
9	101 31 110 009	Spring	1	60	101 31 110 060	O-Ring	1
10	101 31 110 010	O-Ring	1	61	101 31 110 061	Transmission Plate	1
11	101 31 110 011	Valve cap of the switch	1	62	101 31 110 062	O-Ring	2
12	101 31 110 012	O-Ring	1	63	101 31 110 063	Adjust Screw	1
13	101 31 110 013	O-Ring	1	64	101 31 110 064	Pin	4
14	101 31 110 014	Lever Bushing	1	65	101 31 110 065	Oil return valve	1
15	101 31 110 015	Reverse Valve	1	66	101 31 110 066	Oil return valve piston	1
16	101 31 110 016	Valve Rod	1	67	101 31 110 067	Oil return spring	1
17	101 31 110 017	Spring	1	68	101 31 110 068	Oil return valve at	1
18	101 31 110 018	Ball	1	69	101 31 110 069	Drive Blade	2
19	101 31 110 019	R.L Lever	1	70	101 31 110 070	Blade Spring	2
20	101 31 110 020	Screw	2	71	101 31 110 071	Main Shaft-H	1
21	101 31 110 021	Throttle Grip	1	72	101 31 110 072	Sleeve	1
22	101 31 110 022	Back Casing	1	73	101 31 110 073	spring	1
23	101 31 110 023	O-Ring	1	74	101 31 110 074	Washer	1
24	101 31 110 024	Washer	1	75	101 31 110 075	Snap	1
25	101 31 110 025	piston	1	76	101 31 110 076	Ball	1
26	101 31 110 026	Spring	1	77	101 31 110 077	Oil hydraulic cylinder	1
27	101 31 110 027	Ball	1	78	101 31 110 078	Spring	1
28	101 31 110 028	Washer	1	79	101 31 110 079	Ball	1
29	101 31 110 029	O-Ring	1	80	101 31 110 080	O-Ring	1
30	101 31 110 030	Equilibrate the switch	1	81	101 31 110 081	Control core	1
31	101 31 110 031	O-Ring	1	82	101 31 110 082	Pin	1
32	101 31 110 032	Screw	1	83	101 31 110 083	Adjust Screw	1
33	101 31 110 033	O-Ring	1	84	101 31 110 084	O-Ring	1
34	101 31 110 034	The positive plate	1	85	101 31 110 085	Temperature control valve spring	1
35	101 31 110 035	The negative plate	1	86	101 31 110 086	O-Ring	1
36	101 31 110 036	Rivet	4	87	101 31 110 087	Temperature control valve	1
37	101 31 110 037	Before the rings	1	88	101 31 110 088	XO-Ring	1
38	101 31 110 038	Pin	2	89	101 31 110 089	XO-Washer	1
39	101 31 110 039	After the rings	1	90	101 31 110 090	Liner Plate	1
40	101 31 110 040	Pistol Housing	1	91	101 31 110 091	Pin	2
41	101 31 110 041	Check plate	1	92	101 31 110 092	O-Ring	1
42	101 31 110 042	O-Ring	1	93	101 31 110 093	O-Ring	1
43	101 31 110 043	O-Ring	2	94	101 31 110 094	Oil Screw	1
44	101 31 110 044	Bearing	1	95	101 31 110 095	Linet Casing	1
45	101 31 110 045	Front plate	1	96	101 31 110 096	Washer	1
46	101 31 110 046	Rotor Blade	9	97	101 31 110 097	Bushing	1
47	101 31 110 047	Rotor	1	98	101 31 110 098	Front Casing	1
48	101 31 110 048	Pin	2	99	101 31 110 099	Screw	1
49	101 31 110 049	Cylinder	1	100	101 31 110 100	Rubber plug	1
50	101 31 110 050	Pin	1	101	101 31 110 101	Washer	1
51	101 31 110 051	Rear plate	1				