


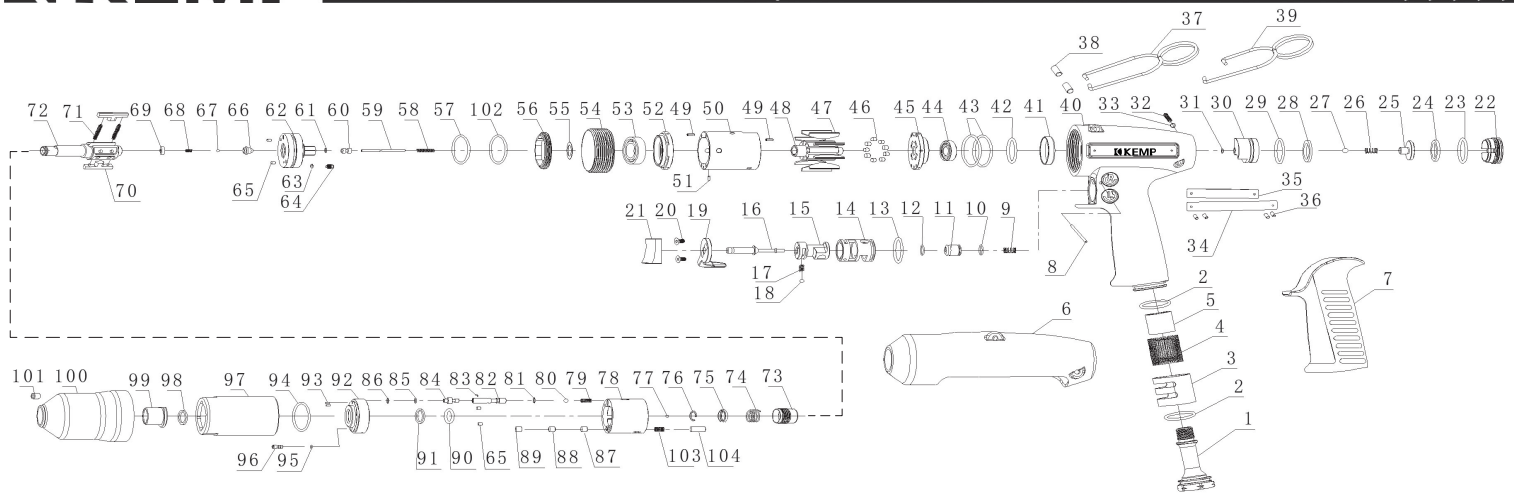

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
1	101 31 112 001	Exharst Body 19NPT	1	53	101 31 112 053	Bearing	1
2	101 31 112 002	O-Ring	2	54	101 31 112 054	Connexion sets	1
3	101 31 112 003	Exhaust Block set	1	55	101 31 112 055	Driving seat gasket	1
4	101 31 112 004	Exhaust nets	1	56	101 31 112 056	Pressure plate	1
5	101 31 112 005	muffler	1	57	101 31 112 057	O-Ring	1
6	101 31 112 006	A gun shaped body	1	58	101 31 112 058	Spring	1
7	101 31 112 007	Rubber Grip	1	59	101 31 112 059	Transmission Plate piston pole	1
8	101 31 112 008	Pin	1	60	101 31 112 060	Transmission Plate piston	1
9	101 31 112 009	Spring	1	61	101 31 112 061	O-Ring	1
10	101 31 112 010	O-Ring	1	62	101 31 112 062	Transmission Plate	1
11	101 31 112 011	Valve cap of the switch	1	63	101 31 112 063	O-Ring	1
12	101 31 112 012	O-Ring	1	64	101 31 112 064	Pulse screw	1
13	101 31 112 013	O-Ring	1	65	101 31 112 065	Pin	4
14	101 31 112 014	Lever Bushing	1	66	101 31 112 066	Oil return valve	1
15	101 31 112 015	Reverse Valve	1	67	101 31 112 067	Oil return valve piston	1
16	101 31 112 016	Valve Rod	1	68	101 31 112 068	Oil return spring	1
17	101 31 112 017	Spring	1	69	101 31 112 069	Oil return valve at	1
18	101 31 112 018	Ball	1	70	101 31 112 070	Drive Blade	2
19	101 31 112 019	R.L Lever	1	71	101 31 112 071	Blade Spring	2
20	101 31 112 020	Screw	2	72	101 31 112 072	Main Shaft-H	1
21	101 31 112 021	Throttle Grip	1	73	101 31 112 073	Sleeve	1
22	101 31 112 022	Back Casing	1	74	101 31 112 074	spring	1
23	101 31 112 023	O-Ring	1	75	101 31 112 075	Washer	1
24	101 31 112 024	Washer	1	76	101 31 112 076	Snap	1
25	101 31 112 025	piston	1	77	101 31 112 077	Ball	1
26	101 31 112 026	Spring	1	78	101 31 112 078	Oil hydraulic cylinder	1
27	101 31 112 027	Ball	1	79	101 31 112 079	Spring	1
28	101 31 112 028	Washer	1	80	101 31 112 080	Ball	1
29	101 31 112 029	O-Ring	1	81	101 31 112 081	O-Ring	1
30	101 31 112 030	Equilibrate the switch	1	82	101 31 112 082	Control core	1
31	101 31 112 031	O-Ring	1	83	101 31 112 083	Pin	1
32	101 31 112 032	Screw	1	84	101 31 112 084	Adjust Screw	1
33	101 31 112 033	O-Ring	1	85	101 31 112 085	O-Ring	1
34	101 31 112 034	The positive plate	1	86	101 31 112 086	Spacer sleeve	1
35	101 31 112 035	The negative plate	1	87	101 31 112 087	Pressure relief valve two	1
36	101 31 112 036	Rivet	4	88	101 31 112 088	Pressure relief valve	1
37	101 31 112 037	Before the rings	1	89	101 31 112 089	Jam	1
38	101 31 112 038	Pin	2	90	101 31 112 090	XO-Ring	1
39	101 31 112 039	After the rings	1	91	101 31 112 091	XO-Washer	1
40	101 31 112 040	Pistol Housing	1	92	101 31 112 092	Liner Plate	1
41	101 31 112 041	Check plate	1	93	101 31 112 093	Pin	1
42	101 31 112 042	O-Ring	1	94	101 31 112 094	O-Ring	1
43	101 31 112 043	O-Ring	2	95	101 31 112 095	O-Ring	1
44	101 31 112 044	Bearing	1	96	101 31 112 096	Oil Screw	1
45	101 31 112 045	Front plate	1	97	101 31 112 097	Linet Casing	1
46	101 31 112 046	Rubber plug	9	98	101 31 112 098	Washer	1
47	101 31 112 047	Rotor Blade	9	99	101 31 112 099	Bushing	1
48	101 31 112 048	Rotor	1	100	101 31 112 100	Front Casing	1
49	101 31 112 049	Pin	2	101	101 31 112 101	Screw	1
50	101 31 112 050	Cylinder	1	102	101 31 112 102	Washer	1
51	101 31 112 051	Pin	1	103	101 31 112 103	The pressure relief spring	1
52	101 31 112 052	Rear plate	1	104	101 31 112 104	Pressure relief valve three	1