


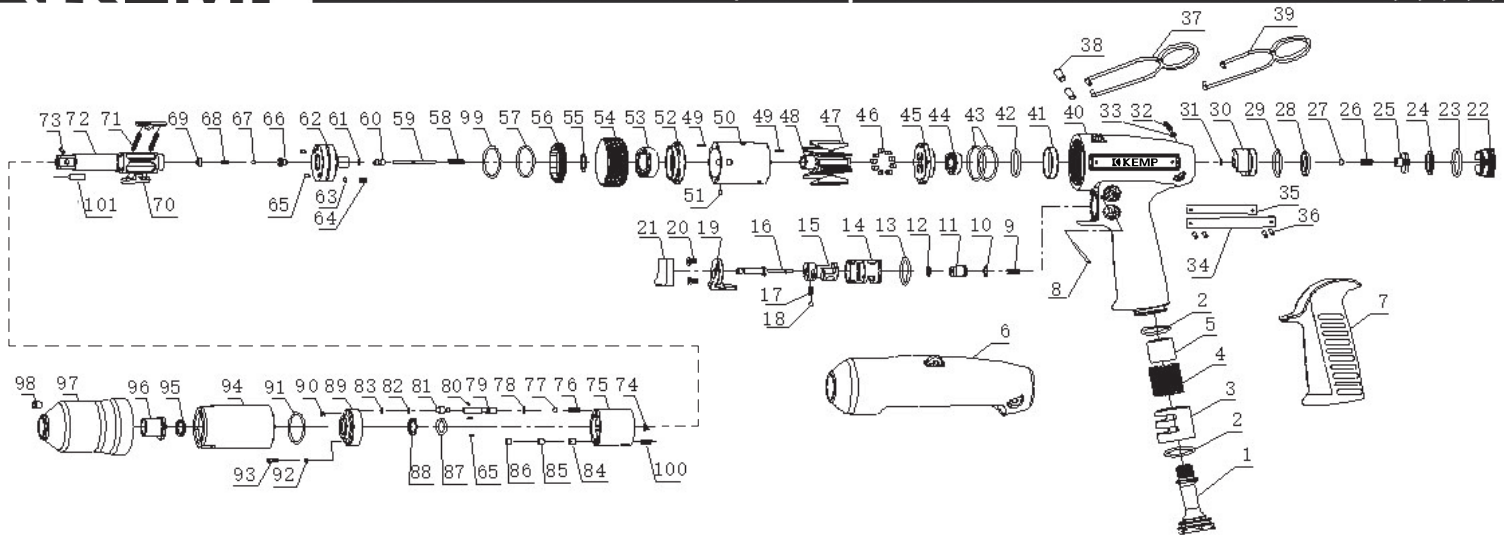

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
1	101 31 102 001	Exharst Body 19NPT	1	52	101 31 102 052	Rear plate	1
2	101 31 102 002	O-Ring	2	53	101 31 102 053	Bearing	1
3	101 31 102 003	Exhaust Block set	1	54	101 31 102 054	Connexion sets	1
4	101 31 102 004	Exhaust nets	1	55	101 31 102 055	Driving seat gasket	1
5	101 31 102 005	muffler	1	56	101 31 102 056	Pressure plate	1
6	101 31 102 006	A gun shaped body	1	57	101 31 102 057	O-Ring	1
7	101 31 102 007	Rubber Grip	1	58	101 31 102 058	Spring	1
8	101 31 102 008	Pin	1	59	101 31 102 059	Transmission Plate piston pole	1
9	101 31 102 009	Spring	1	60	101 31 102 060	Transmission Plate piston	1
10	101 31 102 010	O-Ring	1	61	101 31 102 061	O-Ring	1
11	101 31 102 011	Valve cap of the switch	1	62	101 31 102 062	Transmission Plate	1
12	101 31 102 012	O-Ring	1	63	101 31 102 063	O-Ring	1
13	101 31 102 013	O-Ring	1	64	101 31 102 064	Pulse screw	1
14	101 31 102 014	Lever Bushing	1	65	101 31 102 065	Pin	4
15	101 31 102 015	Reverse Valve	1	66	101 31 102 066	Oil return valve	1
16	101 31 102 016	Valve Rod	1	67	101 31 102 067	Oil return valve piston	1
17	101 31 102 017	Spring	1	68	101 31 102 068	Oil return spring	1
18	101 31 102 018	Ball	1	69	101 31 102 069	Oil return valve at	1
19	101 31 102 019	R.L Lever	1	70	101 31 102 070	Drive Blade	2
20	101 31 102 020	Screw	2	71	101 31 102 071	Blade Spring	2
21	101 31 102 021	Throttle Grip	1	72	101 31 102 072	Main Shaft-D	1
22	101 31 102 022	Back Casing	1	73	101 31 102 073	Pin	1
23	101 31 102 023	O-Ring	1	74	101 31 102 074	Spring	1
24	101 31 102 024	Washer	1	75	101 31 102 075	Oil hydraulic cylinder	1
25	101 31 102 025	piston	1	76	101 31 102 076	Spring	1
26	101 31 102 026	Spring	1	77	101 31 102 077	Ball	1
27	101 31 102 027	Ball	1	78	101 31 102 078	O-Ring	1
28	101 31 102 028	Washer	1	79	101 31 102 079	Control core	1
29	101 31 102 029	O-Ring	1	80	101 31 102 080	Pin	1
30	101 31 102 030	Equilibrate the switch	1	81	101 31 102 081	Adjust Screw	1
31	101 31 102 031	O-Ring	1	82	101 31 102 082	O-Ring	1
32	101 31 102 032	Screw	1	83	101 31 102 083	Spacer sleeve	1
33	101 31 102 033	O-Ring	1	84	101 31 102 084	Pressure relief valve two	1
34	101 31 102 034	The positive plate	1	85	101 31 102 085	Pressure relief valve	1
35	101 31 102 035	The negative plate	1	86	101 31 102 086	Jam	1
36	101 31 102 036	Rivet	4	87	101 31 102 087	XO-Ring	1
37	101 31 102 037	Before the rings	1	88	101 31 102 088	XO-Washer	1
38	101 31 102 038	Pin	2	89	101 31 102 089	Liner Plate	1
39	101 31 102 039	After the rings	1	90	101 31 102 090	Pin	1
40	101 31 102 040	Pistol Housing	1	91	101 31 102 091	O-Ring	1
41	101 31 102 041	Check plate	1	92	101 31 102 092	O-Ring	1
42	101 31 102 042	O-Ring	1	93	101 31 102 093	Oil Screw	1
43	101 31 102 043	O-Ring	2	94	101 31 102 094	Linet Casing	1
44	101 31 102 044	Bearing	1	95	101 31 102 095	Washer	1
45	101 31 102 045	Front plate	1	96	101 31 102 096	Bushing	1
46	101 31 102 046	Rubber plug	9	97	101 31 102 097	Front Casing	1
47	101 31 102 047	Rotor Blade	9	98	101 31 102 098	Screw	1
48	101 31 102 048	Rotor	1	99	101 31 102 099	Washer	1
49	101 31 102 049	Pin	2	100	101 31 102 100	The pressure relief spring	1
50	101 31 102 050	Cylinder	1	101	101 31 102 101	Pressure relief valve three	1
51	101 31 102 051	Pin	1				