


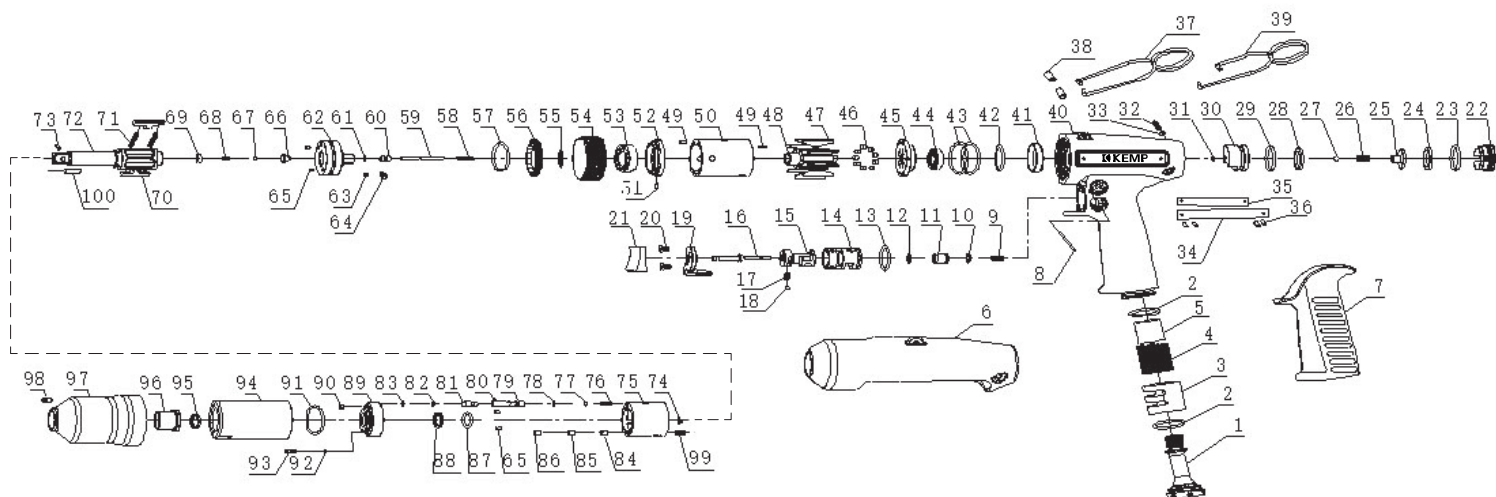

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
1	101 31 105 001	Exharst Body 19NPT	1	51	101 31 105 051	Pin	1
2	101 31 105 002	O-Ring	2	52	101 31 105 052	Rear plate	1
3	101 31 105 003	Exhaust Block set	1	53	101 31 105 053	Bearing	1
4	101 31 105 004	Exhaust nets	1	54	101 31 105 054	Connexion sets	1
5	101 31 105 005	muffler	1	55	101 31 105 055	Driving seat gasket	1
6	101 31 105 006	A gun shaped body	1	56	101 31 105 056	Pressure plate	1
7	101 31 105 007	Rubber Grip	1	57	101 31 105 057	O-Ring	1
8	101 31 105 008	Pin	1	58	101 31 105 058	Spring	1
9	101 31 105 009	Spring	1	59	101 31 105 059	Transmission Plate piston pole	1
10	101 31 105 010	O-Ring	1	60	101 31 105 060	Transmission Plate piston	1
11	101 31 105 011	Valve cap of the switch	1	61	101 31 105 061	O-Ring	1
12	101 31 105 012	O-Ring	1	62	101 31 105 062	Transmission Plate	1
13	101 31 105 013	O-Ring	1	63	101 31 105 063	O-Ring	1
14	101 31 105 014	Lever Bushing	1	64	101 31 105 064	Pulse screw	1
15	101 31 105 015	Reverse Valve	1	65	101 31 105 065	Pin	4
16	101 31 105 016	Valve Rod	1	66	101 31 105 066	Oil return valve	1
17	101 31 105 017	Spring	1	67	101 31 105 067	Oil return valve piston	1
18	101 31 105 018	Ball	1	68	101 31 105 068	Oil return spring	1
19	101 31 105 019	R.L Lever	1	69	101 31 105 069	Oil return valve at	1
20	101 31 105 020	Screw	2	70	101 31 105 070	Drive Blade	2
21	101 31 105 021	Throttle Grip	1	71	101 31 105 071	Blade Spring	2
22	101 31 105 022	Back Casing	1	72	101 31 105 072	Main Shaft-D	1
23	101 31 105 023	O-Ring	1	73	101 31 105 073	Pin	1
24	101 31 105 024	Washer	1	74	101 31 105 074	Spring	1
25	101 31 105 025	piston	1	75	101 31 105 075	Oil hydraulic cylinder	1
26	101 31 105 026	Spring	1	76	101 31 105 076	Spring	1
27	101 31 105 027	Ball	1	77	101 31 105 077	Ball	1
28	101 31 105 028	Washer	1	78	101 31 105 078	O-Ring	1
29	101 31 105 029	O-Ring	1	79	101 31 105 079	Control core	1
30	101 31 105 030	Equilibrate the switch	1	80	101 31 105 080	Pin	1
31	101 31 105 031	O-Ring	1	81	101 31 105 081	Adjust Screw	1
32	101 31 105 032	Screw	1	82	101 31 105 082	O-Ring	1
33	101 31 105 033	O-Ring	1	83	101 31 105 083	Spacer sleeve	1
34	101 31 105 034	The positive plate	1	84	101 31 105 084	Pressure relief valve two	1
35	101 31 105 035	The negative plate	1	85	101 31 105 085	Pressure relief valve	1
36	101 31 105 036	Rivet	4	86	101 31 105 086	Jam	1
37	101 31 105 037	Before the rings	1	87	101 31 105 087	XO-Ring	1
38	101 31 105 038	Pin	2	88	101 31 105 088	XO-Washer	1
39	101 31 105 039	After the rings	1	89	101 31 105 089	Liner Plate	1
40	101 31 105 040	Pistol Housing	1	90	101 31 105 090	Pin	2
41	101 31 105 041	Check plate	1	91	101 31 105 091	O-Ring	1
42	101 31 105 042	O-Ring	1	92	101 31 105 092	O-Ring	1
43	101 31 105 043	O-Ring	2	93	101 31 105 093	Oil Screw	1
44	101 31 105 044	Bearing	1	94	101 31 105 094	Linet Casing	1
45	101 31 105 045	Front plate	1	95	101 31 105 095	Washer	1
46	101 31 105 046	Rubber plug	9	96	101 31 105 096	Bushing	1
47	101 31 105 047	Rotor Blade	9	97	101 31 105 097	Front Casing	1
48	101 31 105 048	Rotor	1	98	101 31 105 098	Screw	1
49	101 31 105 049	Pin	2	99	101 31 105 099	The pressure relief spring	1
50	101 31 105 050	Cylinder	1	100	101 31 105 100	Pressure relief valve three	1