


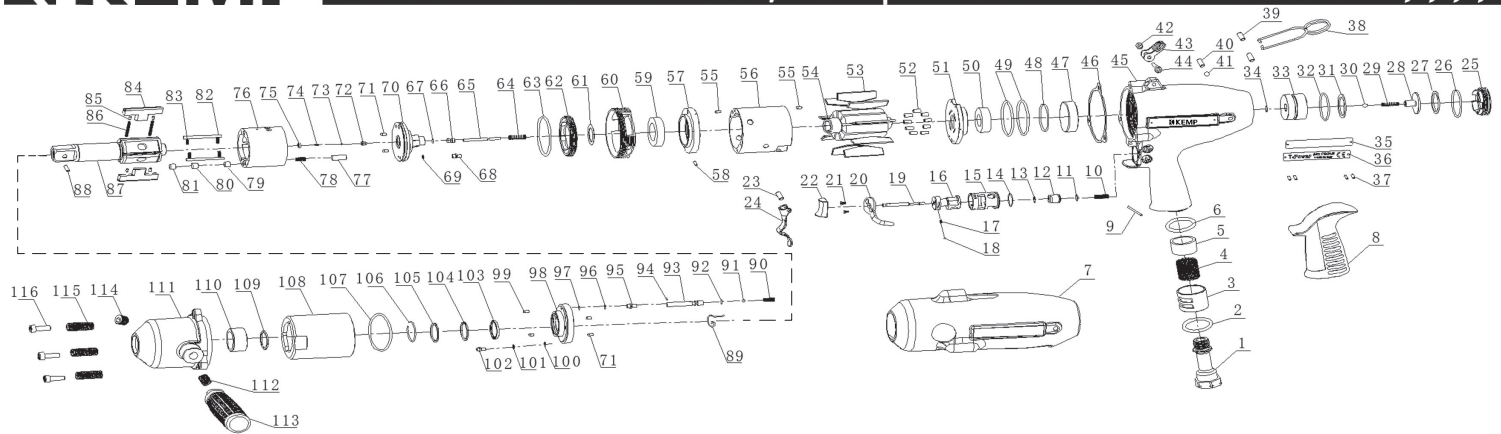

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
1	101 31 108 001	Exharst Body 19NPT	1	59	101 31 108 059	Bearing	1
2	101 31 108 002	O-Ring	1	60	101 31 108 060	Connexion sets	1
3	101 31 108 003	Exhaust Block set	1	61	101 31 108 061	Driving seat gasket	1
4	101 31 108 004	Exhaust nets	1	62	101 31 108 062	Pressure plate	1
5	101 31 108 005	muffler	1	63	101 31 108 063	O-Ring	1
6	101 31 108 006	O-Ring	1	64	101 31 108 064	Spring	1
7	101 31 108 007	A gun shaped body	1	65	101 31 108 065	Transmission Plate piston pole	1
8	101 31 108 008	Rubber Grip	1	66	101 31 108 066	Transmission Plate piston	1
9	101 31 108 009	Pin	1	67	101 31 108 067	O-Ring	1
10	101 31 108 010	Spring	1	68	101 31 108 068	Pulse screw	1
11	101 31 108 011	O-Ring	1	69	101 31 108 069	O-Ring	1
12	101 31 108 012	Valve cap of the switch	1	70	101 31 108 070	Transmission Plate	1
13	101 31 108 013	O-Ring	1	71	101 31 108 071	Pin	4
14	101 31 108 014	O-Ring	1	72	101 31 108 072	Oil return valve	1
15	101 31 108 015	Lever Bushing	1	73	101 31 108 073	Oil return valve piston	1
16	101 31 108 016	Reverse Valve	1	74	101 31 108 074	Oil return spring	1
17	101 31 108 017	Spring	1	75	101 31 108 075	Oil return valve at	1
18	101 31 108 018	Ball	1	76	101 31 108 076	Oil hydraulic cylinder	1
19	101 31 108 019	Valve Rod	1	77	101 31 108 077	Pressure relief valve three	1
20	101 31 108 020	R.L Lever	1	78	101 31 108 078	The pressure relief spring	1
21	101 31 108 021	Screw	2	79	101 31 108 079	Pressure relief valve two	1
22	101 31 108 022	Throttle Grip	1	80	101 31 108 080	Pressure relief valve	1
23	101 31 108 023	Pin	1	81	101 31 108 081	Jam	1
24	101 31 108 024	Throttle GripA	1	82	101 31 108 082	Hydraulic shaft needle	2
25	101 31 108 025	Back Casing	1	83	101 31 108 083	Hydraulic roller spring	4
26	101 31 108 026	O-Ring	1	84	101 31 108 084	Drive Blade	2
27	101 31 108 027	Washer	1	85	101 31 108 085	Pin	4
28	101 31 108 028	piston	1	86	101 31 108 086	Blade Spring	2
29	101 31 108 029	Spring	1	87	101 31 108 087	Main Shaft-D	1
30	101 31 108 030	Ball	1	88	101 31 108 088	Pin	1
31	101 31 108 031	Washer	1	89	101 31 108 089	Spring	1
32	101 31 108 032	O-Ring	1	90	101 31 108 090	Spring	1
33	101 31 108 033	Equilibrate the switch	1	91	101 31 108 091	Ball	1
34	101 31 108 034	O-Ring	1	92	101 31 108 092	O-Ring	1
35	101 31 108 035	The negative plate	1	93	101 31 108 093	Control core	1
36	101 31 108 036	The positive plate	1	94	101 31 108 094	Pin	1
37	101 31 108 037	Rivet	4	95	101 31 108 095	Adjust Screw	1
38	101 31 108 038	After the rings	1	96	101 31 108 096	O-Ring	1
39	101 31 108 039	Pin	2	97	101 31 108 097	Spacer sleeve	1
40	101 31 108 040	Screw	1	98	101 31 108 098	Liner Plate	1
41	101 31 108 041	O-Ring	1	99	101 31 108 099	Pin	2
42	101 31 108 042	screw cap	1	100	101 31 108 100	O-Ring	1
43	101 31 108 043	Suspension loop	1	101	101 31 108 101	Oil Screw O-Ring	1
44	101 31 108 044	Screw	1	102	101 31 108 102	Oil Screw	1
45	101 31 108 045	Pistol Housing	1	103	101 31 108 103	XO-Ring	1
46	101 31 108 046	Washer	1	104	101 31 108 104	XO-Washer	1
47	101 31 108 047	Check plate	1	105	101 31 108 105	Washer	1
48	101 31 108 048	O-Ring	1	106	101 31 108 106	Snap	1
49	101 31 108 049	O-Ring	2	107	101 31 108 107	O-Ring	1
50	101 31 108 050	Bearing	1	108	101 31 108 108	Linet Casing	1
51	101 31 108 051	Front plate	1	109	101 31 108 109	Washer	1
52	101 31 108 052	Rubber plug	9	110	101 31 108 110	Bearing	1
53	101 31 108 053	Rotor Blade	9	111	101 31 108 111	Front Casing	1
54	101 31 108 054	Rotor	1	112	101 31 108 112	Thread jacket	1
55	101 31 108 055	Pin	2	113	101 31 108 113	Handle	1
56	101 31 108 056	Cylinder	1	114	101 31 108 114	Screw	1
57	101 31 108 057	Rear plate	1	115	101 31 108 115	Thread jacket	3
58	101 31 108 058	Pin	1	116	101 31 108 116	Screw	3