


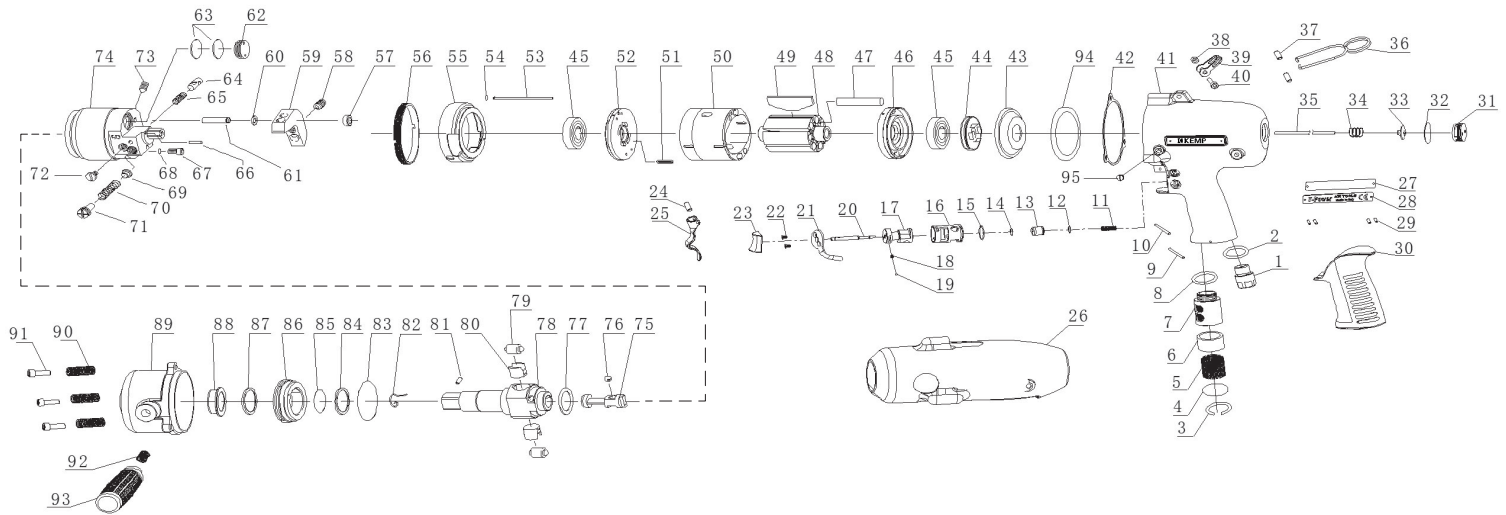

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
1	101 31 109 001	Connect set fast-19NPT	1	49	101 31 109 049	Rotor Blade	9
2	101 31 109 002	O-Ring	1	50	101 31 109 050	Cylinder	1
3	101 31 109 003	Snap	1	51	101 31 109 051	Key	1
4	101 31 109 004	Exhaust back cover	1	52	101 31 109 052	Rear plate	1
5	101 31 109 005	Exhaust nets	1	53	101 31 109 053	Pin	1
6	101 31 109 006	muffler	1	54	101 31 109 054	O-Ring	1
7	101 31 109 007	Exhaust Block set	1	55	101 31 109 055	Spacer	1
8	101 31 109 008	O-Ring	1	56	101 31 109 056	Connexion sets	1
9	101 31 109 009	Pin	1	57	101 31 109 057	Lock ring	1
10	101 31 109 010	Pin	1	58	101 31 109 058	Adjustment screw	1
11	101 31 109 011	Spring	1	59	101 31 109 059	Inertia body	1
12	101 31 109 012	O-Ring	1	60	101 31 109 060	Washer	1
13	101 31 109 013	Valve cap of the switch	1	61	101 31 109 061	Pin	1
14	101 31 109 014	O-Ring	1	62	101 31 109 062	Cover	1
15	101 31 109 015	O-Ring	1	63	101 31 109 063	Diaphragm	1
16	101 31 109 016	Lever Bushing	1	64	101 31 109 064	Stop pin	1
17	101 31 109 017	Reverse Valve	1	65	101 31 109 065	Spring	1
18	101 31 109 018	Spring	1	66	101 31 109 066	Pin	1
19	101 31 109 019	Ball	1	67	101 31 109 067	Oil Screw	1
20	101 31 109 020	Valve Rod	1	68	101 31 109 068	O-Ring	1
21	101 31 109 021	R.L Lever	1	69	101 31 109 069	Spring guide	1
22	101 31 109 022	Screw	2	70	101 31 109 070	Spring	1
23	101 31 109 023	Throttle Grip	1	71	101 31 109 071	Adjust Screw	1
24	101 31 109 024	Pin	1	72	101 31 109 072	Screw	1
25	101 31 109 025	Throttle GripA	1	73	101 31 109 073	Screw	1
26	101 31 109 026	A gun shaped body	1	74	101 31 109 074	Oil hydraulic cylinder	2
27	101 31 109 027	The negative plate	1	75	101 31 109 075	Cam	1
28	101 31 109 028	The positive plate	1	76	101 31 109 076	Ball	1
29	101 31 109 029	Rivet	4	77	101 31 109 077	Washer	1
30	101 31 109 030	Rubber Grip	1	78	101 31 109 078	Main Shaft-D	1
31	101 31 109 031	Back Casing	1	79	101 31 109 079	Roller	1
32	101 31 109 032	O-Ring	1	80	101 31 109 080	piston	1
33	101 31 109 033	Valve	1	81	101 31 109 081	Pin	1
34	101 31 109 034	Spring	1	82	101 31 109 082	Spring	1
35	101 31 109 035	Transmission Plate piston pole	1	83	101 31 109 083	O-Ring	1
36	101 31 109 036	After the rings	1	84	101 31 109 084	XO-Ring	1
37	101 31 109 037	Ring Sheath	2	85	101 31 109 085	XO-Washer	1
38	101 31 109 038	screw cap	1	86	101 31 109 086	Pressure plate	1
39	101 31 109 039	Suspension loop	1	87	101 31 109 087	Washer	1
40	101 31 109 040	Screw	1	88	101 31 109 088	Bushing	1
41	101 31 109 041	Pistol Housing	1	89	101 31 109 089	Front Casing	1
42	101 31 109 042	Washer	1	90	101 31 109 090	Thread jacket	3
43	101 31 109 043	Inlet washer	1	91	101 31 109 091	Screw	3
44	101 31 109 044	Check plate	1	92	101 31 109 092	Thread jacket	1
45	101 31 109 045	Bearing	1	93	101 31 109 093	Handle	1
46	101 31 109 046	Front plate	1	94	101 31 109 094	O-Ring	1
47	101 31 109 047	Rubber plug	9	95	101 31 109 095	Torque screw cap	1
48	101 31 109 048	Rotor	1				