


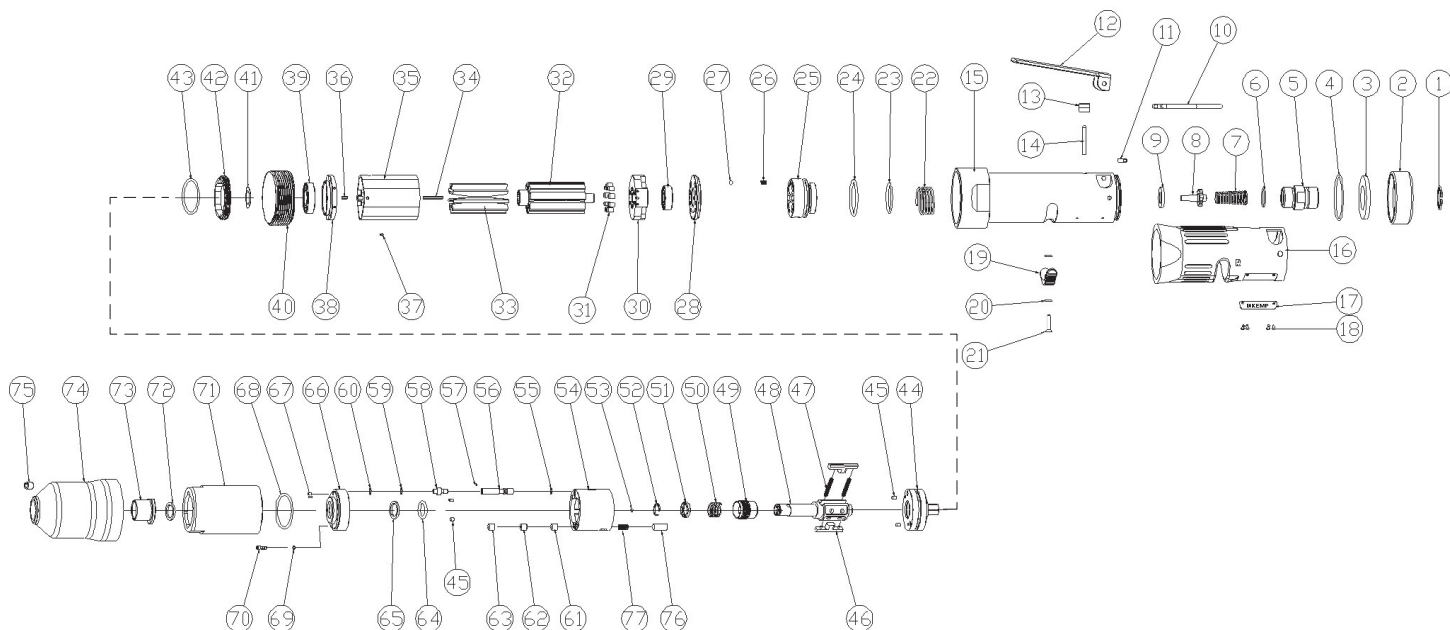

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
1	101 31 121 001	Snap	1	40	101 31 121 040	Connexion sets	1
2	101 31 121 002	Exhaust Block set	1	41	101 31 121 041	Driving seat gasket	1
3	101 31 121 003	muffler	1	42	101 31 121 042	Pressure plate	1
4	101 31 121 004	O-Ring	1	43	101 31 121 043	O-Ring	1
5	101 31 121 005	Connect set fast-19NPT	1	44	101 31 121 044	Transmission Plate	1
6	101 31 121 006	O-Ring	1	45	101 31 121 045	Pin	4
7	101 31 121 007	Spring	1	46	101 31 121 046	Drive Blade	2
8	101 31 121 008	Air inlet Valve	1	47	101 31 121 047	Blade Spring	2
9	101 31 121 009	Washer	1	48	101 31 121 048	Main Shaft-H	1
10	101 31 121 010	After the rings	1	49	101 31 121 049	Sleeve	1
11	101 31 121 011	Pin	1	50	101 31 121 050	spring	1
12	101 31 121 012	Handle	1	51	101 31 121 051	Washer	1
13	101 31 121 013	Switch place	1	52	101 31 121 052	Snap	1
14	101 31 121 014	Valve axle of the switch	1	53	101 31 121 053	Ball	1
15	101 31 121 015	Straight Housing	1	54	101 31 121 054	Oil hydraulic cylinder	1
16	101 31 121 016	Rubber Grip	1	55	101 31 121 055	O-Ring	1
17	101 31 121 017	The positive plate	1	56	101 31 121 056	Control core	1
18	101 31 121 018	Rivet	4	57	101 31 121 057	Pin	1
19	101 31 121 019	R.L switch	1	58	101 31 121 058	Adjust Screw	1
20	101 31 121 020	Washer	1	59	101 31 121 059	O-Ring	1
21	101 31 121 021	Screw	1	60	101 31 121 060	Spacer sleeve	1
22	101 31 121 022	Spring	1	61	101 31 121 061	Pressure relief valve two	1
23	101 31 121 023	O-Ring	1	62	101 31 121 062	Pressure relief valve	1
24	101 31 121 024	O-Ring	1	63	101 31 121 063	Jam	1
25	101 31 121 025	Equilibrate the switch	1	64	101 31 121 064	XO-Ring	1
26	101 31 121 026	Spring	1	65	101 31 121 065	XO-Washer	1
27	101 31 121 027	Ball	1	66	101 31 121 066	Liner Plate	1
28	101 31 121 028	Wind direction plate	1	67	101 31 121 067	Pin	1
29	101 31 121 029	Bearing	1	68	101 31 121 068	O-Ring	1
30	101 31 121 030	Front plate	1	69	101 31 121 069	O-Ring	1
31	101 31 121 031	Rubber plug	9	70	101 31 121 070	Oil Screw	1
32	101 31 121 032	Rotor	1	71	101 31 121 071	Linet Casing	1
33	101 31 121 033	Rotor Blade	9	72	101 31 121 072	Washer	1
34	101 31 121 034	Pin	1	73	101 31 121 073	Bushing	1
35	101 31 121 035	Cylinder	1	74	101 31 121 074	Front Casing	1
36	101 31 121 036	Pin	1	75	101 31 121 075	Screw	1
37	101 31 121 037	Pin	1	76	101 31 121 076	The pressure relief spring	1
38	101 31 121 038	Rear plate	1	77	101 31 121 077	Pressure relief valve three	1
39	101 31 121 039	Bearing	1				