


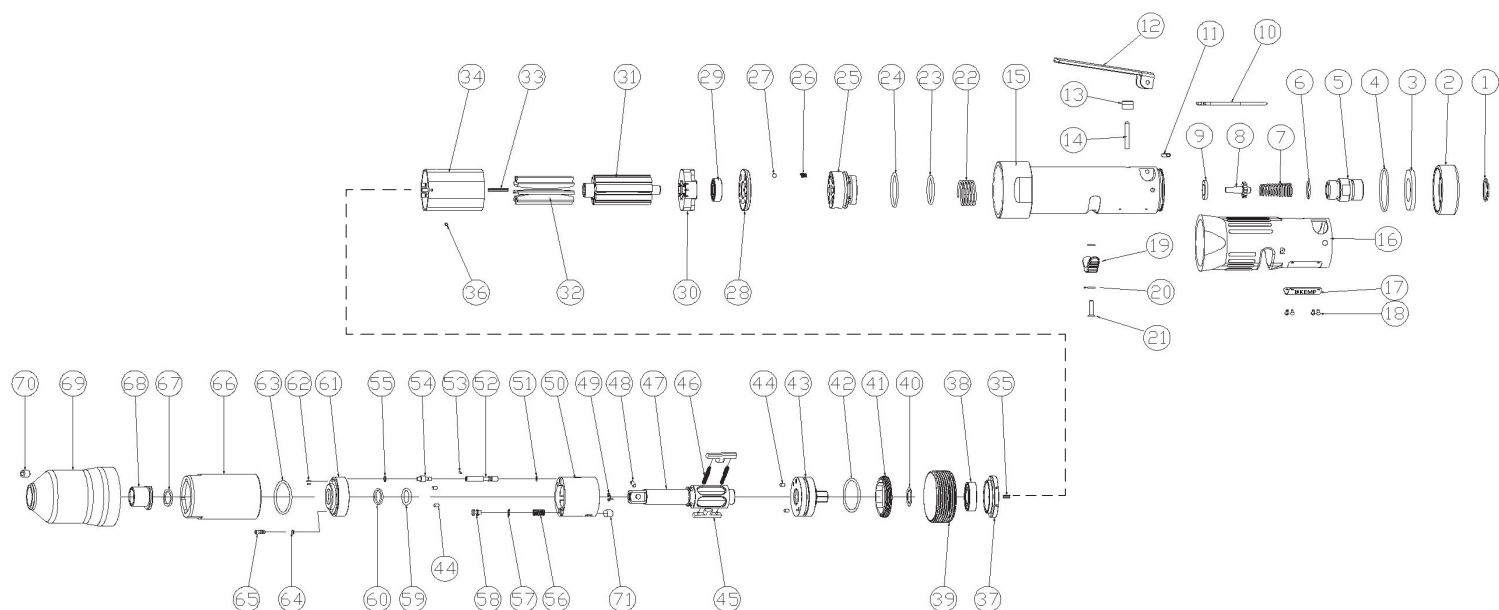

NO.	PART NO.	DESCRIPTION	Qty	NO.	PART NO.	DESCRIPTION	Qty
1	101 31 114 001	Snap	1	37	101 31 114 037	Rear plate	1
2	101 31 114 002	Exhaust Block set	1	38	101 31 114 038	Bearing	1
3	101 31 114 003	muffler	1	39	101 31 114 039	Connexion sets	1
4	101 31 114 004	O-Ring	1	40	101 31 114 040	Driving seat gasket	1
5	101 31 114 005	Connect set fast-19NPT	1	41	101 31 114 041	Pressure plate	1
6	101 31 114 006	O-Ring	1	42	101 31 114 042	O-Ring	1
7	101 31 114 007	Spring	1	43	101 31 114 043	Transmission Plate	1
8	101 31 114 008	Air inlet Valve	1	44	101 31 114 044	Pin	4
9	101 31 114 009	Washer	1	45	101 31 114 045	Drive Blade	2
10	101 31 114 010	After the rings	1	46	101 31 114 046	Blade Spring	2
11	101 31 114 011	Pin	1	47	101 31 114 047	Main Shaft-D	1
12	101 31 114 012	Handle	1	48	101 31 114 048	Pin	1
13	101 31 114 013	Switch place	1	49	101 31 114 049	Spring	1
14	101 31 114 014	Valve axle of the switch	1	50	101 31 114 050	Oil hydraulic cylinder	1
15	101 31 114 015	Straight Housing	1	51	101 31 114 051	O-Ring	1
16	101 31 114 016	Rubber Grip	1	52	101 31 114 052	Control core	1
17	101 31 114 017	The positive plate	1	53	101 31 114 053	Pin	1
18	101 31 114 018	Rivet	4	54	101 31 114 054	Adjust Screw	1
19	101 31 114 019	R.L switch	1	55	101 31 114 055	O-Ring	1
20	101 31 114 020	Washer	1	56	101 31 114 056	Temperature control valve spring	1
21	101 31 114 021	Screw	1	57	101 31 114 057	O-Ring	1
22	101 31 114 022	Spring	1	58	101 31 114 058	Temperature control valve	1
23	101 31 114 023	O-Ring	1	59	101 31 114 059	XO-Ring	1
24	101 31 114 024	O-Ring	1	60	101 31 114 060	XO-Washer	1
25	101 31 114 025	Equilibrate the switch	1	61	101 31 114 061	Liner Plate	1
26	101 31 114 026	Spring	1	62	101 31 114 062	Pin	2
27	101 31 114 027	Ball	1	63	101 31 114 063	O-Ring	1
28	101 31 114 028	Wind direction plate	1	64	101 31 114 064	O-Ring	1
29	101 31 114 029	Bearing	1	65	101 31 114 065	Oil Screw	1
30	101 31 114 030	Front plate	1	66	101 31 114 066	Linet Casing	1
31	101 31 114 031	Rotor	1	67	101 31 114 067	Washer	1
32	101 31 114 032	Rotor Blade	9	68	101 31 114 068	Bushing	1
33	101 31 114 033	Pin	1	69	101 31 114 069	Front Casing	1
34	101 31 114 034	Cylinder	1	70	101 31 114 070	Screw	1
35	101 31 114 035	Pin	1	71	101 31 114 071	Washer	1
36	101 31 114 036	Pin	1				