## UltraLite Studio Kiln ©

## **240V** Temperature control instructions:

**Using the Temperature Control**: Cover the kiln and preheat by setting the controller to 3rd arrow for 50 minutes then set the slide to the desired preset temperatures, when raising temperature wait 15 minutes for the new temperature setting to be reached.

- 0 indicates off position (Red light indicates unit is plugged in)
- 1st. Arrow to Burnout Cork Clay = 440C (No need to preheat)
- 2cd. Arrow to Fire Metal Clay = 810C (Fire for 35 Minutes)
- 2.5 Keum-Boo (Starting Point)
- 3rd. Arrow to Enameling = 850C (Full Temperature)

Using the temperature control will prolong your element life by operating the Kiln at reduced temperatures.

## **UltraLite Studio Kiln ©**

## **240V Temperature control instructions:**

**Using the Temperature Control**: Cover the kiln and preheat by setting the controller to 3rd arrow for 50 minutes then set the slide to the desired preset temperatures, when raising temperature wait 15 minutes for the new temperature setting to be reached.

- 0 indicates off position (Red light indicates unit is plugged in)
- 1st. Arrow to Burnout Cork Clay = 440C (No need to preheat)
- 2cd. Arrow to Fire Metal Clay = 810C (Fire for 35 Minutes)
- 2.5 Keum-Boo (Starting Point)
- 3rd. Arrow to Enameling = 850C (Full Temperature)

Using the temperature control will prolong your element life by operating the Kiln at reduced temperatures.