


SHIFTING YOUR IMMOBILE VEHICLE OUT OF PARK (P) - 10-SPEED AUTOMATIC TRANSMISSION

- **WARNING:** When doing this procedure, you need to take your vehicle out of park (P) which means your vehicle can roll freely. To avoid unwanted vehicle movement, apply the parking brake prior to doing this procedure. Use wheels chocks if appropriate.
- **WARNING:** If the parking brake is fully released, but the brake warning lamp remains illuminated, the brakes may not be working properly. Have your vehicle checked as soon as possible.
- **WARNING:** Do not drive your vehicle until you verify that the stoplamps are working.

Use this procedure to shift your vehicle out of park (P) in the event of an electrical malfunction or emergency.


Shifting Your Vehicle Out of Park

1. Apply the parking brake.

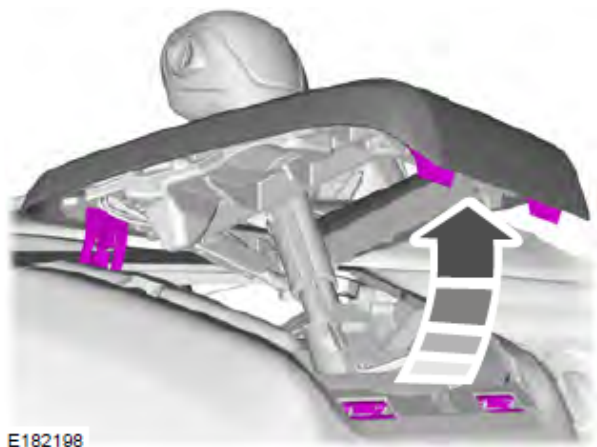

E182198

2. Remove the selector cover using using a plastic wedge or pry tool.
3. Sit in the drivers seat.
4. Press and hold the brake pedal.

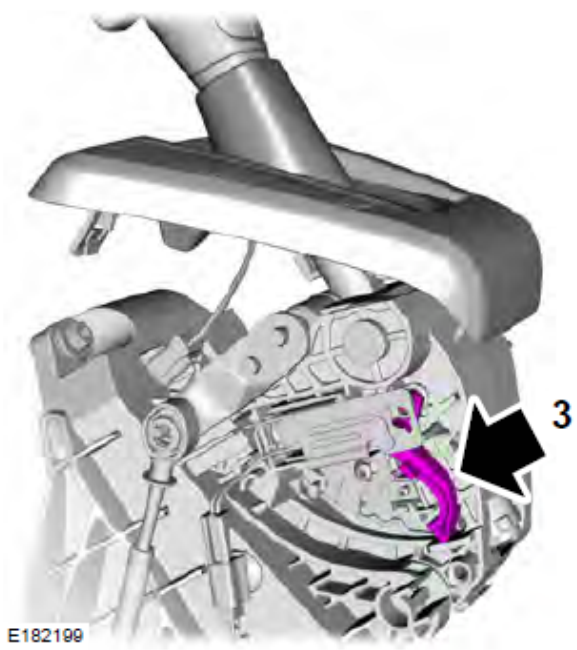

E182199

5. Locate the selector override lever.



E174827

6. Push the selector override lever toward the rear of your vehicle and hold it there.
7. Shift into neutral (N).
8. Release the selector override lever.
9. Install the selector cover.
10. Release the parking brake.
11. Release the brake pedal.

Note: Your vehicle is free to roll.

Returning Your Vehicle to Normal Mode

1. Press the brake pedal.
2. Shift into park (P).