

Towing Your Vehicle

TOWING YOUR VEHICLE PRECAUTIONS

Use the following guidelines when towing your vehicle. Failure to follow this instruction could result in vehicle damage not covered by the vehicle warranty.

Note: Make sure you properly secure your vehicle to the tow vehicle.

Note: If you are unsure of the vehicle's configuration, contact an authorized dealer.

EMERGENCY TOWING - BATTERY ELECTRIC VEHICLE

If your vehicle becomes inoperable without access to wheel dollies or a vehicle transport trailer, it can be flat-towed with all wheels on the ground, regardless of the drivetrain, under the following conditions:

- Your vehicle is facing forward for towing in a forward direction.
- You switch **Emergency Tow** on.
- Maximum speed is 30 mph (50 km/h).
- Maximum distance is 50 mi (80 km).

Switching Emergency Tow On

1. Properly secure your vehicle to the tow vehicle.
2. Switch your vehicle on to accessory mode. See **Starting and Powering Off** (page 180).
3. Apply the parking brake.
4. Using the instrument cluster display controls on the steering wheel, select **Settings**.
5. Select **Vehicle Settings**.
6. Select **Emergency Tow**.
7. Press and hold the **OK** button until a confirmation message appears in the instrument cluster display.

8. Press and hold the brake pedal.
9. Shift into neutral (N).

Note: A confirmation message appears in the instrument cluster display.

10. Release the parking brake.
11. Switch your vehicle off.

Switching Emergency Tow Off

1. Switch your vehicle on.
2. Press and hold the brake pedal.
3. Shift into park (P). A confirmation message appears in the instrument cluster display and the park (P) position illuminates on the transmission selector.