



1. Follow the blue and purple wires from the Agility control module to under the dash.
2. You will find them plugged into the Orange wires at the large grey plug and harness. To bypass the fueling cap unplug the blue and purple wires from the Orange and join together the Orange ( a + b above) . Plugs only go one direction, can't plug together incorrectly.