

F59 Air Box removal to
replace air filter

Summary of steps

- Remove plastic nose
- Unscrew clamp connecting flex hose to air box
- Remove hose
- Unplug sensor
- Remove wire loom connector
- Lift box out of back rubber holders
- Push air box back to disengage front holders
- Turn counter-clockwise to remove

Remove plastic nose by moving side to side and pulling at the same time

Plastic nose installed



Plastic nose removed



Unscrew clamp connecting flex hose to air box




Remove hose



Unplug sensor and remove wire loom
connector



Lift box out of back rubber holders

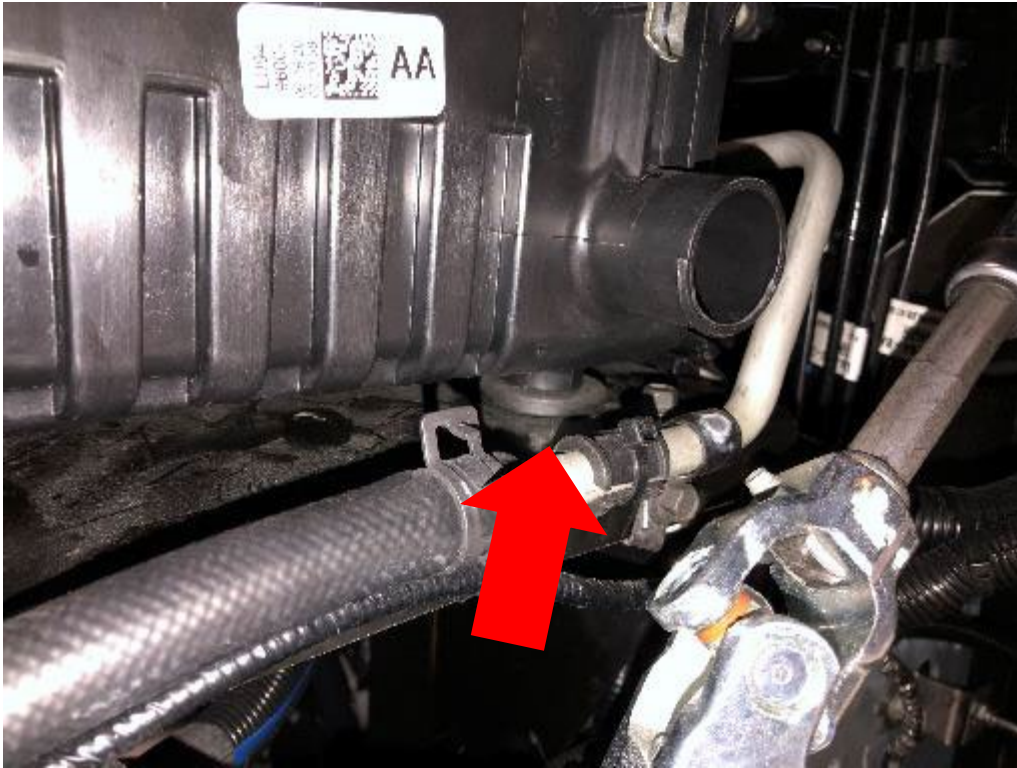

Push air box back to disengage front holders



Turn counter-clockwise to remove



Reverse steps to reinstall