

Network Message	Originating Module	Network Type	Receiving Module(s)
Driver door ajar status	<u>GWM</u>	<u>MS-CAN</u>	<ul style="list-style-type: none"> <li>• <u>PRB</u></li> </ul>

In this example the path for relaying gear lever position information from the PCM to the DDM is being used for a comparative functional check. The diagnostic scan tool display of the gear lever position information in the DDM was used to verify the functionality of the HS-CAN1 to MS-CAN path.

Network Message	Originating Module	Network Type	Receiving Module(s)
Gear lever position	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>BCM</u></li> <li>• <u>PAM</u></li> <li>• <u>GWM</u></li> </ul>
Gear lever position	<u>GWM</u>	<u>MS-CAN</u>	<ul style="list-style-type: none"> <li>• <u>DDM</u></li> <li>• <u>PDM</u></li> <li>• <u>DSM</u></li> <li>• <u>FCIM</u></li> <li>• <u>PRB</u></li> <li>• <u>SCMG</u></li> <li>• <u>SCMH</u></li> <li>• <u>SODL</u></li> <li>• <u>SODR</u></li> </ul>

### Communication Message Chart

Network Message	Originating Module	Network Type	Receiving Module(s)
<u>A/C clutch status</u>	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GFM2</u> (Upfitter Interface Module [UIM])</li> <li>• <u>GWM</u></li> </ul>
<u>A/C clutch status</u>	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
<u>A/C clutch status</u>	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
<u>A/C clutch status</u>	<u>GWM</u>	<u>MS-CAN</u>	<ul style="list-style-type: none"> <li>• <u>HVAC</u> module</li> </ul>
<u>ABS active</u>	<u>ABS</u> module	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
<u>ABS</u> active	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
<u>ABS</u> active	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> <li>• <u>TCM</u></li> </ul>
<u>ABS</u> warning indicator request	<u>ABS</u> module	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
<u>ABS</u> warning indicator request	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
<u>ABS</u> warning indicator request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
<u>ABS</u> warning indicator request	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Accelerator pedal position	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>TCM</u></li> <li>• <u>GWM</u></li> </ul>
Accelerator pedal position	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS</u> module</li> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> <li>• <u>IPMA</u></li> </ul>
Accelerator pedal position	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Accelerator pedal position	<u>GWM</u>	<u>MS-CAN</u>	<ul style="list-style-type: none"> <li>• <u>HVAC</u> module</li> </ul>
Adaptive cruise control brake deceleration request	<u>IPMA</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS</u> module</li> </ul>
Adaptive cruise control brake deceleration request	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS</u> module</li> </ul>
Adaptive cruise control commands	<u>SCCM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Adaptive cruise control commands	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> </ul>
Adaptive cruise control distance sensitivity	<u>IPMA</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS</u> module</li> </ul>
Adaptive cruise control distance sensitivity	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS</u> module</li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
Adaptive cruise control enabled	<u>IPC</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Adaptive cruise control enabled	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> <li>• <u>IPMA</u></li> </ul>
Adaptive cruise control gap distance display	<u>IPMA</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Adaptive cruise control gap distance display	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Adaptive cruise control gap distance display	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Adaptive cruise control gap select	<u>SCCM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Adaptive cruise control gap select	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> </ul>
Adaptive cruise control stop mode	<u>IPMA</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS</u> module</li> <li>• <u>GWM</u></li> </ul>
Adaptive cruise control stop mode	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS</u> module</li> <li>• <u>GWM</u></li> </ul>
Adaptive cruise control stop mode	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Adaptive cruise control stop mode request	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Adaptive cruise control stop mode request	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS</u> module</li> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> <li>• <u>IPMA</u></li> </ul>
Adaptive cruise control warning request	<u>IPMA</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Adaptive cruise control warning request	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Adaptive cruise control warning request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
Adaptive cruise control warning request	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Ambient air temperature	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>BCM</u></li> <li>• <u>GFM2</u> (Upfitter Interface Module [UIM])</li> <li>• <u>TCM</u></li> <li>• <u>GWM</u></li> </ul>
Ambient air temperature	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS</u> module</li> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> <li>• <u>SCCM</u></li> </ul>
Ambient air temperature	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Ambient air temperature	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Ambient air temperature	<u>GWM</u>	<u>MS-CAN</u>	<ul style="list-style-type: none"> <li>• <u>HVAC</u> module</li> </ul>
Battery low charge rate request	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> </ul>
Battery low state of charge	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Battery low state of charge	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> <li>• <u>ACM</u></li> </ul>
Battery low state of charge	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Battery low state of charge	<u>GWM</u>	<u>MS-CAN</u>	<ul style="list-style-type: none"> <li>• <u>HVAC</u> module</li> </ul>
Belt-Minder™ audio mute	<u>IPC</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>ACM</u></li> </ul>
Body service required request	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Body service required request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Brake fluid level low message request	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Brake fluid level low message request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
Brake On/Off switch	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Brake On/Off switch	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS</u> module</li> </ul>
Brake pedal applied	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>TCM</u></li> <li>• <u>GWM</u></li> </ul>
Brake pedal applied	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS</u> module</li> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> <li>• <u>IPMA</u></li> </ul>
Brake pedal applied	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Brake transmission shift lock status	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> </ul>
Brake (red) warning indicator request	<u>ABS</u> module	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Brake (red) warning indicator request	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Brake (red) warning indicator request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Camera defog request	<u>IPMA</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Camera defog request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Cell phone chirp request	<u>TCU</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Cell phone chirp request	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>BCM</u></li> </ul>
Cell phone lock request	<u>TCU</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Cell phone lock request	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>BCM</u></li> </ul>
Charging system indication request	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Charging system indication request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
Check fuel fill inlet message request	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Check fuel fill inlet message request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Chime source	<u>IPC</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>ACM</u></li> </ul>
Collision avoidance and driver support camera blocked warning	<u>IPMA</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Collision avoidance and driver support camera blocked warning	<u>GFM (Ancillary Translator Module [ATM])</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Collision avoidance and driver support camera blocked warning	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Collision avoidance and driver support camera status	<u>IPMA</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Collision avoidance and driver support camera status	<u>GFM (Ancillary Translator Module [ATM])</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Collision avoidance and driver support camera status	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Collision avoidance and driver support radar blocked warning	<u>IPMA</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Collision avoidance and driver support radar blocked warning	<u>GFM (Ancillary Translator Module [ATM])</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Collision avoidance and driver support radar blocked warning	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Collision avoidance chime request	<u>IPMA</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Collision avoidance chime request	<u>GFM (Ancillary Translator Module [ATM])</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Collision avoidance chime request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Collision mitigation brake precharge request	<u>IPMA</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS module</u></li> </ul>
Collision mitigation brake precharge request	<u>GFM (Ancillary Translator Module [ATM])</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS module</u></li> </ul>
Collision mitigation brake precharge request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
Collision mitigation by braking denied	<u>ABS</u> module	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Collision mitigation by braking denied	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Collision mitigation by braking denied	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> </ul>
Collision mitigation by braking event status	<u>IPMA</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Collision mitigation by braking event status	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Collision mitigation by braking event status	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Collision mitigation by braking request	<u>IPMA</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Collision mitigation by braking request	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Collision mitigation by braking request	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> </ul>
Cruise control mode	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GFM2</u> (Upfitter Interface Module [UIM])</li> <li>• <u>TCM</u></li> <li>• <u>GWM</u></li> </ul>
Cruise control mode	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Cruise control override	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>TCM</u></li> <li>• <u>GWM</u></li> </ul>
Cruise control override	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Cruise control override	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS</u> module</li> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> <li>• <u>IPMA</u></li> </ul>
Cruise control service required	<u>IPMA</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Cruise control service required	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
Cruise control service required	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Cruise control set speed request	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Cruise control set speed request	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> <li>• <u>IPMA</u></li> </ul>
Cruise control set speed request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Cruise control status	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>TCM</u></li> <li>• <u>GWM</u></li> </ul>
Cruise control status	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Cruise control status	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS</u> module</li> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> <li>• <u>IPMA</u></li> </ul>
Cruise control status	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Cruise control switch commands	<u>SCCM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Cruise control switch commands	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> </ul>
Day/night status	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Day/night status	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>ACM</u></li> <li>• <u>IPC</u></li> </ul>
Diesel particulate filter message display	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Diesel particulate filter message display	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> </ul>
Diesel particulate filter message display	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
Diesel particulate manual regen request	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Diesel particulate manual regen request	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> </ul>
Display speed offset data	<u>IPC</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Display speed offset data	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> </ul>
Display speed offset data	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> </ul>
Driver door ajar status	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> <li>• <u>GWM</u></li> </ul>
Driver door ajar status	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS</u> module</li> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> <li>• <u>IPMA</u></li> </ul>
Driver door ajar status	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Driver door ajar status	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Emergency call mute status	<u>TCU</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Emergency call mute status	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>ACM</u></li> </ul>
Engine coolant temperature data	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>BCM</u></li> <li>• <u>GFM2</u> (Upfitter Interface Module [UIM])</li> <li>• <u>TCM</u></li> <li>• <u>GWM</u></li> </ul>
Engine coolant temperature data	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> </ul>
Engine coolant temperature data	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Engine coolant temperature data	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
Engine disable status	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>BCM</u></li> <li>• <u>GWM</u></li> </ul>
Engine disable status	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS module</u></li> </ul>
Engine oil life	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Engine oil life	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Engine oil life	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Engine oil life data reset	<u>IPC</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Engine oil life data reset	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> </ul>
Engine overheat indication request	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Engine overheat indication request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Engine overheat indication request	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Engine rpm data	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>BCM</u></li> <li>• <u>GFM2</u> (Upfitter Interface Module [UIM])</li> <li>• <u>TCM</u></li> <li>• <u>GWM</u></li> </ul>
Engine rpm data	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS module</u></li> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> </ul>
Engine rpm data	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Engine rpm data	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Engine service required request	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Engine service required request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
Engine service required request	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
English/metric mode	<u>IPC</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>ACM</u></li> <li>• <u>GWM</u></li> </ul>
English/metric mode	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> </ul>
Exterior ambient air temperature data	<u>PCM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Exterior ambient air temperature data	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Forward collision chime request	<u>IPMA</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Forward collision chime request	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Forward collision chime request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Forward collision warning message request	<u>IPMA</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Forward collision warning message request	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Forward collision warning message request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Front wiper status	<u>SCCM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Front wiper status	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>BCM</u></li> </ul>
Front wiper status	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Fuel flow level volume display	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Fuel flow level volume display	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Fuel pump power status	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> </ul>
Gear lever position (diesel)	<u>TCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
Gear lever position	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>BCM</u></li> <li>• <u>PCM</u></li> <li>• <u>GWM</u></li> </ul>
Gear lever position	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS module</u></li> <li>• <u>GFM (Ancillary Translator Module [ATM])</u></li> <li>• <u>IPMA</u></li> <li>• <u>SCCM</u></li> </ul>
Gear lever position	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Gear lever position	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Headlamp flash-to-pass status	<u>SCCM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Headlamp flash-to-pass status	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>BCM</u></li> </ul>
Headlamp low beam out	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Headlamp low beam out	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Headlamp switch status	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Headlamp switch status	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Headlamp switch status	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> </ul>
Headlamp switch status	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
High beam status	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
High beam status	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Hill start assist request	<u>IPC</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Hill start assist request	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS module</u></li> </ul>
Hill start assist status	<u>ABS module</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
Hill start assist status	GFM (Ancillary Translator Module [ATM])	HS-CAN2	<ul style="list-style-type: none"> <li>IPMA</li> <li>GWM</li> </ul>
Hill start assist status	GWM	HS-CAN1	<ul style="list-style-type: none"> <li>PCM</li> </ul>
Hill start assist status	GWM	HS-CAN3	<ul style="list-style-type: none"> <li>IPC</li> </ul>
Hill start assist status	GWM	HS-CAN4	<ul style="list-style-type: none"> <li>TCU</li> </ul>
HVAC A/C request	HVAC module	MS-CAN	<ul style="list-style-type: none"> <li>GWM</li> </ul>
HVAC A/C request	GWM	HS-CAN1	<ul style="list-style-type: none"> <li>PCM</li> <li>GFM2 (Upfitter Interface Module [UIM])</li> </ul>
HVAC evaporator temperature request	HVAC module	MS-CAN	<ul style="list-style-type: none"> <li>GWM</li> </ul>
HVAC evaporator temperature request	GWM	HS-CAN1	<ul style="list-style-type: none"> <li>PCM</li> </ul>
Ignition status	BCM	HS-CAN1	<ul style="list-style-type: none"> <li>GFM2 (Upfitter Interface Module [UIM])</li> <li>PCM</li> <li>TCM</li> <li>GWM</li> </ul>
Ignition status	GWM	HS-CAN2	<ul style="list-style-type: none"> <li>ABS module</li> <li>GFM (Ancillary Translator Module [ATM])</li> <li>IPMA</li> <li>SCCM</li> </ul>
Ignition status	GWM	HS-CAN3	<ul style="list-style-type: none"> <li>ACM</li> <li>IPC</li> </ul>
Ignition status	GWM	HS-CAN4	<ul style="list-style-type: none"> <li>TCU</li> </ul>
Ignition status	GWM	MS-CAN	<ul style="list-style-type: none"> <li>HVAC module</li> </ul>
Illumination dimming level	BCM	HS-CAN1	<ul style="list-style-type: none"> <li>GWM</li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
Illumination dimming level	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> <li>• <u>ACM</u></li> </ul>
Illumination dimming level	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Illumination dimming level	<u>GWM</u>	<u>MS-CAN</u>	<ul style="list-style-type: none"> <li>• <u>HVAC</u> module</li> </ul>
<u>IPC</u> chime request	<u>IPC</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>ACM</u></li> </ul>
Key-in-ignition status	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Key-in-ignition status	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Key-in-ignition status	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Lane departure warning chime request	<u>IPMA</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Lane departure warning chime request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Lane departure warning indicator request	<u>IPMA</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Lane departure warning indicator request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Life cycle mode	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Life cycle mode	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Message center display	<u>IPC</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Message center display	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>SCCM</u></li> </ul>
Message center display	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>BCM</u></li> </ul>
Message center display	<u>GWM</u>	<u>MS-CAN</u>	<ul style="list-style-type: none"> <li>• <u>HVAC</u> module</li> </ul>
Message center feature configuration	<u>IPC</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
Message center feature configuration	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>SCCM</u></li> </ul>
Message center feature configuration	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>BCM</u></li> </ul>
Message center feature configuration	<u>GWM</u>	<u>MS-CAN</u>	<ul style="list-style-type: none"> <li>• <u>HVAC</u> module</li> </ul>
<u>MIL</u> request	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>BCM</u></li> <li>• <u>GFM2</u> (Upfitter Interface Module [UIM])</li> <li>• <u>GWM</u></li> </ul>
<u>MIL</u> request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
<u>MIL</u> request	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Odometer count	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Odometer count	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Odometer count	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Odometer master value	<u>IPC</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Odometer master value	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS</u> module</li> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> <li>• <u>IPMA</u></li> </ul>
Odometer master value	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>BCM</u></li> <li>• <u>GFM2</u> (Upfitter Interface Module [UIM])</li> <li>• <u>PCM</u></li> <li>• <u>TCM</u></li> </ul>
Odometer trip programming data	<u>IPC</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Odometer trip programming data	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
Oil pressure warning indicator request	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GFM2</u> (Upfitter Interface Module [UIM])</li> <li>• <u>GWM</u></li> </ul>
Oil pressure warning indicator request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Oil pressure warning indicator request	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Parking brake active status	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> <li>• <u>GFM2</u> (Upfitter Interface Module [UIM])</li> <li>• <u>TCM</u></li> <li>• <u>GWM</u></li> </ul>
Parking brake active status	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS</u> module</li> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> </ul>
Parking brake active status	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>BCM</u></li> <li>• <u>PCM</u></li> </ul>
Parking brake active status	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Parking brake active status	<u>GWM</u>	<u>MS-CAN</u>	<ul style="list-style-type: none"> <li>• <u>HVAC</u> module</li> </ul>
Parking brake chime request	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Parking brake chime request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Parklamp status	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Parklamp status	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> <li>• <u>ACM</u></li> </ul>
Parklamp status	<u>GWM</u>	<u>MS-CAN</u>	<ul style="list-style-type: none"> <li>• <u>HVAC</u> module</li> </ul>
<u>PATS</u> control command	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> <li>• <u>GWM</u></li> </ul>
<u>PATS</u> control command	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
PATS start request target data	PCM	HS-CAN1	<ul style="list-style-type: none"> <li>BCM</li> <li>GWM</li> </ul>
PATS start request target data	GWM	HS-CAN4	<ul style="list-style-type: none"> <li>TCU</li> </ul>
Power pack torque status	PCM	HS-CAN1	<ul style="list-style-type: none"> <li>BCM</li> <li>GFM2 (Upfitter Interface Module [UIM])</li> <li>TCM</li> <li>GWM</li> </ul>
Power pack torque status	GWM	HS-CAN2	<ul style="list-style-type: none"> <li>ABS module</li> <li>GFM (Ancillary Translator Module [ATM])</li> <li>IPMA</li> <li>SCCM</li> </ul>
Power pack torque status	GWM	HS-CAN3	<ul style="list-style-type: none"> <li>IPC</li> </ul>
Power pack torque status	GWM	MS-CAN	<ul style="list-style-type: none"> <li>HVAC module</li> <li>RTM</li> </ul>
Powertrain cooling message request	PCM	HS-CAN1	<ul style="list-style-type: none"> <li>GWM</li> </ul>
Powertrain cooling message request	GWM	HS-CAN3	<ul style="list-style-type: none"> <li>IPC</li> </ul>
Power up chime modules	IPC	HS-CAN3	<ul style="list-style-type: none"> <li>ACM</li> </ul>
Refuel system status display	PCM	HS-CAN1	<ul style="list-style-type: none"> <li>GWM</li> </ul>
Refuel system status display	GWM	HS-CAN3	<ul style="list-style-type: none"> <li>IPC</li> </ul>
Reverse gear state	PCM	HS-CAN1	<ul style="list-style-type: none"> <li>BCM</li> <li>GWM</li> </ul>
Reverse gear state	GWM	HS-CAN2	<ul style="list-style-type: none"> <li>ABS module</li> <li>GFM (Ancillary Translator Module [ATM])</li> <li>IPMA</li> <li>SCCM</li> </ul>
Reverse gear state	GWM	HS-CAN3	<ul style="list-style-type: none"> <li>IPC</li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
<u>RKE</u> data	<u>RTM</u>	<u>MS-CAN</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
<u>RKE</u> data	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>BCM</u></li> </ul>
Stability control brake active	<u>ABS</u> module	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Stability control brake active	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Stability control brake active	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> </ul>
Stability-traction control chime request	<u>ABS</u> module	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Stability-traction control chime request	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Stability-traction control chime request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Stability-traction control disabled indicator request	<u>ABS</u> module	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Stability-traction control disabled indicator request	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Stability-traction control disabled indicator request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Stability-traction control indicator request	<u>ABS</u> module	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Stability-traction control indicator request	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Stability-traction control indicator request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Stability-traction control indicator request	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> </ul>
Starting system fault message request	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Starting system fault message request	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
Steering wheel controls data	<u>SCCM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Steering wheel controls data	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>ACM</u></li> <li>• <u>IPC</u></li> </ul>
<u>TCU</u> activation request	<u>ACM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
<u>TCU</u> activation request	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
<u>TCU</u> activation status	<u>TCU</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
<u>TCU</u> activation status	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>ACM</u></li> </ul>
Telematics factory reset	<u>TCU</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Telematics factory reset	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>ACM</u></li> </ul>
Telematics service contract status	<u>TCU</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Telematics service contract status	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>ACM</u></li> </ul>
Traction control mode	<u>ABS</u> module	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Traction control mode	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Traction control mode	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> </ul>
Traction control mode	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Traffic recognition data	<u>IPMA</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Traffic recognition data	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Transmission fault message request	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
Transmission fault message request	<u>GWM</u>	<u>HS-CAN3</u>	• <u>IPC</u>
Transmission gear display (diesel)	<u>TCM</u>	<u>HS-CAN1</u>	• <u>GWM</u>
Transmission gear display	<u>PCM</u>	<u>HS-CAN1</u>	• <u>GWM</u>
Transmission gear display	<u>GWM</u>	<u>HS-CAN3</u>	• <u>IPC</u>
Transmission gear display mode (diesel)	<u>TCM</u>	<u>HS-CAN1</u>	• <u>GWM</u>
Transmission gear display mode	<u>PCM</u>	<u>HS-CAN1</u>	• <u>GWM</u>
Transmission gear display mode	<u>GWM</u>	<u>HS-CAN3</u>	• <u>IPC</u>
Transmission not in park indicator request	<u>BCM</u>	<u>HS-CAN1</u>	• <u>GWM</u>
Transmission not in park indicator request	<u>GWM</u>	<u>HS-CAN3</u>	• <u>IPC</u>
Transmission range display (diesel)	<u>TCM</u>	<u>HS-CAN1</u>	• <u>GWM</u>
Transmission range display	<u>PCM</u>	<u>HS-CAN1</u>	• <u>GWM</u>
Transmission range display	<u>GWM</u>	<u>HS-CAN3</u>	• <u>IPC</u>
Transmission range display mode (diesel)	<u>TCM</u>	<u>HS-CAN1</u>	• <u>GWM</u>
Transmission range display mode	<u>PCM</u>	<u>HS-CAN1</u>	• <u>GWM</u>
Transmission range display mode	<u>GWM</u>	<u>HS-CAN3</u>	• <u>IPC</u>
Transmission service required	<u>PCM</u>	<u>HS-CAN1</u>	• <u>GWM</u>
Transmission service required	<u>GWM</u>	<u>HS-CAN3</u>	• <u>IPC</u>
Transmission shift indicator	<u>PCM</u>	<u>HS-CAN1</u>	• <u>GWM</u>

Network Message	Originating Module	Network Type	Receiving Module(s)
Transmission shift indicator	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Transmission shift mode display	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Transmission shift mode display	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Transport mode	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> <li>• <u>TCM</u></li> <li>• <u>GWM</u></li> </ul>
Transport mode	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS module</u></li> <li>• <u>IPMA</u></li> <li>• <u>SCCM</u></li> </ul>
Transport mode	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>ACM</u></li> <li>• <u>IPC</u></li> </ul>
Transport mode	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Transport mode	<u>GWM</u>	<u>MS-CAN</u>	<ul style="list-style-type: none"> <li>• <u>HVAC module</u></li> <li>• <u>RTM</u></li> </ul>
Turn indication status	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Turn indication status	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Turn signal switch status	<u>SCCM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Turn signal switch status	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>BCM</u></li> </ul>
Turn signal switch status	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Upfitter switch request	<u>GFM2</u> (Upfitter Interface Module [UIM])	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>BCM</u></li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
Vehicle configuration data	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>GFM2</u> (Upfitter Interface Module [UIM])</li> <li>• <u>PCM</u></li> <li>• <u>TCM</u></li> <li>• <u>GWM</u></li> </ul>
Vehicle configuration data	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS</u> module</li> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> <li>• <u>IPMA</u></li> </ul>
Vehicle configuration data	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>ACM</u></li> <li>• <u>IPC</u></li> </ul>
Vehicle configuration data	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Vehicle configuration data	<u>GWM</u>	<u>MS-CAN</u>	<ul style="list-style-type: none"> <li>• <u>HVAC</u> module</li> <li>• <u>RTM</u></li> </ul>
Vehicle lateral acceleration	<u>ABS</u> module	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Vehicle lateral acceleration	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Vehicle lateral acceleration	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> <li>• <u>TCM</u></li> </ul>
Vehicle lateral acceleration	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Vehicle longitudinal acceleration	<u>ABS</u> module	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Vehicle longitudinal acceleration	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>GWM</u></li> </ul>
Vehicle longitudinal acceleration	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> </ul>
Vehicle longitudinal acceleration	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Vehicle mode	<u>BCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> <li>• <u>GWM</u></li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
Vehicle mode	<u>GWM</u>	<u>MS-CAN</u>	<ul style="list-style-type: none"> <li>• <u>RTM</u></li> </ul>
Vehicle mode	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS</u> module</li> <li>• <u>IPMA</u></li> </ul>
Vehicle mode	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Vehicle speed	<u>PCM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>BCM</u></li> <li>• <u>GFM2</u> (Upfitter Interface Module [UIM])</li> <li>• <u>TCM</u></li> <li>• <u>GWM</u></li> </ul>
Vehicle speed	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>ACM</u></li> <li>• <u>IPC</u></li> </ul>
Vehicle speed	<u>GWM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>ABS</u> module</li> <li>• <u>GFM</u> (Ancillary Translator Module [ATM])</li> <li>• <u>IPMA</u></li> <li>• <u>SCCM</u></li> </ul>
Vehicle speed	<u>GWM</u>	<u>HS-CAN4</u>	<ul style="list-style-type: none"> <li>• <u>TCU</u></li> </ul>
Vehicle speed	<u>GWM</u>	<u>MS-CAN</u>	<ul style="list-style-type: none"> <li>• <u>HVAC</u> module</li> <li>• <u>RTM</u></li> </ul>
Vehicle yaw rate (hydraulic brakes)	<u>ABS</u> module	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Vehicle yaw rate (air brakes)	<u>GFM</u> (Ancillary Translator Module [ATM])	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Vehicle yaw rate (air brakes)	<u>RCM</u>	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> <li>• <u>GWM</u></li> </ul>
Vehicle yaw rate	<u>GWM</u>	<u>HS-CAN1</u>	<ul style="list-style-type: none"> <li>• <u>PCM</u></li> <li>• <u>TCM</u></li> </ul>
Vehicle yaw rate	<u>GWM</u>	<u>HS-CAN3</u>	<ul style="list-style-type: none"> <li>• <u>IPC</u></li> </ul>
Wheel rotation direction	<u>ABS</u> module	<u>HS-CAN2</u>	<ul style="list-style-type: none"> <li>• <u>IPMA</u></li> </ul>

Network Message	Originating Module	Network Type	Receiving Module(s)
Wheel rotation direction	GFM (Ancillary Translator Module [ATM])	HS-CAN2	<ul style="list-style-type: none"> <li>IPMA</li> </ul>
Wheel rotation direction	GWM	HS-CAN4	<ul style="list-style-type: none"> <li>TCU</li> </ul>
Wheel speed data	ABS module	HS-CAN2	<ul style="list-style-type: none"> <li>IPMA</li> <li>GWM</li> </ul>
Wheel speed data	GFM (Ancillary Translator Module [ATM])	HS-CAN2	<ul style="list-style-type: none"> <li>IPMA</li> <li>GWM</li> </ul>
Wheel speed data	GWM	HS-CAN1	<ul style="list-style-type: none"> <li>BCM</li> <li>PCM</li> <li>TCM</li> </ul>
Wheel speed data	GWM	HS-CAN4	<ul style="list-style-type: none"> <li>TCU</li> </ul>
WiFi hotspot status	TCU	HS-CAN4	<ul style="list-style-type: none"> <li>GWM</li> </ul>
WiFi hotspot status	GWM	HS-CAN3	<ul style="list-style-type: none"> <li>ACM</li> </ul>