

3)Close the door and change the password accordingly.

**Problem 2:**There is no display on the LCD

Resolution:Changing the battery

**Problem 3:**Can't change the password

Reason 1)The lock-bolt can't touch the limit switch

Resolution:Open the back door cover and revise the position of limit switch

Reason 2)The limit switch can't work or the connecting wire is broken

Resolution:Open the back door cover and changing limit switch or onnect the wire

**Problem 4:**The lock-bolt will be back automatically when closing the safe

Reason 1)The door is not totally closed .

Resolution:Close the door again

Reason 2)The lock-bolt can't touch the limit switch

Resolution:Open the back door cover and revise the position of limit switch

Reason 3)The limit switch can't work or the connecting wire is broken

Resolution:Open the back door cover and changing limit switch or connect the wire

## Care and Maintenance

 
1.Suggest to use alkaline batteries;

2.Please take out the batteries if the safe will be left un-used for a long time;

3.Please do not take apart the safe once malfunction happens.Contact the after sale service for advice.

## Tips:

Each box comes with four feet, customers can be installed according to their own needs, as shown below.

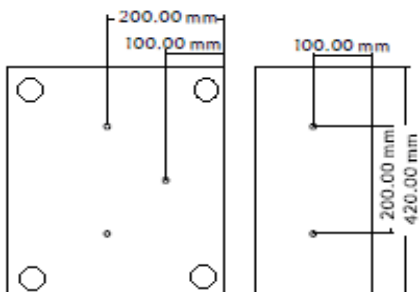


# USER'S MANUAL OF SAFE

## CONTENTS


● Install The Battery.....	1
● Lock The Safe.....	1
● Open The Safe.....	1
● Changing The Password.....	2
● Normal Troubleshooting.....	3
● Care and Maintenance.....	3
● Tips.....	3

Thank you very much for buying this product.Before using this product,please read this operation manual to ensure that you gain the maximum benefit from it.

 FD-2042F

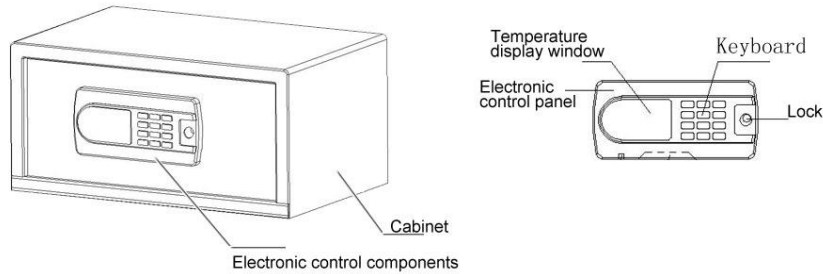

FD-2042Y

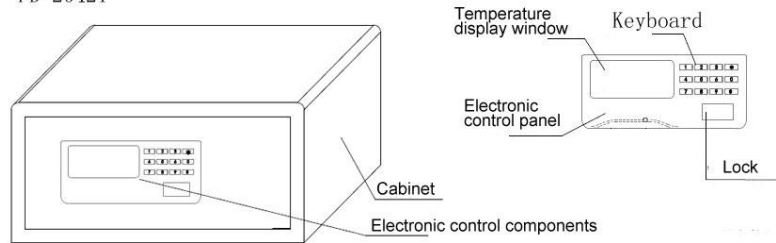 

## Install The Battery

1. Open the safe with emergency key.
2. Install 4 piece of AA size(1.5V)batteries to the battery compartment which is on the back of the door.
3. “Hello” will be displayed on the LCD display.

## Lock The Safe

Please enter 3-6 digits personal password while the door is closed,and press “#” to confirm the password “CLOSE” will be displayed on the LCD(The user can lock the safe by press “#” directly without changing the password within 5 minutes after opening the safe)

Remark: “ERROR” will be displayed if the lock-bolt is jammed please open the door again to keep sure the door is closed normally.

## Open The Safe

1.To End user(the factory standard password for end user is 1234). Enter the password on the keypad and press “#” to confirm.The LCD display will display “OPEN” and the door will be opened

automatically.(The password will not displayed on the LCD if press “\*” before pressing the password)

2.To Hotel management(the factory standard password for hotel is “000000”).Double press “\*” ,the LCD will display “SUPER”.Press the hotel management password,the LCD will display “CC—”,press “00” and “#”,the LCD will display “OPENED” and the door will open automatically.

3.Through the key .Open the cover on the lock and pressing into the key,the door will open after rotating 90 degrees.  
Remark:You can delete the password by “\*” if pressing the wrong number.

The buzzer will alarm if pressing the wrong password and LCD will display “ERROR”,the safe will be held automatically for five minutes if continuously pressing three times of wrong passwords.

## Changing The Password

1.Changing the end user’s password.Pressing new 3-6 digital numbers and “#” while the safe is opened,the safe will be locked.

2.Changing hotel management password.This need to be operated while the safe is locked.Double press “\*” ,the LCD will display “SUPER”.Press the hotel management password(the factory standard password for hotel is “000000”),the LCD will display “CC—”.Press “01” and “#”,the LCD will display “NEU”.Press new 6 digital numbers as the password,then press “#” as confirmed,the LCD will display “REPEAT”,then press again the new password and “#” as confirmed,the LCD will display “GOOD”.

## Normal Troubleshooting

**Problem 1:**forget the management password

Resolution:

- 1)Use the through key to open the safe,press the black button on the back of the door for 5 seconds.
- 2)The LCD will display “RESET”,the management password will changed into the factory standard one.