

## **INSTALLATION INSTRUCTIONS**

# For Standard Height Door and Panels Only

**Baked Enamel and Stainless Steel Partitions** HDWT-INSTR-010 Rev. B; ECN 07-1419


Page 1 of 2

## Series 500 - Floor Braced

## Inspection

A subsidiary of

The components for this project have been custom fabricated. They are guaranteed with respect to manufacture and workmanship and were inspected at the factory. Before beginning work, the units should be inspected. If damage occurred in transit, report immediately to the freight company or other agencies that may have caused the damage.

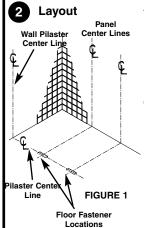

A. Review shop drawings and packing lists that accompanied this job.

**Bradley** 

- Before proceeding, confirm that backing of walls and floor is adequate to support secure mounting of the toilet compartment
- C. Establish and mark pilaster center line from back wall.
- Establish and mark panel center lines for wall brackets.
- Establish pilaster floor fastener locations from side wall according to shop drawings.
- Mark wall bracket holes using single or double ear brackets as templates.




### Wall & Floor Brackets

- A. Drill holes for wall brackets of appropriate size for fasteners supplied.
- B. Insert anchoring devices in wall.
- C. Drill Ø 3/8" holes Measurements are from the floor (1-5/8" minimum depth) in the floor and remove all dirt and debris from the holes. Insert a wedge anchor into each hole and secure with a shoe clip and hex nut

at floor level (see figure 5).

FIGURE 2

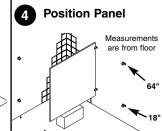


A. Place panel on a support, 12" above the floor.


FIGURE 3

B. Set it into wall brackets, but do not fasten panel at this time.




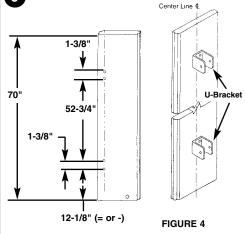

- A. Align U-brackets in position on rear of pilasters. Refer to layout drawings.
- B. Fasten U-brackets to pilasters with sheet metal screws.
- C. Pilasters at wall do not require U-brackets, but should be prepared for wall (and floor fastening) as required by compartment layout. If floor fastening is omitted, three wall brackets should be used.

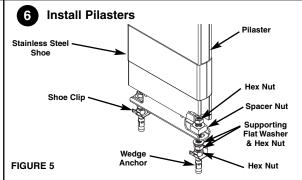

 - A. Slide stainless steel shoe carefully over mounting end of pilaster and leave approximately 5" above the end.
- B. Screw the hex nut and supporting washer onto threaded rod. Place pilaster mounting bar over threaded rod, then attach spacer nut and hex nut. Loosely tighten.




Pilasters must be both plumb and level.

- A. Plumb pilaster and fasten pilaster to panel using #14 x 5/8" machine screws.
- B. Establish bottom door opening by setting pilaster mountings to desired position.

## 8 Panel Fastening & Shoe Positioning

- A. Level pilaster from one compartment to the next by adjusting support nuts on the threading rods. See figure 5.
- B. Tighten locking nuts on pilaster mounting
- C. Slide stainless steel shoe down to floor level, firmly engaging shoe clips.
- D. Fasten panel to wall brackets using #14 x 5/8" machine screws.
- E Remove panel support device.

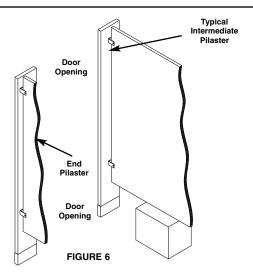

## **Series 500 - Floor Braced continued**

## 9

### **Hinge Assembly & Door Hanging**

A. Install hinges to front pilasters.

**Note**: The hinge has nylon bushing with "MILLS" imprinted on it. Hinge must be installed in the top position.

- B. Install pin thru cam to bottom hinge as shown in figure 7. Put on nut but do not tighten at this time.
- C. Place door bottom onto bottom hinge pin. Tilt door and align door top with pilasters top

hinge.

D. Insert top hinge pin in top of door and through nylon bushing. Gently tap hinge pin until it is seated in tubular clip within door.

E. Set door to desired position (30° opening recommended) and fully tighten nut on bottom hinge pin to set the position.

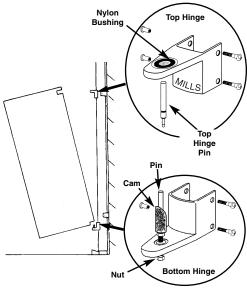


FIGURE 7

## 10

### **Concealed Latch Assembly**

Install concealed latch-on door opposite the hinge side of door. All concealed latches should be mounted at midpoint of the door.

#### **Inswing Doors**

- A. Insert latch assy. (to inside of stall) and front escutcheon plate into door recess and secure in place with (2) #10-40 x 5/8" Torx head screws.
- B. Slide the knob on the latch assy. to the lock position. Insert

lock bolt into the door end guide hole. Push the lock bolt in until end is located into the lock spring.

C. Install bumper on front pilaster.
Inswing - Black bumper visible from inside stall.
Outswing - Black bumper visible from outside of stall.

 D. For outswing doors, install door pull on outside of door.

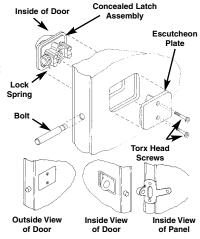


FIGURE 8

#### **Emergency Access**

Lift door causing latch bolt to clear keeper and open.



#### Miscellaneous Hardware

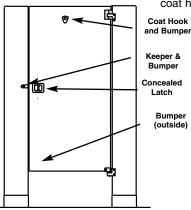


FIGURE 9 (inside view)

A. Install coat hooks with rubber tips for inswing doors, inside center of door appr. 4" down from top. (Use coat hooks w/out rubber tips for

outswing doors.)
B. For ADA
compartments mount
door hook, center of
door, 48" to 52" off of
finished floor.
(recommended only)
C. Install door bumper
for outswing doors on
the outside of the door,
lower corner opposite
the hinge side or on
adjacent wall.

## 12

#### **Care & Maintenance of Toilet Partitions**

In order to provide toilet partitions with the proper care and maintenance, the following instructions must be followed.

- A. All surfaces must be kept clean with water and a mild soap solution only. The finish must be wiped dry following cleaning.
- B. In high humidity areas, the rooms must be properly ventilated.
- C. Hosing down or wet washing of these units may cause water absorption and damage.
- D. For maximum protection periodic application of any standard furniture wax will be beneficial.

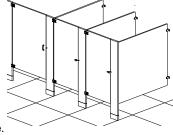


FIGURE 10



### **WARNING**



Under no circumstances should these components be subjected to:

- Abrasive powders or pads Water closet cleansers Ceramic tile cleansers
- Solutions containing more that 1% by volume of ammonia
- · Solutions containing acids or lye Solutions containing enzymes

Attention to work progress during new construction or renovation is important. Other trades and cleaning services may use agents for ceramics and tiles that will damage these components.



W142 N9101 Fountain Blvd. Menomonee Falls, WI 53051 Telephone: 1-800-BRADLEY Fax: 262-253-4161 HDWT-INSTR-010 Rev. B; ECN 07-1419 Page 2 of 2