



# ***Operation & Safety Manual***

*Original Instructions  
Keep this manual with machine at all times.*

## ***Models G9-43A & G10-43A***

S/N 0160005444 & After

**31200150**

*Revised  
June 15, 2011*



**CALIFORNIA PROPOSITION 65**  
**BATTERY WARNING**

**Battery posts,  
terminals and related  
accessories contain  
lead and lead compounds,  
chemical known to the  
State of California  
to cause cancer and  
reproductive harm.**

**WASH HANDS  
AFTER HANDLING!**

**CALIFORNIA PROPOSITION 65**  
**EXHAUST WARNING**

**Diesel Engine exhaust and  
some of its constituents  
are known to the State of  
California to cause cancer,  
birth defects and other  
reproductive harm.**

## **REVISION LOG**

April 28, 2006 - A - Original Issue of Manual

November 13, 2008 - B - Revised manual.

April 21, 2009 - C - Added G10-43A information. Revised cover and pages 1-6, 2-3, 2-6, 2-7, 3-2, 3-5, 3-12, 4-2, 4-11, 5-30 thru 5-33, 5-42, 7-2, 7-6, 7-7, 7-14, 7-19 & 9-1 thru 9-5.

January 5, 2010 - D - Revised covers and pages b, 1-5, 2-6, 3-7, 3-12, 3-14, 4-5, 4-7, 4-10, 5-3, 5-4, 5-5, 5-18, 5-19, 5-20, 5-22, 5-24, 5-26, 5-28, 5-30, 5-32, 5-33, 5-34, 5-36, 5-38, 5-39, 5-40, 5-42, 7-2, 7-3, 7-5, 7-16, 7-21 & 9-2.

December 21, 2010 - E - Revised pages 7-14, 9-3, 9-5 & 9-6.

March 31, 2011 - F - Revised pages 1-9, 2-3, 2-6 thru 2-13, 2-15, 2-17, 3-1 thru 3-19, 3-22, 4-1 thru 4-4, 4-10, 4-11, 5-5, 5-18, 5-19, 5-20, 5-22, 5-24, 5-25, 5-26, 5-30, 5-31, 5-32, 5-34, 5-36, 5-38, 5-42, 6-1, 7-1 thru 7-15, 7-19 thru 7-23, 9-1 & 9-2.

June 15, 2011 - G - Revised pages 2-8 & 2-12.

## ***Read This First***

---

This manual is a very important tool! Keep it with the machine at all times.

The purpose of this manual is to provide owners, users, operators, lessors, and lessees with the precautions and operating procedures essential for the safe and proper machine operation for its intended purpose.

Due to continuous product improvements, JLG Industries, Inc. reserves the right to make specification changes without prior notification. Contact JLG Industries, Inc. for updated information.

## **Operator Qualifications**

---

The operator of the machine must not operate the machine until this manual has been read, training is accomplished and operation of the machine has been completed under the supervision of an experienced and qualified operator. Operation within the U.S.A. requires training per OSHA 1910.178.

Operators of this equipment must possess a valid, applicable driver's license, be in good physical and mental condition, have normal reflexes and reaction time, good vision and depth perception and normal hearing. Operator must not be using medication which could impair abilities nor be under the influence of alcohol or any other intoxicant during the work shift.

In addition, the operator must read, understand and comply with instructions contained in the following material furnished with the telehandler:

- This Operation & Safety Manual
- Telehandler Safety Manual (ANSI only)
- All instructional decals and plates
- Any optional equipment instructions furnished

The operator must also read, understand and comply with all applicable Employer, Industry and Governmental rules, standards and regulations.

## **Modifications**

---

**Any modification to this machine must be approved by JLG.**

This product must comply with all safety related bulletins. Contact JLG Industries, Inc. or the local authorized JLG representative for information regarding safety-related bulletins which may have been issued for this product.

JLG Industries, Inc. sends safety related bulletins to the owner of record of this machine. Contact JLG Industries, Inc. to ensure that the current owner records are updated and accurate.

JLG Industries, Inc. must be notified immediately in all instances where JLG products have been involved in an accident involving bodily injury or death of personnel or when damage has occurred to personal property or the JLG product.

**FOR:**

- Accident Reporting and Product Safety Publications
- Current Owner Updates
- Questions Regarding Product Applications and Safety
- Standards and Regulations Compliance Information
- Questions Regarding Product Modifications

**CONTACT:**

Product Safety and Reliability Department  
JLG Industries, Inc.  
13224 Fountainhead Plaza  
Hagerstown, MD 21742  
USA

or Your Local JLG Office  
(Addresses on back cover)

**In USA**

Toll Free: 1-877-JLG-SAFE (1-877-554-7233)

**Outside USA**

Phone: +1-717-485-6591

**E-mail**

ProductSafety@JLG.com

## ***Read This First***

---

### **Other Publications Available**

---

Service Manual.....	31200151
Illustrated Parts Manual.....	91514001

**Note:** *The following standards may be referenced in this manual:*

*ANSI is compliant to ANSI/ITSDF B56.6*

*AUS is compliant to AS 1418.19*

*CE is compliant to EN1459*

*Refer to the machine Serial Number Plate to identify the applicable compliance standard.*

**TABLE OF CONTENTS**

**Revision Log**

**Read This First**

Operator Qualifications ..... b  
 Modifications ..... b  
 Other Publications Available ..... d

**Table of Contents**

**Section 1 - General Safety Practices**

1.1 Hazard Classification System ..... 1-1  
     Safety Alert System and Safety Signal Words ..... 1-1  
 1.2 General Precautions ..... 1-1  
 1.3 Operation Safety ..... 1-2  
     Electrical Hazards ..... 1-2  
     Tip Over Hazard ..... 1-3  
     Travel Hazard ..... 1-6  
     Load Falling Hazard ..... 1-7  
     Lifting Personnel ..... 1-8  
     Driving Hazards on Slopes ..... 1-9  
     Pinch Points and Crush Hazards ..... 1-10  
     Fall Hazard ..... 1-12  
     Chemical Hazards ..... 1-13

**Section 2 - Pre-Operation and Inspection**

2.1 Pre-Operation Check and Inspection ..... 2-1  
 2.2 Safety Decals ..... 2-3  
     ANSI ..... 2-3  
 2.3 Walk-Around Inspection ..... 2-14  
 2.4 Warm-Up and Operational Checks ..... 2-16  
     Warm-Up Check ..... 2-16  
     Operational Check ..... 2-16  
 2.5 Operator Cab ..... 2-17  
 2.6 Windows ..... 2-18  
     Cab Door Window (if equipped) ..... 2-18

**Section 3 - Controls and Indicators**

3.1 General ..... 3-1  
 3.2 Controls ..... 3-2  
     Before S/N 0160040675 excluding 0160040468 &  
     0160040672 ..... 3-2  
     S/N 0160040675 & After including 0160040468 &  
     0160040672 ..... 3-3  
     Dash Controls and Indicators ..... 3-6

## Table of Contents

---

	Ignition .....	3-8
	Park Brake.....	3-9
	Parking Procedure.....	3-9
	Transmission Control Lever.....	3-10
	Boom Joystick .....	3-12
	Frame Level and Attachment Tilt (if equipped) Joystick.....	3-14
	Outrigger Joysticks (G10-43A) .....	3-15
	Auxiliary Hydraulic Joystick .....	3-16
	Right Hand Panel (S/N 0160040675 & After including 0160040468 & 0160040672).....	3-18
	Heater and Air Conditioning Controls (Before S/N 0160040675 excluding 0160040468 & 0160040672, if equipped).....	3-19
	Accessory Control Lever (if equipped) .....	3-20
3.3	Steer Modes .....	3-22
	Steer Mode Change .....	3-22
3.4	Operator Seat.....	3-23
	Adjustments.....	3-23
	Seat Belt.....	3-25
3.5	Boom Angle and Extension Indicators .....	3-26

## Section 4 - Operation

4.1	Engine .....	4-1
	Starting the Engine .....	4-1
	Cold Weather Starting Aids .....	4-2
	Extreme Cold Weather Starting (if equipped).....	4-3
	Battery Boosted Starting.....	4-4
	Normal Engine Operation .....	4-5
	Shut-Down Procedure .....	4-5
4.2	Operating with a Non-Suspended Load .....	4-6
	Lift Load Safely .....	4-6
	Picking Up a Load .....	4-6
	Transporting a Load .....	4-7
	Leveling Procedure.....	4-7
	Placing a Load.....	4-8
	Disengaging a Load.....	4-8
4.3	Operating with a Suspended Load .....	4-9
	Lift Load Safely .....	4-9
	Picking Up a Suspended Load .....	4-9
	Transporting a Suspended Load .....	4-10
	Leveling Procedure.....	4-10
	Placing a Suspended Load.....	4-11
	Disengaging a Suspended Load .....	4-11

---

4.4	Loading and Securing for Transport .....	4-12
	Tiedown .....	4-12
	Lifting .....	4-13

**Section 5 - Attachments**

5.1	Approved Attachments .....	5-1
5.2	Unapproved Attachments .....	5-2
5.3	JLG Supplied Attachments .....	5-3
	Before S/N 0160037671 .....	5-3
	S/N 0160037671 & After .....	5-5
5.4	Telehandler/Attachment/Fork Capacity .....	5-6
5.5	Use of the Capacity Chart .....	5-7
	Capacity Indicator Locations .....	5-7
	Sample Capacity Chart .....	5-8
	Example .....	5-12
5.6	Attachment Installation .....	5-13
	Hydraulic Operated Attachment .....	5-16
5.7	Adjusting/Moving Forks .....	5-17
5.8	Attachment Operation .....	5-18
	Carriage w/Forks .....	5-19
	Side Tilt Carriage .....	5-20
	Swing Carriage .....	5-22
	Dual Fork Positioning Carriage .....	5-24
	Mast Carriage .....	5-26
	Mast Carriage w/Swing and Side Shift (Before S/N 0160037671) .....	5-28
	Mast Carriage w/Side Tilt (S/N 0160037671 & After) ...	5-30
	Fork Mounted Hook .....	5-32
	Truss Boom .....	5-34
	Bucket .....	5-36
	Grapple Bucket .....	5-38
	Personnel Work Platform - Quick Switch Mounted (Before S/N 0160037671) .....	5-40
	Personnel Work Platform - Fork Mounted .....	5-42
	Boom Head-Mounted Winch (Before S/N 0160037671) .....	5-44

**Section 6 - Emergency Procedures**

6.1	Towing a Disabled Product .....	6-1
	Moving Short Distances .....	6-1
	Moving Longer Distances .....	6-1
6.2	Emergency Lowering of Boom .....	6-2
6.3	Emergency Exit from Enclosed Cab .....	6-2

## Table of Contents

---

### Section 7 - Lubrication and Maintenance

7.1	Introduction.....	7-1
	Clothing and Safety Gear .....	7-1
7.2	General Maintenance Instructions.....	7-2
7.3	Service and Maintenance Schedule.....	7-3
	10, 1st 50 & 50 Hour Maintenance Schedule .....	7-3
	1st 250, 250 & 500 Hour Maintenance Schedule .....	7-4
	1000, 1500 & 2000 Hour Maintenance Schedule.....	7-5
7.4	Lubrication Schedules .....	7-6
	50 Hour Lubrication Schedule .....	7-6
	250 Hour Lubrication Schedule .....	7-7
	1000 Hour Lubrication Schedule .....	7-8
7.5	Operator Maintenance Instructions .....	7-10
	Fuel System.....	7-10
	Air Intake System .....	7-12
	Engine Oil.....	7-14
	Hydraulic Oil .....	7-15
	Tires.....	7-16
	Transmission Oil.....	7-19
	Hydraulic Return Filter (Before S/N 0160040675 excluding 0160040468 & 0160040672).....	7-20
	Engine Cooling System .....	7-21
	Battery .....	7-23
	Windshield Washer System (if equipped).....	7-24

### Section 8 - Additional Checks

### Section 9 - Specifications

9.1	Product Specifications.....	9-1
	Capacities.....	9-1
	Tires.....	9-3
	Performance .....	9-4
	Dimensions.....	9-5

### Index

### Inspection, Maintenance and Repair Log

---

## SECTION 1 - GENERAL SAFETY PRACTICES

---

### 1.1 HAZARD CLASSIFICATION SYSTEM

#### Safety Alert System and Safety Signal Words

---



**DANGER** indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



**WARNING** indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



**CAUTION** indicates a potentiality hazardous situation which, if not avoided, may result in minor or moderate injury.

---

### 1.2 GENERAL PRECAUTIONS



Before operation, read and understand this manual. Failure to comply with the safety precautions listed in this manual could result in machine damage, property damage, personal injury or death.



## Section 1 - General Safety Practices

---

### 1.3 OPERATION SAFETY

#### Electrical Hazards

---

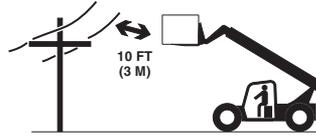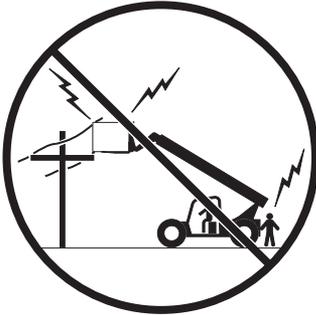


OW0040

- This machine is not insulated and does not provide protection from contact or being near electrical current.
- **NEVER** operate the telehandler in an area where overhead power lines, overhead or underground cables, or other power sources may exist without ensuring the appropriate power or utility company de-energizes the lines.
- Always check for power lines before raising the boom.
- Follow employer, local and governmental regulations for clearance from powerlines.


### Tip Over Hazard

#### General



- For additional load requirements, refer to the appropriate capacity chart.

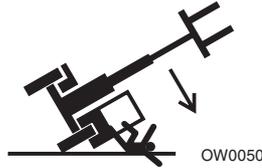

- Never use an attachment without the appropriate JLG approved capacity chart installed on the telehandler.
- Understand how to properly use the capacity charts located in cab.
- **DO NOT** exceed rated lift capacity.
- Be sure that the ground conditions are able to support the machine.

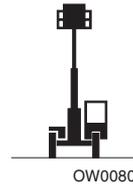


- **DO NOT** raise boom unless frame is level (0 degrees), unless otherwise noted on capacity chart.

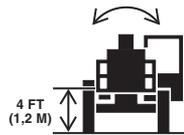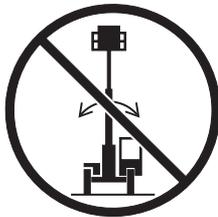

- **DO NOT** level machine with boom/attachment above 4 ft (1,2 m). (AUS - **DO NOT** level machine with load more than 11.8 in (300 mm) above ground surface.)

## Section 1 - General Safety Practices

---

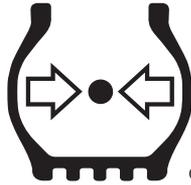

- **MAINTAIN proper tire pressure** at all times. If proper tire pressures are not maintained, this machine could tip over.
- Refer to manufacturer's specifications for proper fill ratio and pressure requirements for tires equipped with ballast.




- Always wear the seat belt.
- Keep head, arms, hands, legs and all other body parts inside operator's cab at all times.



If the telehandler starts to tip over:

- **DO NOT JUMP**
- **BRACE YOURSELF** and **STAY WITH THE MACHINE**
- **KEEP YOUR SEAT BELT FASTENED**
- **HOLD ON FIRMLY**
- **LEAN AWAY FROM THE POINT OF IMPACT**

### Non-Suspended Load

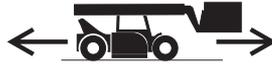

OW0060

- **DO NOT** drive with boom raised.

### Suspended Load



OW0150

- Tether suspended loads to restrict movement.
- Weight of all rigging (slings, etc.) must be included as part of load.
- Beware of wind. Wind can cause a suspended load to swing and cause dangerous side loads - even with tag lines.
- **DO NOT** attempt to use telehandler frame-leveling to compensate for load swing.
- Keep heavy part of load closest to attachment.
- Never drag the load; lift vertically.

When driving with a suspended load:

- Start, travel, turn and stop slowly to prevent load from swinging.
- **DO NOT** extend boom.
- **DO NOT** raise the load more than 11.8 in (300 mm) above ground surface or the boom more than 45°.
- **DO NOT** exceed walking speed.


## Section 1 - General Safety Practices

---

### Travel Hazard


---

2-Wheel Front Steer

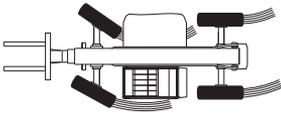


OAL2030

4-Wheel Circle Steer

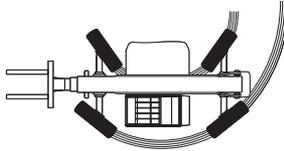

4-Wheel Crab Steer

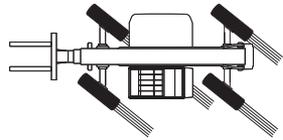

- Steering characteristics differ between steer modes. Identify the steer mode settings of the telehandler being operated.
- **DO NOT** change steer modes while traveling. Steer modes must be changed while telehandler is stationary.
- Visually verify proper wheel alignment after each steer mode change.
- Ensure that adequate clearance is provided for both rear tail swing and front fork swing.
- Look out for and avoid other personnel, machinery and vehicles in the area. Use a spotter if you DO NOT have a clear view.
- Before moving be sure of a clear path and sound horn.
- When driving, retract boom and keep boom/attachment as low as possible while maintaining visibility of mirrors and maximum visibility of path of travel.
- Always look in the direction of travel.
- Always check boom clearances carefully before driving underneath overhead obstructions. Position attachment/load to clear obstacles.
- When driving in high speed, use only front wheel steer (if steering modes are selectable).

**Load Falling Hazard**

---



- Never suspend load from forks or other parts of carriage.
- **DO NOT** burn or drill holes in fork(s).
- Forks must be centered under load and spaced apart as far as possible.

## Section 1 - General Safety Practices

---

### Lifting Personnel

---



OW0170


- When lifting personnel, **USE ONLY** a JLG approved personnel work platform, with proper capacity chart displayed in the cab.



OW0190

- **DO NOT** drive machine from cab when personnel are in platform.

### Driving Hazards on Slopes

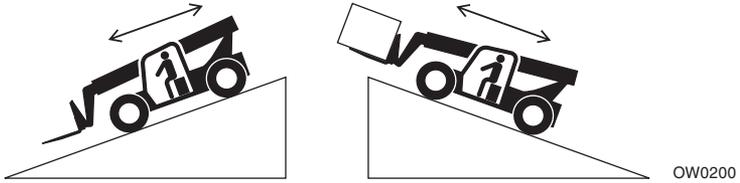

To maintain sufficient traction and braking capabilities, travel on slopes as follows:

- When unloaded, drive with forks pointed downhill.
- When loaded, drive with the forks pointed uphill.
- For additional travel requirements, refer to the appropriate capacity chart.
- To avoid overspeeding the engine and drivetrain when driving down slopes, downshift to a lower gear and use the service brake as necessary to maintain a slow speed. **DO NOT shift into neutral and coast downhill.**
- Avoid excessively steep slopes or unstable surfaces. To avoid tip over **DO NOT** drive across excessively steep slopes under *any* circumstances.
- Avoid turning on a slope. Never engage “inching” or shift to “Neutral” when going downhill.
- **DO NOT** park on a slope.


## Section 1 - General Safety Practices

---

### Pinch Points and Crush Hazards

---

Stay clear of pinch points and rotating parts on the telehandler.

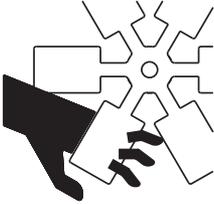

OW0210

- Stay clear of moving parts while engine is running.



OW0220

- Keep clear of steering tires and frame or other objects.



OW0230

- Keep clear from under boom.

## Section 1 - General Safety Practices

---



OW0240

- Keep clear of boom holes.




OW0250

- Keep arms and hands clear of attachment tilt cylinder.



OW0260

- Keep hands and fingers clear of carriage and forks.

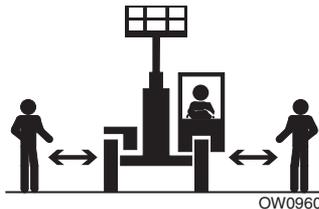

OW0960

- Keep others away while operating.

## Section 1 - General Safety Practices

---

### Fall Hazard

---



- Enter using the proper hand holds and steps provided. Always maintain 3-point contact when mounting or dismounting. Never grab control levers or steering wheel when mounting or dismounting the machine.
- **DO NOT** get off the machine until the shutdown procedure on page 4-5 has been performed.



- **DO NOT** carry riders. Riders could fall off machine causing death or serious injury.

### Chemical Hazards

---

#### Exhaust Fumes

- **DO NOT** operate machine in an enclosed area without proper ventilation.
- **DO NOT** operate the machine in hazardous environments unless approved for that purpose by JLG and site owner. Sparks from the electrical system and the engine exhaust can cause an explosion.
- If spark arrestors are required, ensure they are in place and in good working order.

#### Flammable Fuel



- **DO NOT** fill the fuel tank or service the fuel system near an open flame, sparks or smoking materials. Engine fuel is flammable and can cause a fire and/or explosion.

#### Hydraulic Fluid



- **DO NOT** attempt to repair or tighten any hydraulic hoses or fittings while the engine is running or when the hydraulic system is under pressure.
- Stop engine and relieve trapped pressure. Fluid in the hydraulic system is under enough pressure that it can penetrate the skin.
- **DO NOT** use your hand to check for leaks. Use a piece of cardboard or paper to search for leaks. Wear gloves to protect hands from spraying fluid.

**This Page Intentionally Left Blank**

## SECTION 2 - PRE-OPERATION AND INSPECTION

### 2.1 PRE-OPERATION CHECK AND INSPECTION

**Note:** Complete all required maintenance before operating unit.




## WARNING


**FALL HAZARD.** Use extreme caution when checking items beyond your normal reach. Use an approved ladder.

The pre-operation check and inspection, performed at beginning of each work shift or at each change of operator, should include the following:

1. **Cleanliness** - Check all surfaces for leakage (oil, fuel or battery fluid) or foreign objects. Report any leakage to the proper maintenance personnel.
2. **Structure** - Inspect the machine structure for dents, damage, weld or parent metal cracks or other discrepancies.

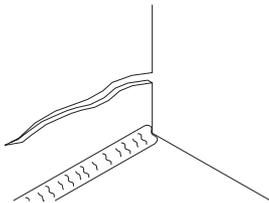

PARENT METAL CRACK

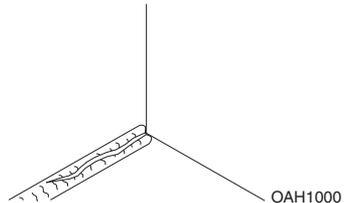

WELD CRACK

OAH1000

3. **Safety Decals** - Ensure all safety decals are legible and in place. Clean or replace as required. See page 2-3 for details.
4. **Operation and Safety Manuals** - Operation & Safety Manual and AEM Safety Manual (ANSI only) are located in cab manual holder.
5. **Walk-Around Inspection** - See page 2-14 for details.
6. **Fluid Levels** - Check fluids, including fuel, hydraulic oil, engine oil, transmission fluid and coolant. When adding fluids, refer to Section 7 - Lubrication and Maintenance and Section 9 - Specifications to determine proper type and intervals. Before removing filler caps or fill plugs, wipe all dirt and grease away from the ports. If dirt enters these ports, it can severely reduce component life.
7. **Attachments/Accessories** - Ensure correct capacity charts are installed on the telehandler. If provided, reference the Operation & Safety Manual of each attachment or accessory installed for specific inspection, operation and maintenance instructions.

## ***Section 2 - Pre-Operation and Inspection***

---

8. **Operational Check** - Once the walk-around inspection is complete, perform a warm-up and operational check (see page 2-16) of all systems in an area free of overhead and ground level obstructions. See Section 3 - Controls and Indicators for more specific operating instructions.



# **WARNING**


If telehandler does not operate properly, immediately bring machine to a stop, lower boom and attachment to ground and stop the engine. Determine cause and correct before continued use.

## 2.2 SAFETY DECALS

Ensure all **DANGER**, **WARNING**, **CAUTION** and instructional decals and proper capacity charts are legible and in place. Clean and replace as required.




### ANSI

Before S/N 0160040121

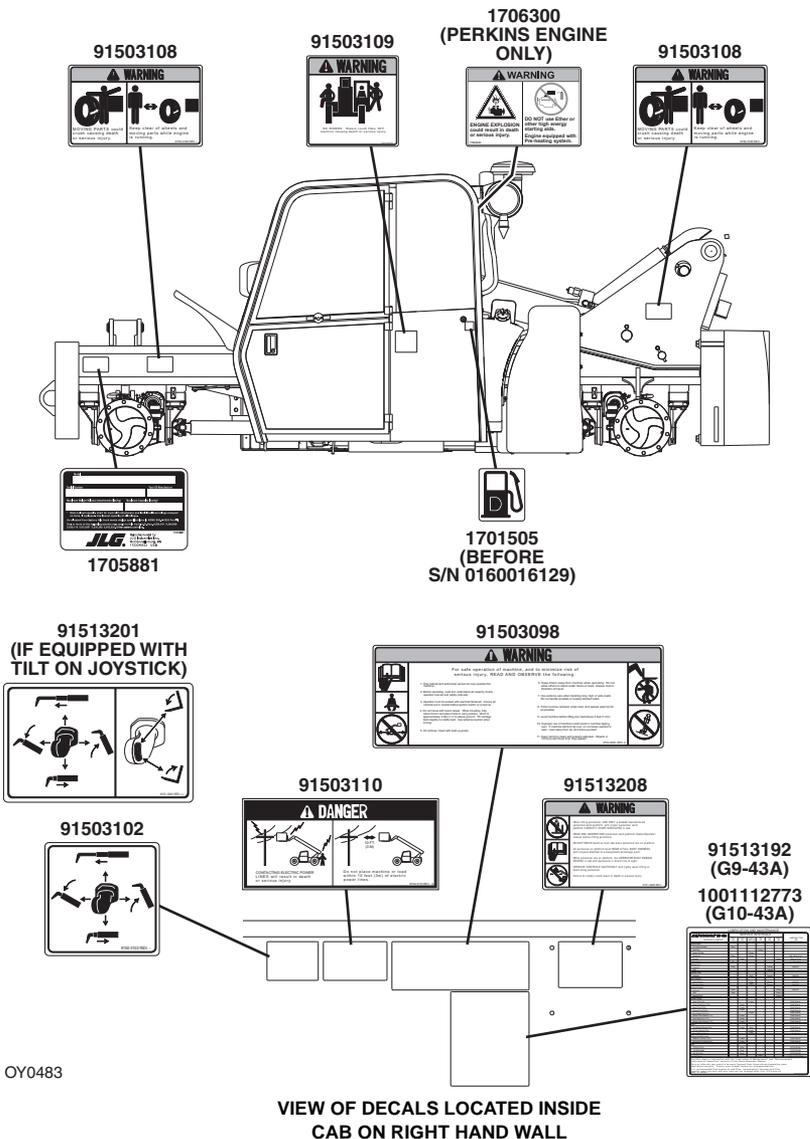


OY0483

## Section 2 - Pre-Operation and Inspection

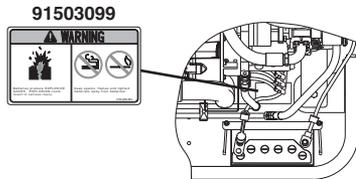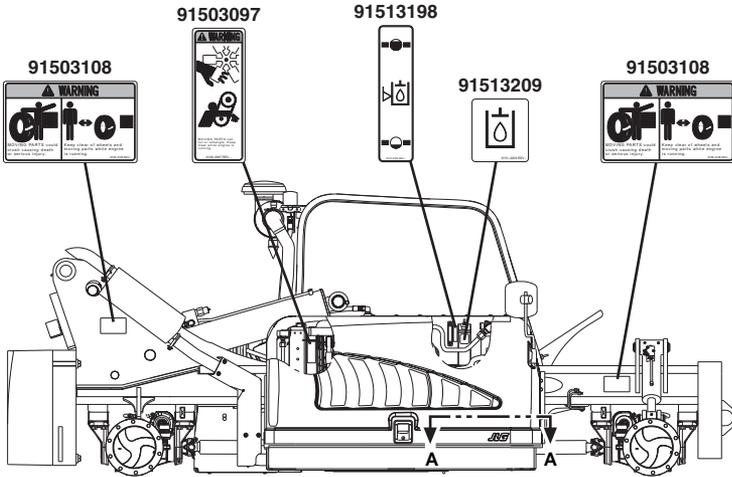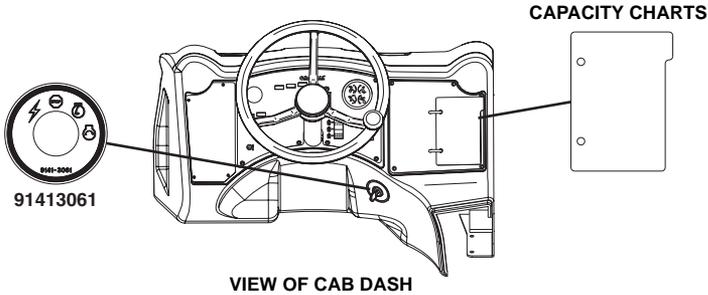

OY0491



## Section 2 - Pre-Operation and Inspection

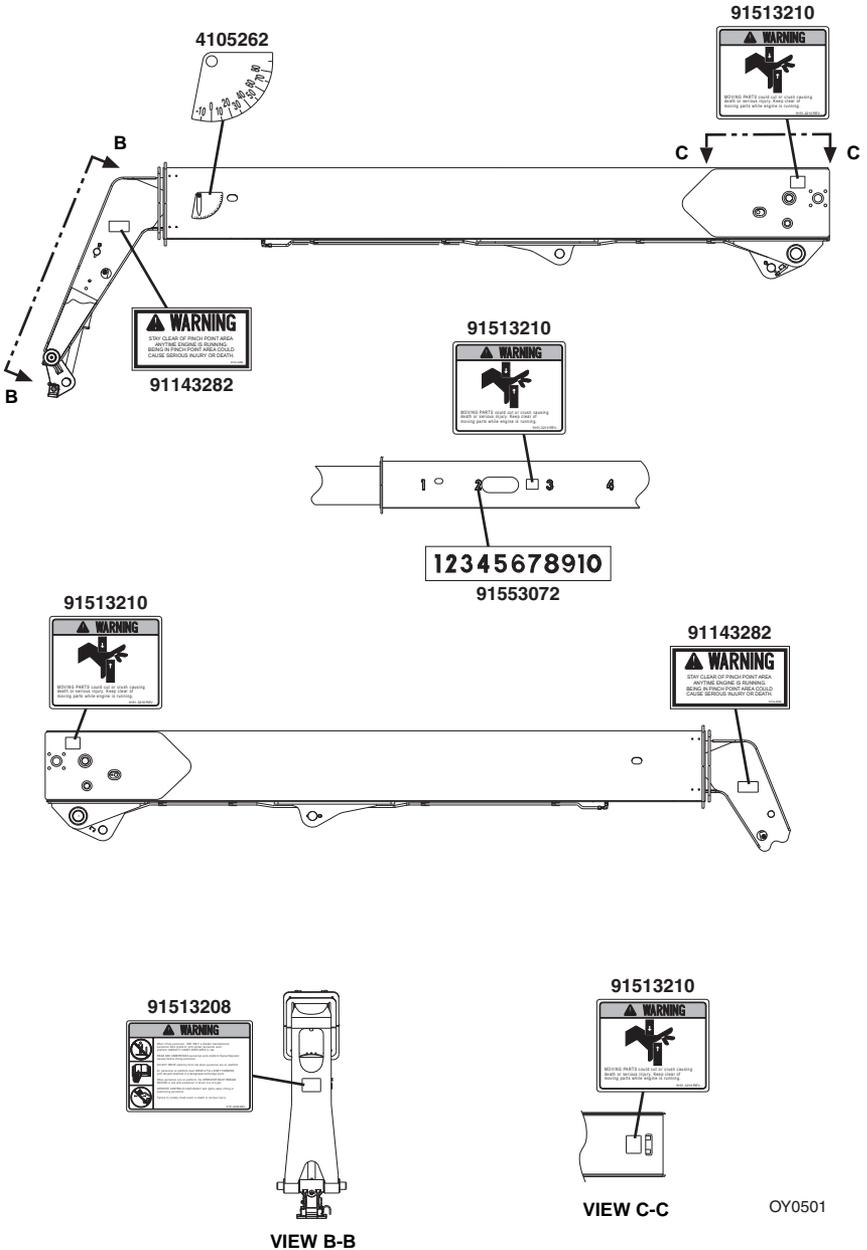

OY0501

# Section 2 - Pre-Operation and Inspection

S/N 0160040121 & After, If Equipped

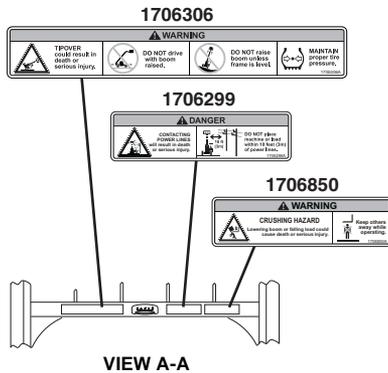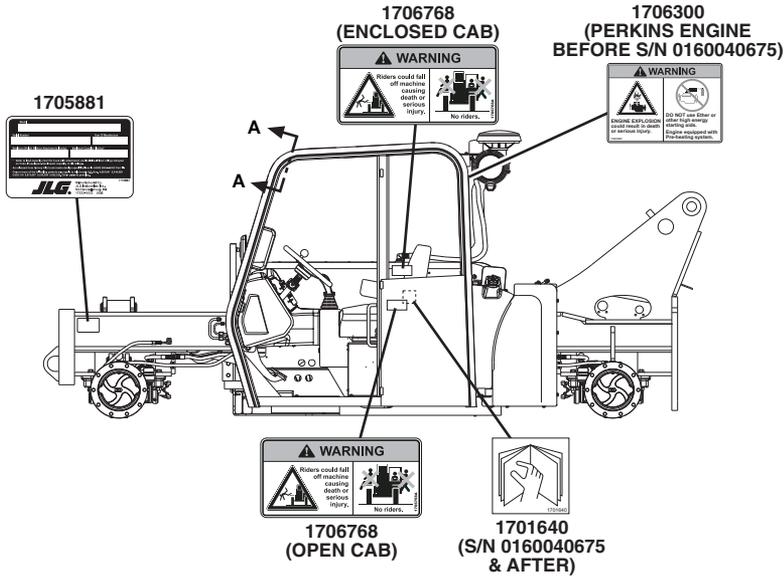


OY2580

VIEW A-A

# Section 2 - Pre-Operation and Inspection

BEFORE S/N 0160040675

91513201  
(G10-43A)  
(G9-43A, IF  
EQUIPPED)

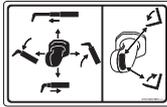

91503102  
(G9-43A, IF  
EQUIPPED)



S/N 0160040675 & AFTER


1001109459  
(G9-43A, IF  
EQUIPPED)



1001109458  
(G10-43A)  
(G9-43A, IF  
EQUIPPED)



CAPACITY  
CHARTS

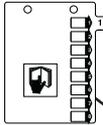


91163028



91413061




1001131509  
(G10-43A,  
S/N 0160040675  
& AFTER)

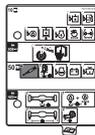

BEFORE S/N 0160040675

91513192 (G9-43A)

91473217 (G10-43A)

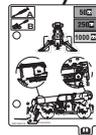

1001115114 (G9-43A)

1001115116 (G10-43A)



S/N 0160040675 & AFTER

1001130802 (G9-43A)

1001130792 (G10-43A)

1001130782 (G9-43A)

1001130792 (G10-43A)



1001108836  
(G9-43A,  
IF EQUIPPED)



1001108847  
(G10-43A)  
(G9-43A,  
IF EQUIPPED)




1001131509  
(G9-43A)



100111229  
(G10-43A)

1706303

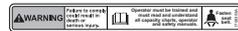

1706851



1706767



1706304





4107971  
(G10-43A)




## Section 2 - Pre-Operation and Inspection


S/N 0160040121 THRU 0160040674 EXCLUDING 0160040468 & 0160040672

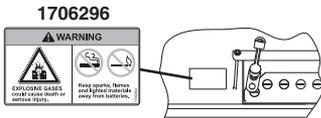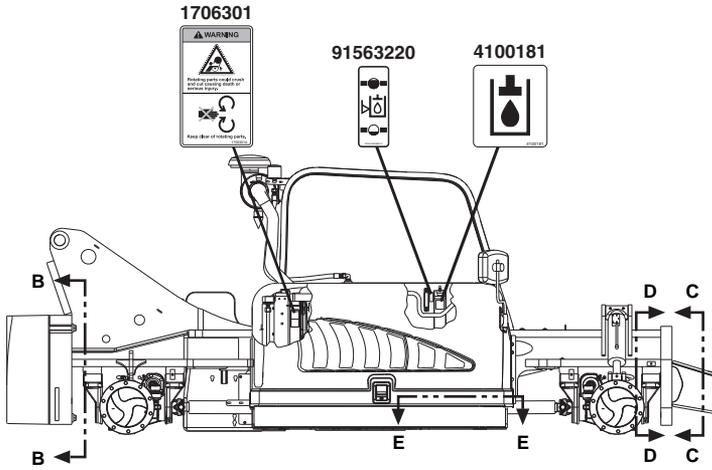


VIEW E-E

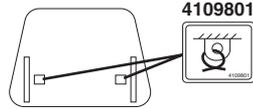


VIEW C-C  
(G9-43A)

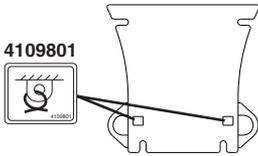

VIEW B-B

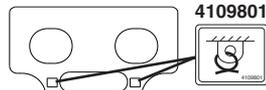




VIEW D-D  
(G10-43A)

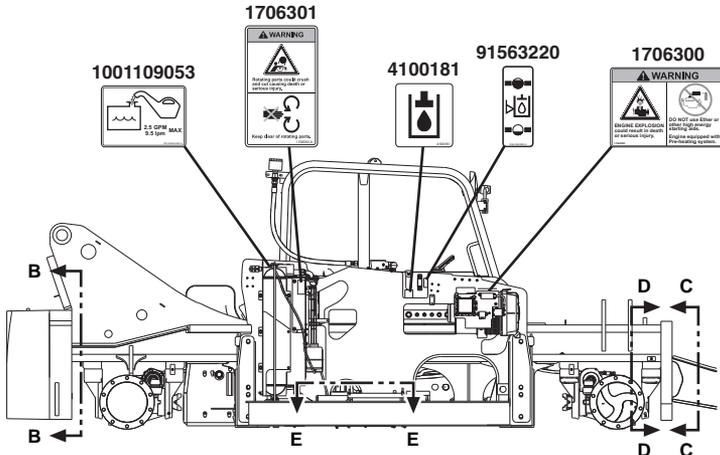

OY2600

S/N 0160040675 & AFTER INCLUDING 0160040468 & 0160040672

## Section 2 - Pre-Operation and Inspection

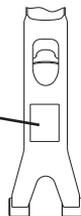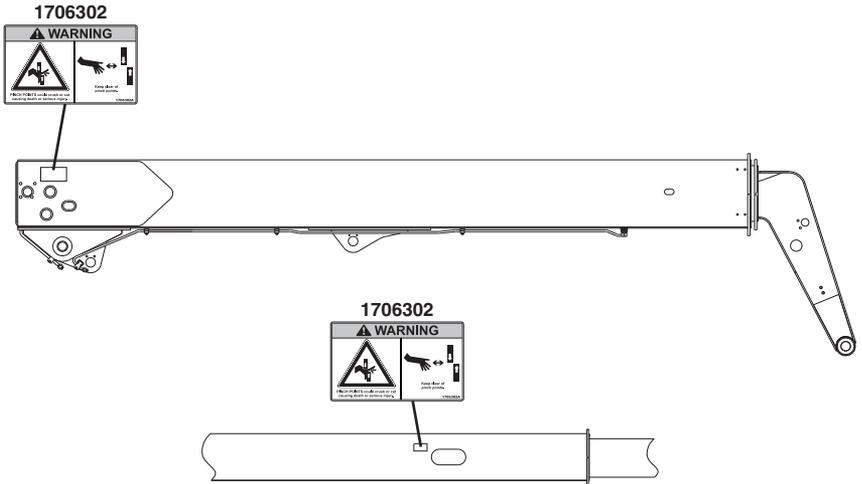
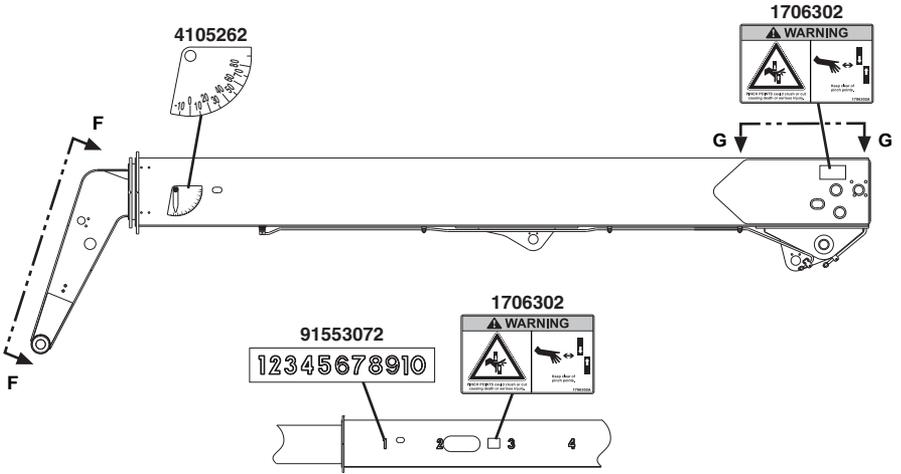


**VIEW G-G**

OY2110

# Section 2 - Pre-Operation and Inspection


ISO (S/N 0160040121 & After, If Equipped)

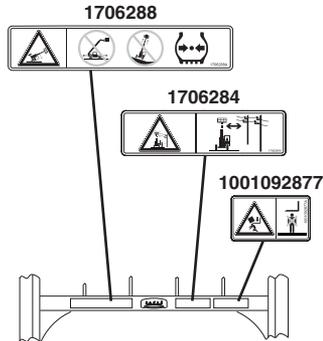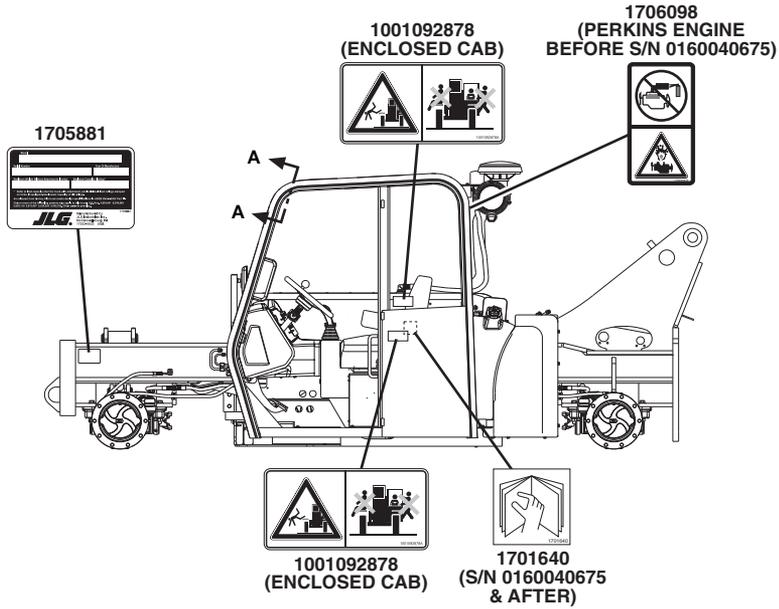

OY2610



VIEW A-A

## Section 2 - Pre-Operation and Inspection

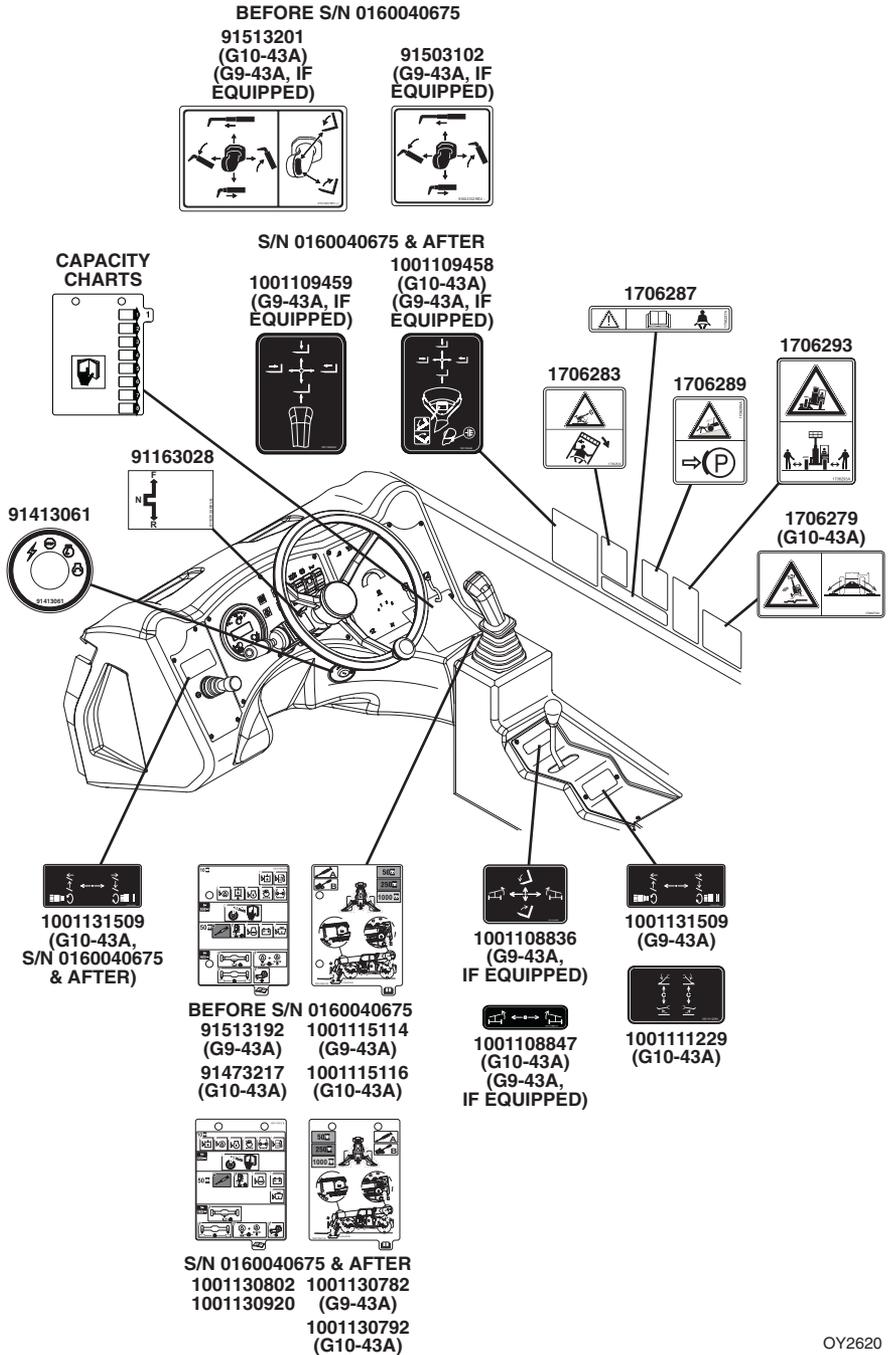


## Section 2 - Pre-Operation and Inspection


S/N 0160040121 THRU 0160040674 EXCLUDING 0160040468 & 0160040672

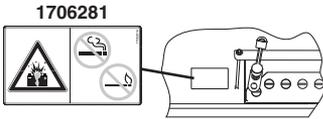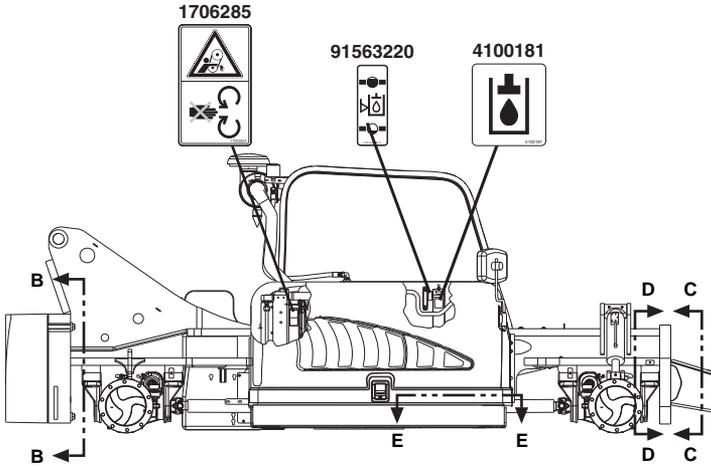

VIEW E-E

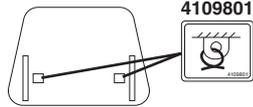


VIEW C-C  
(G9-43A)

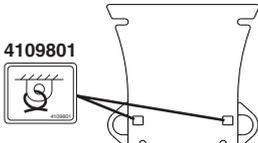

VIEW B-B






VIEW D-D  
(G10-43A)

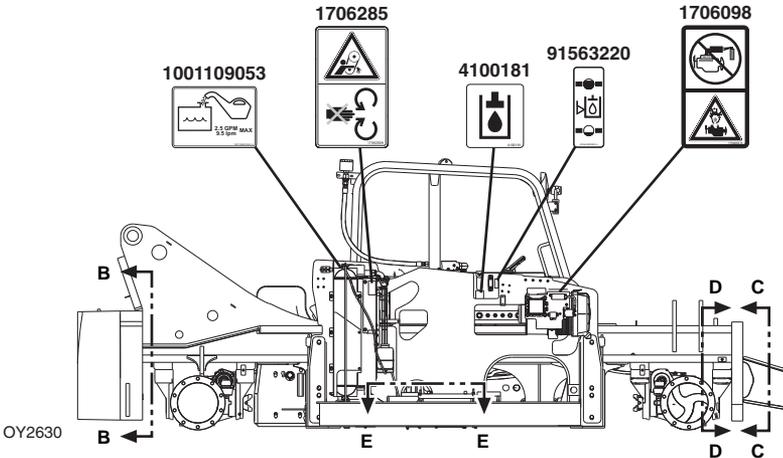

S/N 0160040675 & AFTER INCLUDING 0160040468 & 0160040672


## Section 2 - Pre-Operation and Inspection

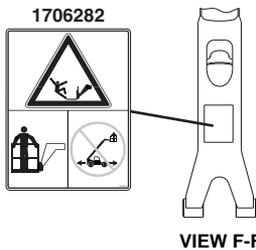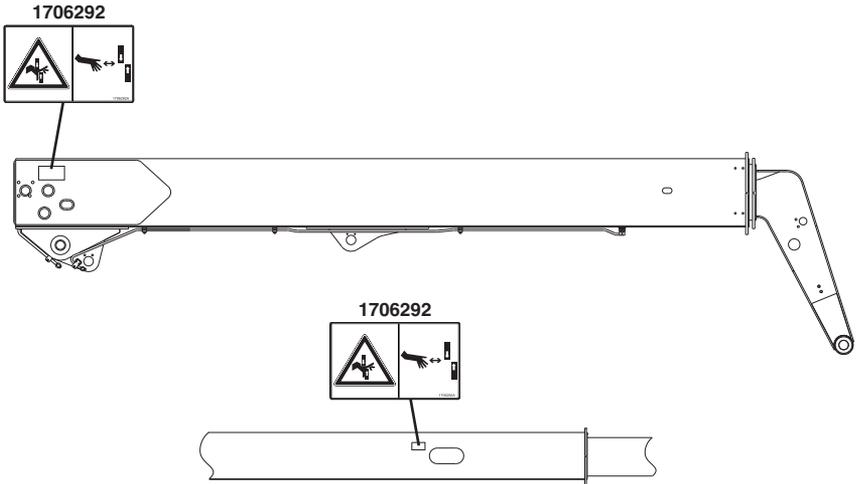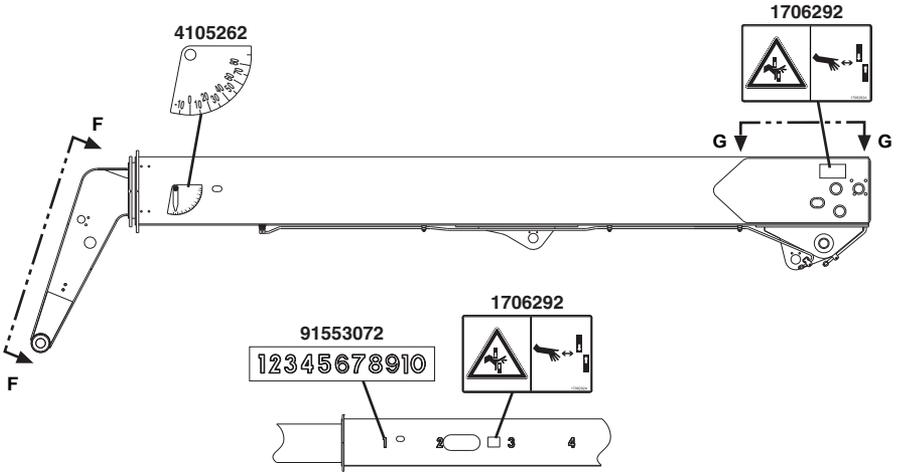

OY2140

## Section 2 - Pre-Operation and Inspection

### 2.3 WALK-AROUND INSPECTION

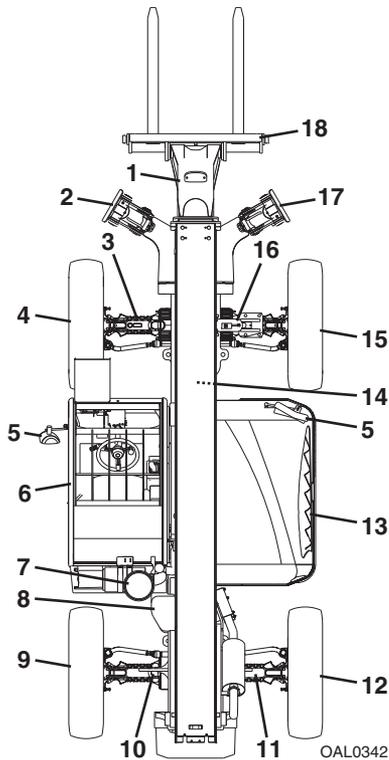

Begin your walk-around inspection at item 1, as noted below. Continue to your right (counterclockwise when viewed from top) checking each item in sequence.

INSPECTION NOTE: On all components, make sure there are no loose or missing parts, that they are securely fastened and no visible leaks or excessive wear exists in addition to any other criteria mentioned. Inspect all structural members including attachment for cracks, excessive corrosion and other damage.

1. Boom Sections and Lift, Tilt, Extend/Retract, Compensating (Slave) Cylinders -
  - Check front, top, side and rear wear pads for presence of grease.
  - Pivot pins secure; hydraulic hoses undamaged, not leaking.
2. Left Outrigger (G10-43A) - Pins secure; hydraulic hoses and cylinder undamaged, not leaking.
3. Front Axle - Steer cylinders undamaged, not leaking; pivot pins secure; hydraulic hoses undamaged, not leaking.
4. Wheel/Tire Assembly - Properly inflated and secured; no loose or missing lug nuts. Inspect for worn tread, cuts, tears or other discrepancies.

## Section 2 - Pre-Operation and Inspection

---

5. Mirrors - Clean and undamaged.
6. Cab and Electrical -
  - General appearance; no visible damage.
  - Frame level indicator and window glass undamaged and clean.
  - Gauges, switches, joysticks, foot controls and horn operational.
  - Emergency escape hammer in place (enclosed cab only).
  - Check seat belt for damage, replace belt if frayed or cut webbing, damaged buckles or loose mounting hardware.
7. Air Cleaner (Before S/N 0160040675 excluding 0160040468 & 0160040672) - Air cleaner element condition indicator, check for clogged condition. Replace element as required.
8. Main Control Valve - See inspection note.
9. Wheel/Tire Assembly - Properly inflated and secured; no loose or missing lug nuts. Inspect for worn tread, cuts, tears or other discrepancies.
10. Stabilizer Cylinder (if equipped) - Pins secure; hydraulic hoses undamaged, not leaking.
11. Rear Axle - Steer cylinders undamaged, not leaking; pivot pins secure; hydraulic hoses undamaged, not leaking.
12. Wheel/Tire Assembly - Properly inflated and secured; no loose or missing lug nuts. Inspect for worn tread, cuts, tears or other discrepancies.
13. Engine Compartment -
  - Air Cleaner (S/N 0160040675 & After including 0160040468 & 0160040672) - Air cleaner element condition indicator, check for clogged condition. Replace element as required.
  - Drive belts, check condition and replace as required.
  - Engine mounts - See inspection note.
  - Battery cables tight, no visible damage or corrosion.
  - Engine cover properly secured.
14. Outrigger Control Valve (G10-43A) - See inspection note.
15. Wheel/Tire Assembly - Properly inflated and secured; no loose or missing lug nuts. Inspect for worn tread, cuts, tears or other discrepancies.
16. Frame Level Cylinder - Pins secure; hydraulic hoses undamaged, not leaking.
17. Right Outrigger (G10-43A) - Pins secure; hydraulic hoses and cylinder undamaged, not leaking.
18. Attachment - Properly installed, see See “Attachment Installation” on page 5-13.

## Section 2 - Pre-Operation and Inspection

---

### 2.4 WARM-UP AND OPERATIONAL CHECKS

---

#### Warm-Up Check

---

During warm-up period, check:

1. Heater, defroster and windshield wiper (if equipped).
2. Check all lighting systems (if equipped) for proper operation.
3. Voltmeter should show 13.5 to 14 volts.
4. Adjust mirror(s) for maximum visibility.



## WARNING

**CUT/CRUSH/BURN HAZARD.** Keep engine cover closed while engine is running except when checking transmission oil level and hydraulic filter condition indicator.

#### Operational Check

---

When engine warms, perform an operational check:

1. Service brake and parking brake operation.
2. Forward and reverse travel.
3. Each gear.
4. Steering in both directions with engine at low idle (steering lock to lock will not be reached). Check in each steering mode.
5. Horn and back-up alarm. Must be audible from inside operators cab with engine running.
6. All joystick functions - operate smoothly and correctly.
7. Perform any additional checks described in Section 8.
8. Hydraulic filter condition indicator.

## **2.5 OPERATOR CAB**

The telehandler is equipped with an open or enclosed ROPS/FOPS cab.



# **WARNING**

Never operate telehandler unless the overhead guard, cab structure and right side glass or screen are in good condition. Any modification to this machine must be approved by JLG to assure compliance with ROPS/FOPS certification for this cab/machine configuration. If the overhead guard or cab structure is damaged, the **CAB CANNOT BE REPAIRED**. It must be **REPLACED**.

## Section 2 - Pre-Operation and Inspection


---

### 2.6 WINDOWS

Keep all windows and mirrors clean and unobstructed.

#### Cab Door Window (if equipped)

---

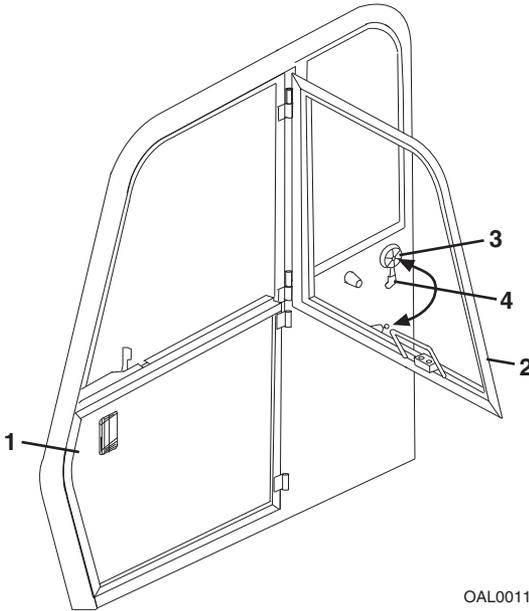

- Cab door (1) must be closed during operation.
- During operation the cab door window (2) must either be latched open or closed.
- Open the cab door window and secure it in the latch (3).
- Press latch release button inside the cab or pull on lever (4) outside the cab to unlatch the window.

---

## SECTION 3 - CONTROLS AND INDICATORS

---

### 3.1 GENERAL

This section provides the necessary information needed to understand control functions.

**Note:** *The manufacturer has no direct control over machine application and operation. The user and operator are responsible for conforming with good safety practices.*


# NOTICE

**EQUIPMENT DAMAGE.** When a red light or the transmission temperature light illuminates, immediately bring machine to a stop, lower boom and attachment to ground and stop the engine. Determine cause and correct before continued use.

## Section 3 - Controls and Indicators

### 3.2 CONTROLS

Before S/N 0160040675 excluding 0160040468 & 0160040672

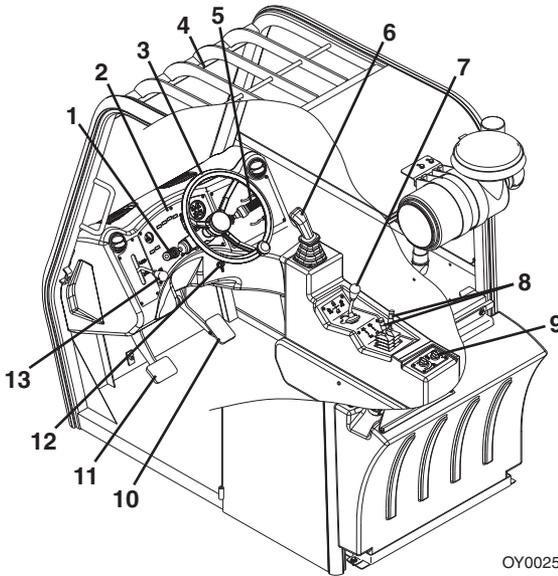


OY0025

1. Transmission Control Lever: See page 3-10.
2. Instrument Panel: See page 3-6.
3. Steering Wheel: Turning the steering wheel to the left or right steers the machine in the corresponding direction. Three steering modes are available. See "Steer Modes" on page 3-22.
4. Frame Level Indicator: Enables the operator to determine the left to right level condition of the telehandler.
5. Accessory Control Lever (if equipped): See page 3-20.
6. Boom Joystick: See page 3-12.
7. Frame Level and Attachment Tilt (if equipped) Joystick: See page 3-14.
8. Outrigger Joysticks (G10-43A): See page 3-15.
9. Heater and Air Conditioning Controls (if equipped): See page 3-19.
10. Accelerator Pedal: Pressing down the pedal increases engine and hydraulic speed.
11. Service Brake Pedal: The further the pedal is depressed, the slower the travel speed.
12. Ignition Switch: Key activated. See page 3-8.
13. Auxiliary Hydraulic Joystick (if equipped): See page 3-16.

## Section 3 - Controls and Indicators

S/N 0160040675 & After including 0160040468 & 0160040672

G9-43A

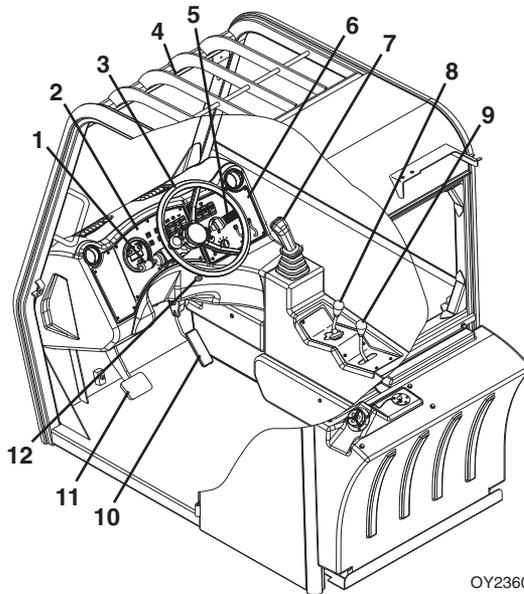


OY2360

1. Transmission Control Lever: See page 3-10.
2. Instrument Panel: See page 3-6.
3. Steering Wheel: Turning the steering wheel to the left or right steers the machine in the corresponding direction. Three steering modes are available. See "Steer Modes" on page 3-22.
4. Frame Level Indicator: Enables the operator to determine the left to right level condition of the telehandler.
5. Accessory Control Lever (if equipped): See page 3-20.
6. Right Hand Panel: See page 3-18.
7. Boom Joystick: See page 3-12.
8. Frame Level and Attachment Tilt (if equipped) Joystick: See page 3-14.
9. Auxiliary Hydraulic Joystick: See page 3-16.
10. Accelerator Pedal: Pressing down the pedal increases engine and hydraulic speed.
11. Service Brake Pedal: The further the pedal is depressed, the slower the travel speed.
12. Ignition Switch: Key activated. See page 3-8.

## Section 3 - Controls and Indicators

---

G10-43A

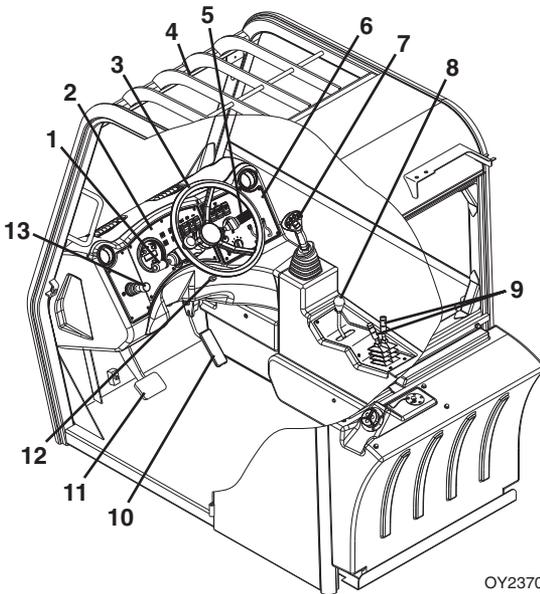

OY2370


1. Transmission Control Lever: See page 3-10.
2. Instrument Panel: See page 3-6.
3. Steering Wheel: Turning the steering wheel to the left or right steers the machine in the corresponding direction. Three steering modes are available. See "Steer Modes" on page 3-22.
4. Frame Level Indicator: Enables the operator to determine the left to right level condition of the telehandler.
5. Accessory Control Lever (if equipped): See page 3-20.
6. Right Hand Panel: See page XX.
7. Boom Joystick: See page 3-12.
8. Frame Level Joystick: See page 3-14.
9. Outrigger Joysticks: See page 3-15.
10. Accelerator Pedal: Pressing down the pedal increases engine and hydraulic speed.
11. Service Brake Pedal: The further the pedal is depressed, the slower the travel speed.
12. Ignition Switch: Key activated. See page 3-8.
13. Auxiliary Hydraulic Joystick: See page 3-16.

**This Page Intentionally Left Blank**

## Section 3 - Controls and Indicators

### Dash Controls and Indicators

Before S/N 0160040675 excluding 0160040468 & 0160040672

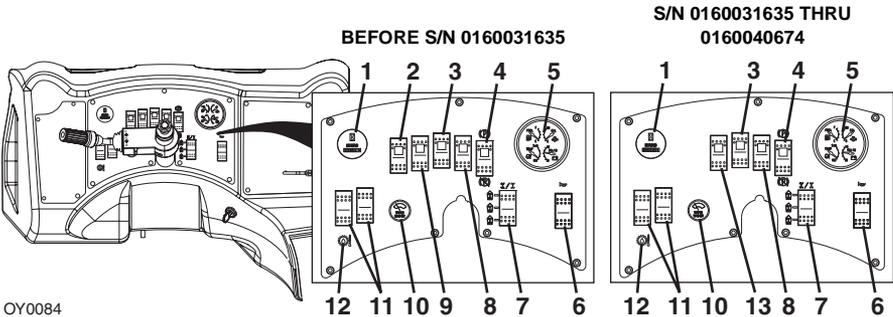


OY0084

1. **Hourmeter:** Indicates total time of engine operation in hours and tenths of hours.
2. **Boom Work Light Switch** (Before S/N 0160031635, if equipped): On/Off switch.
3. **Beacon Light Switch** (if equipped): On/Off switch.
4. **Park Brake Switch:** See page 3-9 for details.
5. **4-in-1 Gauge:**
  - a. Engine Coolant Temperature Gauge
  - b. Engine Oil Pressure Gauge
  - c. Fuel Gauge
  - d. Voltmeter indicates alternator output and battery condition.
6. **Horn Button:** Depress button to sound horn.
7. **Steer Select Switch:** Three positions: 4-wheel circle steer, 4-wheel crab steer and 2-wheel steer. See page 3-22 for details.
8. **Work Light Switch** (if equipped): On/Off switch.
9. **Driving Lights Switch** (Before S/N 0160031635, if equipped): On/Off switch.
10. **Windshield Wiper Control** (if equipped): Two speed rotary switch. Depress to activate washer fluid. Return to first position to turn off wiper.
11. **Engine Pre-Heat Switch** (Perkins Only): Depress to engage engine pre-heat. At temperatures below 32°F (0°C), do not start until engine is preheated.  
**Auxiliary Electrics Switches** (John Deere, if equipped): Enables functions of attachments that require auxiliary electrics. See Section 5 - Attachments for approved attachments and control instructions.
12. **Transmission Temperature Light:** Illuminates when transmission temperature is too high. Bring machine to a stop, lower boom and attachment to ground. Idle machine until the transmission temperature light goes out, then shut off engine. Determine cause and correct before continued use
13. **Hazard Light Switch** (S/N 0160031635 thru 0160040674, if equipped): On/Off switch.

## Section 3 - Controls and Indicators

S/N 0160040675 & After including 0160040468 & 0160040672

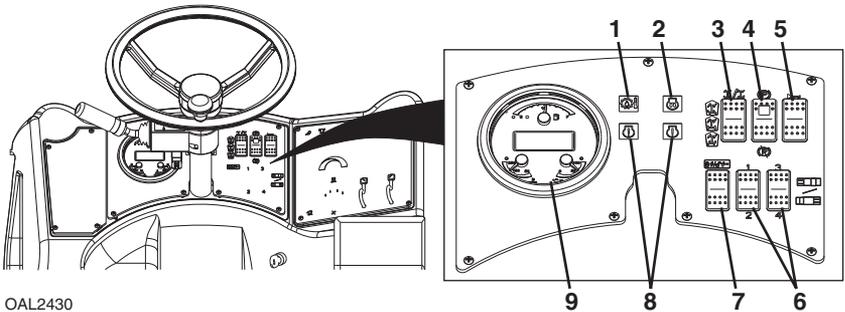

OAL2430


1. **Transmission Temperature Light**: Illuminates when transmission temperature is too high. Bring machine to a stop, lower boom and attachment to ground. Idle machine until the transmission temperature light goes out, then shut off engine. Determine cause and correct before continued use.
2. **Engine Pre-Heat Indicator Light**: Illuminates with ignition key in the "RUN" position. Light goes out when start temperature is reached. Do not start until light goes out.
3. **Steer Select Switch**: Three positions: 4-wheel circle steer, 4-wheel crab steer and 2-wheel steer. See page 3-22 for details.
4. **Park Brake Switch**: See page 3-9 for details.
5. **Horn Button**: Depress button to sound horn.
6. **Auxiliary Electrics Switches** (if equipped): Enables functions of attachments that require auxiliary electrics. See Section 5 - Attachments for approved attachments and control instructions.
7. **Warning and Check Engine Lights**: Any combination of illumination indicates an engine fault and/or parameter that is outside of acceptable range. Engine may derate.
8. **3-in-1 Gauge and Display**:
  - a. Engine Coolant Temperature Gauge
  - b. Engine Oil Pressure Gauge
  - c. Fuel Gauge
  - d. Display - Displays engine operating hours, battery voltage and engine rpm. Engine fault codes displayed when detected. See Service Manual for details.

## Section 3 - Controls and Indicators

---


### Ignition

---

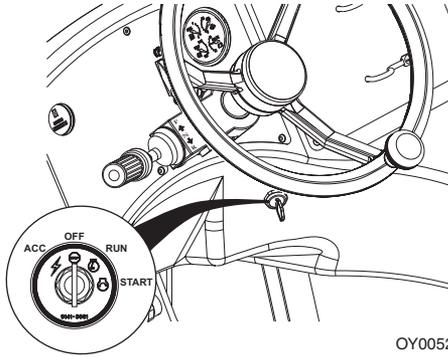

- In "ACC" or "RUN" position, voltage is available for all electrical functions.
- Full clockwise rotation to "START" engages starter motor.
- Counter-clockwise rotation to "OFF" stops engine and removes voltage from all electrical functions.

### Park Brake

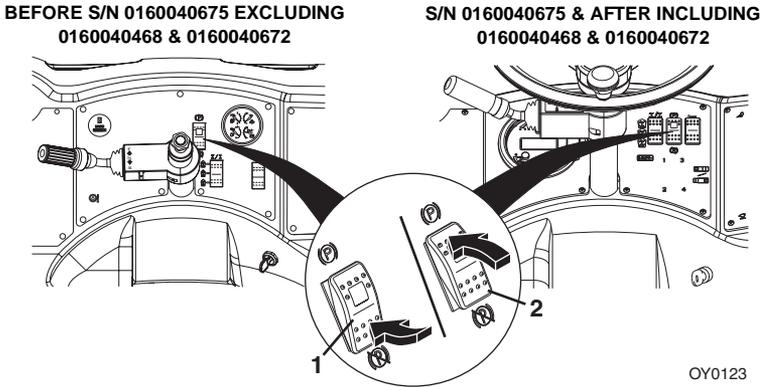

Park brake switch controls the application and release of the park brake. Indicator light on switch illuminates to indicate brake is applied.

- With the engine running and the park brake switch in "OFF" position (1), park brakes are disengaged.
- With switch in "ON" position (2), park brake is engaged and transmission will not engage forward or reverse.



## WARNING

**MACHINE ROLL-AWAY HAZARD.** Always move park brake switch to "ON" position, lower boom to ground and stop engine before leaving cab.



## WARNING

**CRUSH HAZARD.** Turning engine off applies the park brake. Applying park brake or turning engine off while traveling will cause unit to stop abruptly and could cause load loss. Either may be used in an emergency situation.


### Parking Procedure

1. Using service brake, stop telehandler in an appropriate parking area.
2. Follow "Shut-Down Procedure" on page 4-5.

## Section 3 - Controls and Indicators

### Transmission Control Lever

#### Direction of Travel Selection

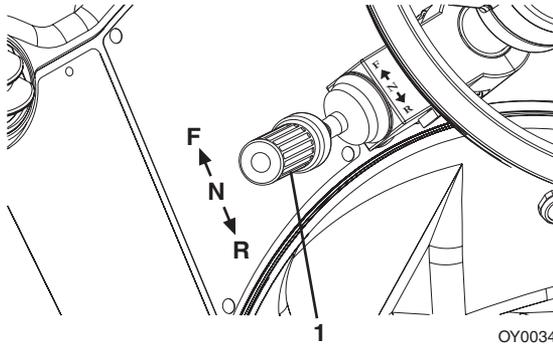

Transmission control lever (1) engages forward or reverse travel.


- Lift and push lever forward for forward travel; lift and pull lever rearward for reverse travel. Move lever to centered position for neutral.
- Forward or reverse travel can be selected while in any gear.
- When traveling in reverse, the back-up alarm will automatically sound.
- Drive in reverse and turn only at slow rates of speed.
- Do not increase engine speed with the transmission in forward or reverse and the service brake depressed in an attempt to get quicker hydraulic performances. This could cause unexpected machine movement.



## WARNING

**TIP OVER/CRUSH HAZARD.** Bring telehandler to a complete stop before shifting transmission control lever. A sudden change in direction of travel could reduce stability and/or cause load to shift or fall.

### Gear Selection

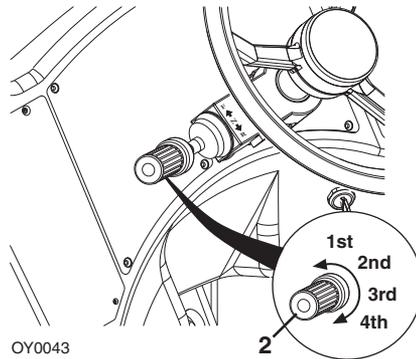


Gear selection is located on the twist grip handle (2) of transmission control lever.

- Twist hand grip to select gear.
- Select the appropriate gear for the task being performed. **Use a lower gear when transporting a load.** Use a higher gear only when driving unloaded for longer distances.
- Slow down prior to downshifting. **Do not downshift more than one gear at a time.**

### Neutral Lock Lever

(Before S/N 0160040675 excluding 0160040468 & 0160040672)

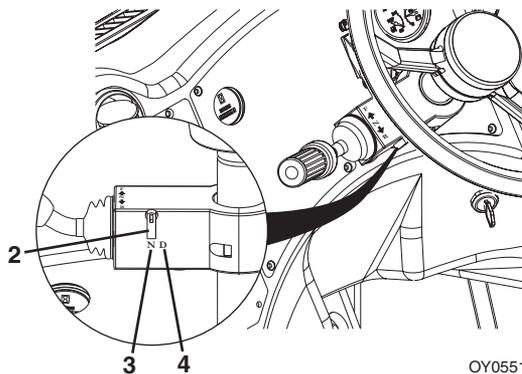

- To lock transmission control lever in the neutral position, place transmission control lever in neutral position and move neutral lock lever (2) to position "N" (3).
- To unlock, move neutral lock lever to position "D" (4).

## Section 3 - Controls and Indicators


### Boom Joystick

# WARNING

**TIP OVER/CRUSH HAZARD.** Rapid, jerky operation of controls will cause rapid, jerky movement of the load. Such movements could cause the load to shift or fall or could cause the machine to tip over.

**G9-43A If Equipped**

**G10-43A Before S/N 0160040675 excluding 0160040468 & 0160040672**

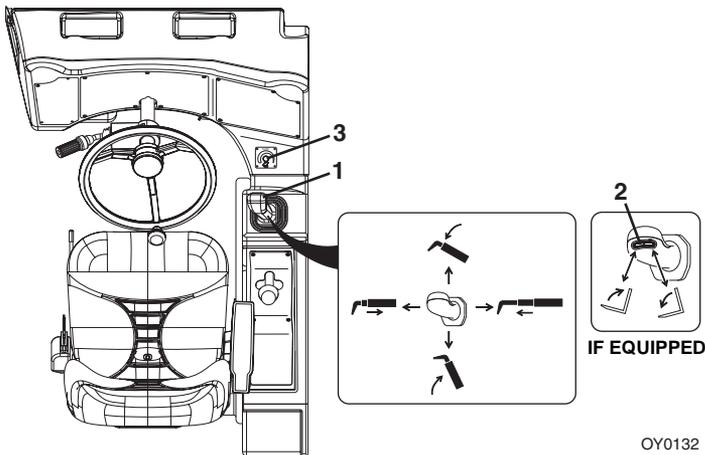

OY0132

The boom joystick (1) controls the boom and attachment tilt (if equipped) functions.

#### Boom Functions

- Move the joystick back to lift boom; move joystick forward to lower boom; move joystick right to extend boom; move joystick left to retract boom.
- The speed of boom functions depends upon the amount of joystick travel in corresponding direction. Increasing engine speed will also increase function speed.
- For two simultaneous boom functions, move the joystick between quadrants. For example; moving the joystick forward and to the left will lower and retract boom simultaneously.


#### Attachment Tilt Function (if equipped)

Tilt control is actuated by the switch (2).

- Depress the left side of the switch to tilt up; depress the right side of switch to tilt down.
- Use knob (3) to regulate the speed of the tilt. Rotate knob counter-clockwise to increase speed; rotate knob clockwise to decrease speed.

G9-43A If Equipped

G10-43A S/N 0160040675 & After including 0160040468 & 0160040672

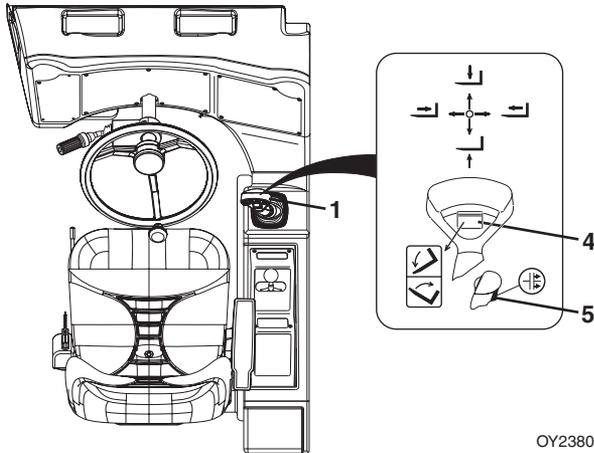

OY2380

The boom joystick (1) controls the boom, attachment tilt and clutch lock functions.

### Boom Functions

- Move the joystick back to lift boom; move joystick forward to lower boom; move joystick right to extend boom; move joystick left to retract boom.
- The speed of boom functions depends upon the amount of joystick travel in corresponding direction. Increasing engine speed will also increase function speed.
- For two simultaneous boom functions, move the joystick between quadrants. For example; moving the joystick forward and to the left will lower and retract boom simultaneously.

### Attachment Tilt Function

Attachment tilt is controlled by the roller switch (4).

- Push roller switch up to tilt attachment down; push roller switch down to tilt attachment up.


### Clutch Lock

Clutch Lock is controlled by the joystick trigger (5).

- Squeeze and release trigger once to deactivate system and have transmission disengage while depressing service brake. Quickly squeeze and release trigger twice to activate system and keep transmission engaged while depressing service brake.

## Section 3 - Controls and Indicators

### Frame Level and Attachment Tilt (if equipped) Joystick

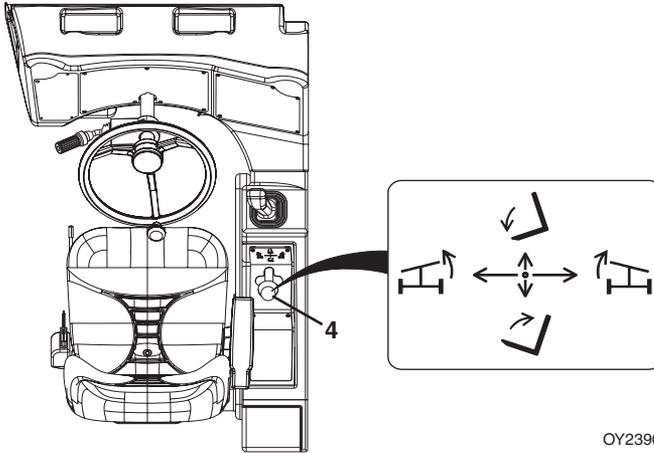

OY2390

The middle joystick (4) controls the left to right frame level and attachment tilt (if equipped) functions.

#### Frame Level

- Move the joystick left to rotate frame left, move the joystick right to rotate frame right.
- A level indicator is located above the front cab window to permit operator to determine whether the telehandler frame is level.



## WARNING

**TIP OVER HAZARD.** Always move boom as low as possible while allowing for best visibility of right hand mirror before leveling frame. Attempting to level machine with boom raised could cause it to tip over.

#### Attachment Tilt Function (if equipped)


- Move the joystick forward to tilt down, move the joystick back to tilt up.



## WARNING

**TIP OVER/CRUSH HAZARD.** Rapid, jerky operation of controls will cause rapid, jerky movement of the load. Such movements could cause the load to shift or fall or could cause the machine to tip over.

Outrigger Joysticks (G10-43A)

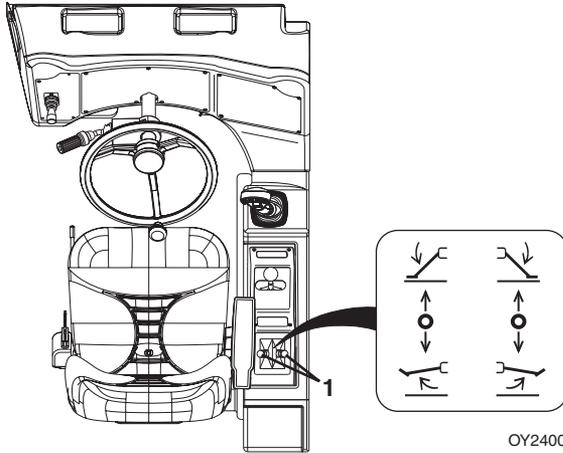

The rear joysticks (1) control the outriggers.

- The left joystick controls left outrigger and the right joystick controls right outrigger.
- Push joysticks forward to lower outriggers; push joysticks back to raise outriggers.
- Use outriggers to increase stability and/or load capacity and in leveling the telehandler. Study load charts to determine maximum load capacities, with and without outriggers.




# WARNING

**TIP OVER HAZARD.** Outriggers increase stability and load capacity only if they are used properly. Using outriggers on soft surfaces could cause telehandler to tip over. Always ensure surface can support telehandler and load.

## Section 3 - Controls and Indicators


### Auxiliary Hydraulic Joystick

BEFORE S/N 0160040675 EXCLUDING  
0160040468 & 0160040672, IF EQUIPPED

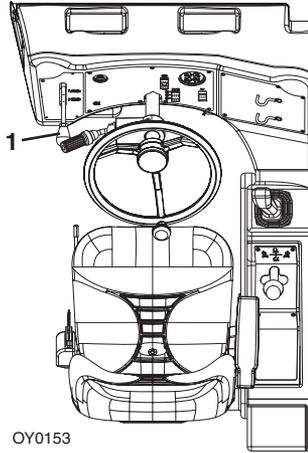


S/N 0160040675 & AFTER INCLUDING 0160040468 & 0160040672

G9-43A (IF EQUIPPED)

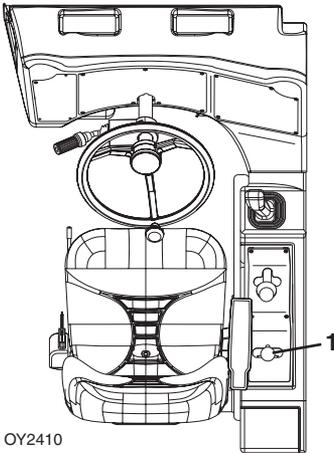

G9-43A (IF EQUIPPED), G10-43A

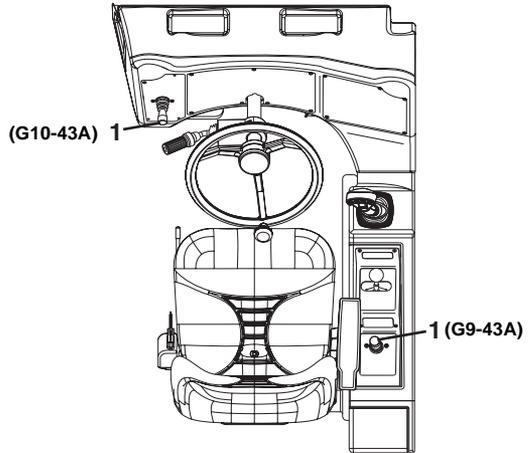


- Auxiliary hydraulic joystick (1) controls function of attachments that require hydraulic supply for operation. See Section 5 - Attachments for approved attachments and control instructions.

**This Page Intentionally Left Blank**

## Section 3 - Controls and Indicators

### Right Hand Panel (S/N 0160040675 & After including 0160040468 & 0160040672)

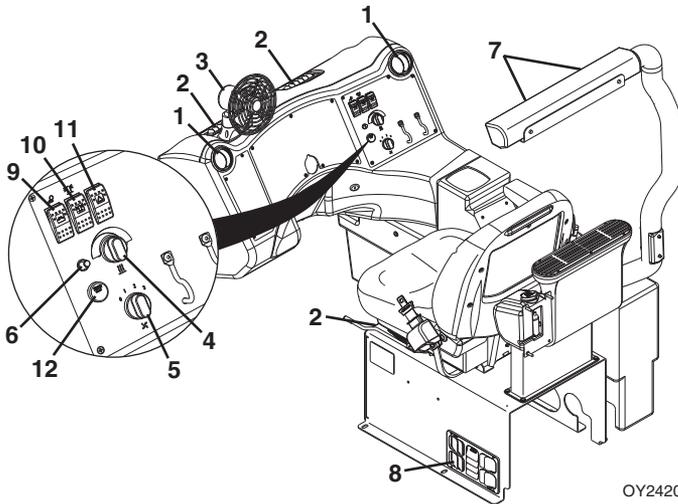

#### Heater and Air Conditioning Controls (if equipped)


1. Air Vent: Two individually adjustable round vents.
2. Air Louver: Three individually adjustable air louvers.
3. Defroster Fan: Two speed fan. Press fan switch down for slow speed; press switch up for fast speed. Return switch to middle position to turn off.
4. Temperature Control Switch: Adjustable rotary switch.
5. Fan Speed: Four-position rotary switch.
6. Air Conditioning Switch: On/Off switch.
7. Air Louver: Two individually adjustable air louvers.
8. Recirculation Vent: Open louvers when operating heat. Close louvers when operating air conditioning.

#### Other Controls (if equipped)

9. Work Light Switch: On/Off switch.
10. Beacon Light Switch: On/Off switch.
11. Hazard Light Switch: On/Off switch.
12. Windshield Wiper and Washer Switch: Two speed rotary switch. Depress to activate washer. Return to first position to turn off wiper.

## Section 3 - Controls and Indicators

### Heater and Air Conditioning Controls (Before S/N 0160040675 excluding 0160040468 & 0160040672, if equipped)

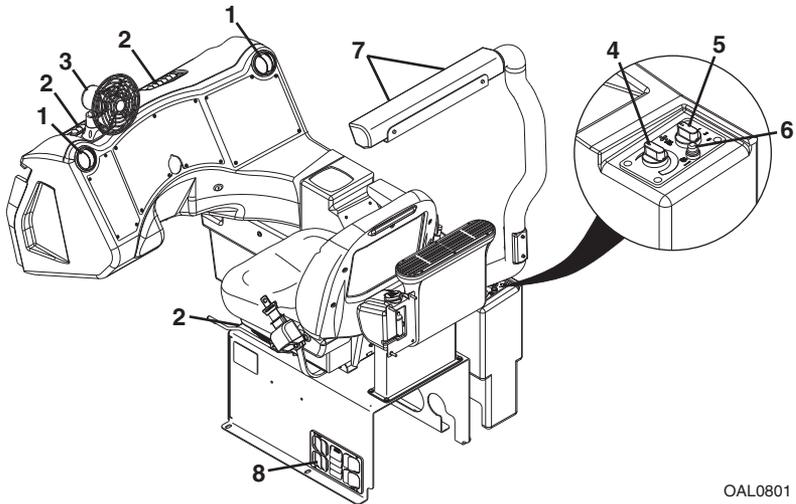

OAL0801


1. Air Vent: Two individually adjustable round vents.
2. Air Louver: Three individually adjustable air louvers.
3. Defroster Fan: Two speed fan. Press fan switch down for slow speed; press switch up for fast speed. Return switch to middle position to turn off.
4. Temperature Control Switch: Adjustable rotary switch
5. Fan Speed: Four-position rotary switch.
6. Air Conditioning Switch: On/Off switch.
7. Air Louver (S/N 0160038327 & After): Two individually adjustable air louvers.
8. Recirculation Vent (S/N 0160038327 & After): Open louvers when operating heat. Close louvers when operating air conditioning.

## Section 3 - Controls and Indicators

### Accessory Control Lever (if equipped)

Before S/N 0160031635

The accessory control lever (1) operates the turn signals, hi/low beams and hazard lights.

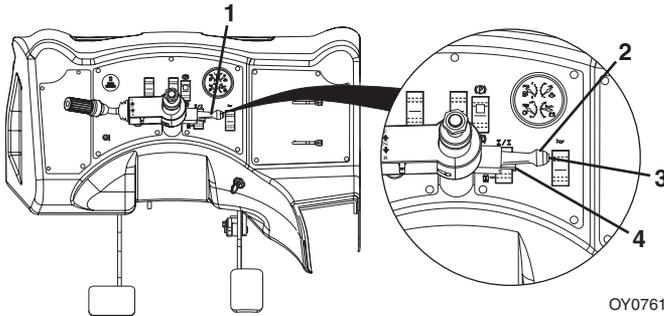

OY0761

#### Turn Signal

- Push the lever (2) forward to activate the left turn signal.
- Pull the lever back to activate the right turn signal.
- The lever must be manually returned to the center position to deactivate either turn signal. The lever will not cancel automatically after a turn.

#### High/Low Beam

- With driving lights on, depress button (3) to switch between low and high beam.


#### Hazard Lights

- Depress button (4) to activate hazard lights.

## Section 3 - Controls and Indicators

### S/N 0160031635 & After

The accessory control lever (5) operates the turn signals, parking lights and headlights.

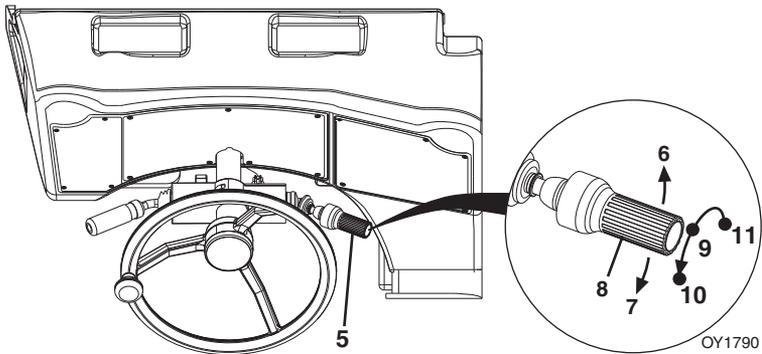

### Turn Signal

- Push the lever forward (6) to activate the left turn signal.
- Pull the lever back (7) to activate the right turn signal.
- The lever must be manually returned to the center position to deactivate either turn signal. The lever will not cancel automatically after a turn.

### Parking Lights and Headlights


- Turn the twist grip (8) of the lever counterclockwise to the first position (9) to turn on the parking lights.
- Turn the twist grip to the second position (10) to turn on the headlights.
- Raise/lower the lever to switch between low beam and high beam.
- Turn the twist grip clockwise to the OFF position (11) to turn all lights off.

## Section 3 - Controls and Indicators

### 3.3 STEER MODES


Three steer modes are available for operator use.

2-Wheel Front Steer

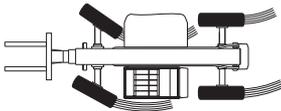


OAL2030

4-Wheel Circle Steer

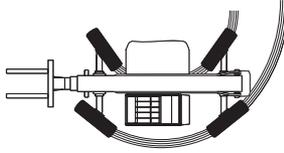


4-Wheel Crab Steer

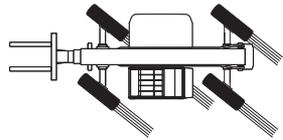

**Note:** 2-Wheel Front Steer mode is required for travel on public roads.

### Steer Mode Change


BEFORE S/N 0160040675 EXCLUDING 0160040468 & 0160040672

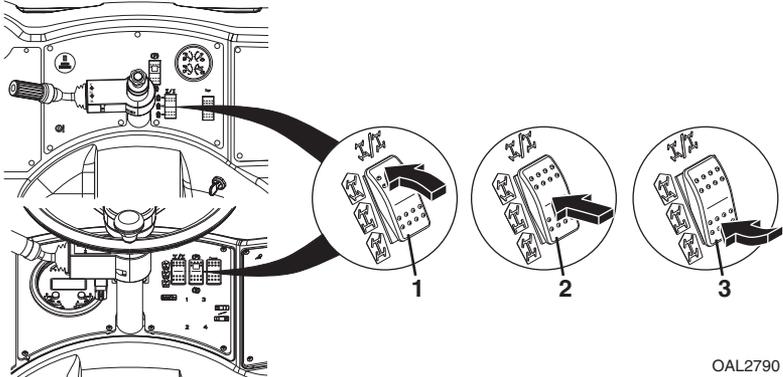


OAL2790

S/N 0160040675 & AFTER INCLUDING 0160040468 & 0160040672

1. Bring machine to a stop using service brake while either circle steer mode (1) or crab steer mode (3) is selected.

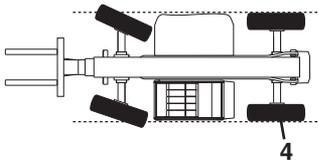

4

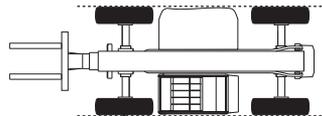

5

OAM2400

2. Turn the steering wheel until the left rear wheel (4) is aligned with the side of the machine.
3. Select front steer mode (2).
4. Turn the steering wheel until the left front wheel (5) is aligned with the side of the machine.
5. Wheels are now aligned. Select desired steer mode.


### **3.4 OPERATOR SEAT**

#### **Adjustments**

---

Prior to starting engine adjust seat for position and comfort.

**Before S/N 0160015460**

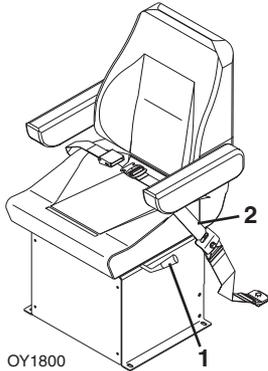


1. Fore/Aft: Pull up on handle to move seat fore and aft.
2. Seat Belt: Always fasten seat belt during operation. If required, a 3 in (76 mm) seat belt is available.

## Section 3 - Controls and Indicators

---

S/N 0160015460 & After

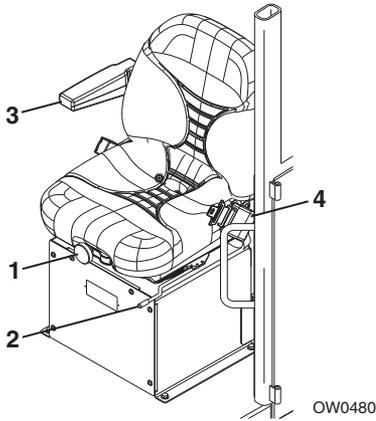

Prior to starting engine adjust seat for position and comfort as follows:

1. Suspension: Use knob to adjust suspension to the appropriate setting. Turn clockwise to increase stiffness. Turn counterclockwise to reduce stiffness.
2. Fore/Aft: Pull up on handle to move seat fore and aft.
3. Arm Rest: Arm rest can be moved up or down for comfort.
4. Seat Belt: Always fasten seat belt during operation. If required, a 3 in (76 mm) seat belt is available.

**Seat Belt**

---




Fasten seat belt as follows:

1. Grasp both free ends of the belt making certain that belt webbing is not twisted or entangled.
2. With back straight in the seat, couple the retractable end (male end) of the belt into the receptacle (buckle) end of the belt.
3. With belt buckle positioned as low on the body as possible, pull the retractable end of the belt away from the buckle until it is tight across the lap.
4. To release belt latch, depress red button on the buckle and pull free end from buckle.

## Section 3 - Controls and Indicators

---

### 3.5 BOOM ANGLE AND EXTENSION INDICATORS

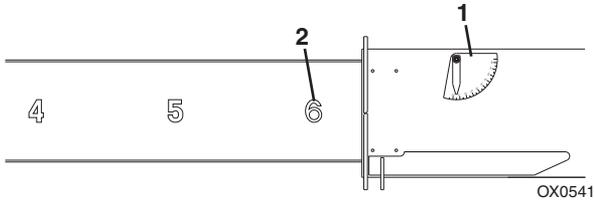

- The boom angle indicator (1) is located on the left side of the boom. Use this indicator to determine the boom angle when using the capacity chart (see “Use of the Capacity Chart” on page 5-7).
- The boom extension indicators (2) are located on the left side of the boom. Use these indicators to determine boom extension when using the capacity chart (see “Use of the Capacity Chart” on page 5-7).

## SECTION 4 - OPERATION

### 4.1 ENGINE

#### Starting the Engine

This machine can be operated under normal conditions in temperatures of 0°F to 104°F (-20°C to 40°C). Consult JLG for operation outside this range or under abnormal conditions.

If equipped for extreme cold weather, -40°F to 0°F (-40°C to -20°C), see page 4-3 for starting procedure.

1. Make sure all controls are in "Neutral" and all electrical components (lights, heater, defroster, etc.) are turned off. Set parking brake.
2. (Before S/N 0160040675 excluding 0160040468 & 0160040672) If equipped with Perkins engine and the temperature is below 32° F (0° C), turn the ignition switch to "RUN". Depress and hold engine pre-heat switch for approximately 10 seconds.  
(S/N 0160040675 & After including 0160040468 & 0160040672) Turn the ignition switch to "RUN" position and wait until engine pre-heat indicator light goes out.
3. Turn ignition switch to "START" to engage starting motor. Release key immediately when engine starts. If engine fails to start within 20 seconds, release key and allow starting motor to cool for a few minutes before trying again.
4. After engine starts, observe oil pressure gauge. If gauge remains on zero for more than ten seconds, stop engine and determine cause before restarting engine. Reference engine manual for minimum pressure at operating temperature.
5. Warm up engine at approximately 1/2 throttle.

**Note:** Engine will not start unless transmission control lever is in "Neutral" and park brake switch is applied.



## WARNING

**UNEXPECTED MOVEMENT HAZARD.** Always ensure that transmission control lever is in neutral and the service brake is applied before releasing park brake. Releasing park brake in either forward or reverse could cause the machine to move abruptly, causing an accident.

## Section 4 - Operation

---

### Cold Weather Starting Aids

---

#### John Deere Engine

JLG approved starting aids employ ether. If your telehandler is equipped with an ether starting aid, the following applies:

- Injection of ether is triggered by temperature sensor located on engine.
- At start-up, temperature sensor on engine will detect if ether is needed. Follow normal start-up procedure.
- Ether will be automatically injected if needed, to keep engine running.
- A second battery is added for additional cold-cranking capacity.



## WARNING

**ENGINE EXPLOSION.** If your telehandler is equipped with a cold start aid, do not spray additional ether into air cleaner. If machine is not equipped with cold start aid, follow instructions listed in the engine manual supplied with the telehandler.

#### Perkins or Cummins Engine

Perkins and Cummins engines are equipped with preheat for cold weather starting. Refer to “Starting the Engine” on page 4-1 for starting procedure.




## WARNING

**ENGINE EXPLOSION.** Do not use ether for cold weather starting.

### Extreme Cold Weather Starting (if equipped)

If equipped with extreme cold weather components, machine can be operated in temperatures of -40°F to 0°F (-40° C to -20° C).

1. Machine must be equipped with heating components and extreme cold weather fluids. See Section 9 - Specifications for fluid details.
2. (Before S/N 0160040675 excluding 0160040468 & 0160040672) Locate two yellow heating component extension cords stored in engine compartment. (S/N 0160040675 & After including 0160040468 & 0160040672) Locate two yellow extension cords stored behind seat in cab. Connect engine block heater to one extension cord and the battery, oil pan and hydraulic tank heaters into the other extension cord.
3. Connect each extension cord to separate A/C power supplies with a minimum rating of 15 Amps each.
4. Allow heating components to operate a minimum of 12 hours prior to machine operation.

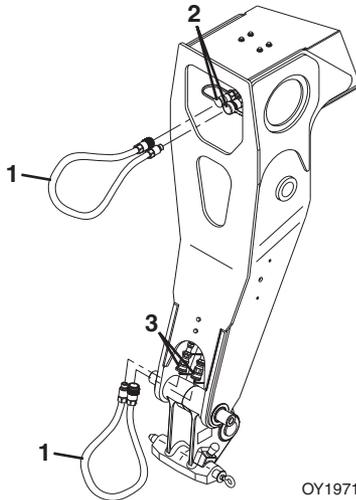

5. Locate recirculation hoses stored behind seat in cab.
6. Connect recirculation hose (1) to tilt circuit quick disconnects (2). Connect the other recirculation hose (1) to auxiliary hydraulic quick disconnects (3).
7. Follow start-up procedure on page 4-1 and allow engine to idle 20 minutes.
8. Operate tilt and auxiliary hydraulic functions continuously for five minutes to circulate the warm hydraulic fluid.
9. Operate all boom functions continuously for another five minutes.
10. Perform "Shut-Down Procedure" on page 4-5.
11. Disconnect recirculation hoses and A/C power supplies and place back in storage locations.
12. Machine is ready for operation.

## Section 4 - Operation

---

### Battery Boosted Starting

---



OW0530

If battery-boost starting (jump-start) is necessary, proceed as follows:

- Never allow vehicles to touch.
- Ensure boosting vehicle engine is running.
- Connect the positive (+) jumper cable to positive (+) post of discharged battery.
- Connect the opposite end of positive (+) jumper cable to positive (+) post of booster battery.
- Connect the negative (-) jumper cable to negative (-) post on booster battery.
- Connect opposite end of negative (-) jumper cable to ground point on machine away from discharged battery.
- Follow standard starting procedures.
- Remove cables in reverse order after machine has started.



## WARNING

**BATTERY EXPLOSION HAZARD.** Never jump start or charge a frozen battery as it could explode. Keep sparks, flames and lighted smoking materials away from the battery. Lead acid batteries generate explosive gases when charging. Wear safety glasses.

### Normal Engine Operation

---

- Observe instrument panel frequently to be sure all systems are functioning properly.
- **Be alert for unusual noises or vibration.** When an unusual condition is noticed, park machine in safe position and perform shut-down procedure. Report condition to your supervisor or maintenance personnel.
- **Avoid prolonged idling.** If the engine is not being used, turn it off.

### Shut-Down Procedure

---

When parking the telehandler, park in a safe location on flat level ground and away from other equipment and/or traffic lanes.

1. Apply the park brake.
2. Shift the transmission to "Neutral."
3. Lower forks or attachment to the ground.
4. Operate engine at low idle for 3 to 5 minutes. **DO NOT over rev engine.**
5. Shut off engine and remove ignition key.
6. Exit telehandler properly
7. Block wheels (if necessary).

## Section 4 - Operation

---

### 4.2 OPERATING WITH A NON-SUSPENDED LOAD

#### Lift Load Safely

---

- You must know the weight and load center of every load you lift. If you are not sure of the weight and load center, check with your supervisor or with the supplier of the material.



## WARNING

**TIP OVER HAZARD.** Exceeding lift capacity of the telehandler could damage the equipment and/or cause tip over.

- Know the rated load capacities (see Section 5) of the telehandler to determine the operating range in which you can safely lift, transport and place a load.

#### Picking Up a Load

---

- Note the conditions of the terrain. Adjust travel speed and reduce amount of load if conditions warrant.
- Avoid lifting double-tiered loads.
- Make sure load is clear of any adjacent obstacles.
- Adjust spacing of forks so they engage the pallet or load at maximum width. See “*Adjusting/Moving Forks*” on page 5-17.
- Approach load slowly and squarely with fork tips straight and level. **NEVER** attempt to lift a load with just one fork.
- **NEVER** operate telehandler without a proper and legible capacity chart in the operator cab for the telehandler/attachment combination you are using.

### Transporting a Load

---



After engaging the load and resting it against the backrest, tilt the load back to position it for travel. Travel in accordance with the requirements set forth in Section 1 - General Safety Practices and Section 5 - Attachments.

### Leveling Procedure

---

1. Position machine in best location to lift or place load.
2. Apply parking brake and move transmission control lever to NEUTRAL.
3. Observe level indicator to determine whether machine must be leveled prior to lifting load. Level machine with frame level joystick (see page 3-14).
4. Move boom/attachment to 4 ft (1,2 m) off ground.  
(AUS - Move boom so forks are no more than 11.8 in (300 mm) above ground surface.)

#### Important things to remember:

- Never raise the boom/attachment more than 4 ft (1,2 m) above ground unless telehandler is level.  
(AUS - Never raise the forks more than 11.8 in (300 mm) above ground surface unless telehandler is level.)
- The combination of frame leveling and load could cause the telehandler to tip over.

## **Section 4 - Operation**

---

### **Placing a Load**

---

Before placing any load be sure that:

- The landing point can safely support the weight of the load.
- The landing point is level; front to back and side to side.
- Use the capacity chart to determine safe boom extension range. See *"Use of the Capacity Chart"* on page 5-7.
- Align forks at the level load is to be placed, then extend boom slowly until load is just above area where it is to be placed.
- Lower the boom until the load rests in position and the forks are free to retract.

### **Disengaging a Load**

---

Once the load has been placed safely at the landing point, proceed as follows:

1. With the forks free from the weight of the load, the boom can be retracted and/or the telehandler can be backed away from under the load if surface will not change level condition of telehandler.
2. Lower the carriage.
3. The telehandler can now be driven from the landing location to continue work.

---

## 4.3 OPERATING WITH A SUSPENDED LOAD

---

### Lift Load Safely

---

- You must know the weight and load center of every load you lift. If you are not sure of the weight and load center, check with your supervisor or with the supplier of the material.



## WARNING

**TIP OVER HAZARD.** Exceeding lift capacity of the telehandler could damage the equipment and/or cause tip over.

- Know the rated load capacities (refer to Section 5) of the telehandler to determine the operating range in which you can safely lift, transport and place a load.

### Picking Up a Suspended Load

---


- Note the conditions of the terrain. Adjust travel speed and reduce amount of load if conditions warrant.
- Avoid lifting double-tiered loads.
- Make sure load is clear of any adjacent obstacles.
- **NEVER** operate telehandler without a proper and legible capacity chart in the operator cab for the telehandler/attachment combination you are using.
- Only use approved lifting devices rated for the lifting of the load.
- Identify the proper lifting points of the load, taking into consideration the center of gravity and load stability.
- Ensure to always properly tether loads to restrict movement.
- Refer to See *“Use of the Capacity Chart”* on page 5-7. for proper lifting guidelines in addition to the appropriate capacity chart in the operator cab.

## Section 4 - Operation

---

### Transporting a Suspended Load

---

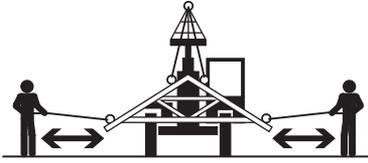

OZ3160



OW0130

- Travel in accordance with the requirements set forth in Section 1 - General Safety Practices and Section 5 - Attachments.
- For additional requirements, refer to the appropriate capacity chart in the operator cab.

#### Important things to remember:

- Ensure the boom is fully retracted.
- Never raise the load more than 11.8 in (300 mm) above ground surface or the boom more than 45°.
- The combination of frame leveling and load could cause the telehandler to tip over.
- The guide persons and operator must remain in constant communication (verbal or hand) and be in visual contact with the operator at all times.
- Never place the guide persons between the suspended load and the telehandler.
- Only transport the load at walking speed, 0.9 mph (0,4 m/s), or less.

#### Leveling Procedure

---

1. Position machine in best location to lift or place load.
2. Apply parking brake and move transmission control lever to NEUTRAL.
3. Observe level indicator to determine whether machine must be leveled prior to lifting load. Level machine with frame level joystick (see page 3-14).
4. Move boom so load is no more than 11.8 in (300 mm) above ground surface and boom/or boom is raised no more than 45°.

## **Placing a Suspended Load**

---

Before placing any load be sure that:

- The landing point can safely support the weight of the load.
- The landing point is level; front to back and side to side.
- Use the capacity chart to determine safe boom extension range. See “*Use of the Capacity Chart*” on page 5-7.
- Align load at the level load is to be placed, then position boom slowly until load is just above area where it is to be placed.
- Ensure that the guide persons and operator remain in constant communication (verbal or hand) when placing the load.


## **Disengaging a Suspended Load**

---

- Never place the guide persons between the suspended load and the telehandler.
- Once at the destination of the load, ensure to bring the telehandler to a complete stop and apply the park brake prior to disengagement of the lifting devices and tethers.

## Section 4 - Operation

### 4.4 LOADING AND SECURING FOR TRANSPORT

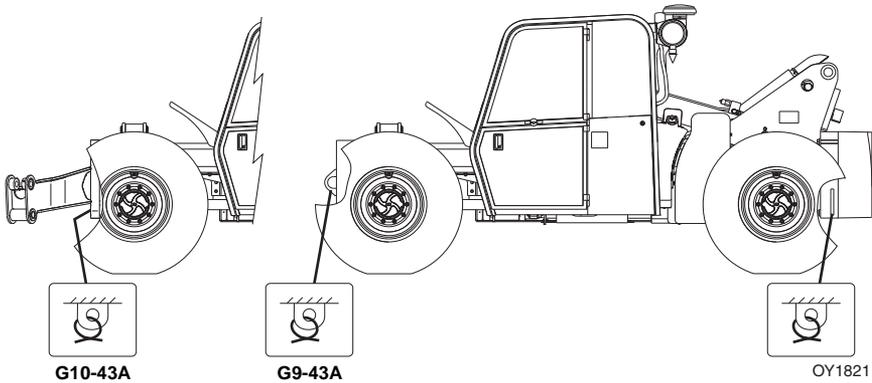

#### Tiedown

1. Level the telehandler prior to loading.
2. Using a spotter, load the telehandler with boom as low as possible.
3. Once loaded, apply parking brake and lower boom until boom or attachment is resting on deck. Move all controls to "Neutral," stop engine and remove ignition key.
4. Secure machine to deck by passing chains through the designated tie down points as shown in the figure.
5. Do not tie down front of boom.

**Note:** The user assumes all responsibility for choosing the proper method of transportation and tie-down devices, making sure the equipment used is capable of supporting the weight of the vehicle being transported and that all manufacturer's instructions and warnings, regulations and safety rules of their employer, the Department of Transportation and/or any other local, state or federal/provincial laws are followed.



## WARNING

**TELEHANDLER SLIDE HAZARD.** Before loading telehandler for transport, make sure deck, ramps and telehandler wheels are free of mud, snow and ice. Failure to do so could cause telehandler to slide.

### **Lifting**

---

- When lifting machine, it is very important that the lifting device and equipment is attached only to designated lifting points. If machine is not equipped with lifting lugs contact JLG Product Safety for information.
- Make adjustments to the lifting device and equipment to ensure the machine will be level when elevated. The machine must remain level at all times while being lifted.
- Ensure that the lifting device and equipment is adequately rated and suitable for the intended purpose. See Section 9 - Specifications for machine weight.
- Remove all loose items from machine prior to lifting.
- Lift machine with smooth, even motion. Set machine down gently. Avoid quick or sudden motions that could cause shock loads to machine and/or lifting devices.

**This Page Intentionally Left Blank**

## **SECTION 5 - ATTACHMENTS**

---

### **5.1 APPROVED ATTACHMENTS**

To determine if an attachment is approved for use on the specific telehandler you are using, perform the following prior to installation.

#### **Before S/N 0160037671**

- The attachment model/option number on the attachment identification plate must match the attachment number on a capacity chart located in the operator cab.
- The model on the capacity chart must match the model telehandler being used.
- The load center of the fork (if equipped) must match the load center as indicated on the capacity chart.
- Hydraulically powered attachments must only be used on machines equipped with auxiliary hydraulics.
- Hydraulically powered attachments that require auxiliary electrics must only be used on machines equipped with auxiliary hydraulics and electrics.

#### **S/N 0160037671 & After**

- The attachment type, weight, dimensions and load center must be equal to or less than the data shown on a capacity chart located in the operator cab.
- The model on the capacity chart must match the model telehandler being used.
- Hydraulically powered attachments must only be used on machines equipped with auxiliary hydraulics.
- Hydraulically powered attachments that require auxiliary electrics must only be used on machines equipped with auxiliary hydraulics and electrics.

If any of the above conditions are not met, do not use the attachment. The telehandler may not be equipped with the proper capacity chart or the attachment may not be approved for the model telehandler being used. Contact JLG or a local distributor for further information.

## **Section 5 - Attachments**

---

### **5.2 UNAPPROVED ATTACHMENTS**

Do not use unapproved attachments for the following reasons:

- Range and capacity limitations for “will fit,” homemade, altered, or other non-approved attachments cannot be established.
- An overextended or overloaded telehandler can tip over with little or no warning and cause serious injury or death to the operator and/or those working nearby.
- The ability of a non-approved attachment to perform its intended function safely cannot be assured.



## **WARNING**

Use only approved attachments. Attachments which have not been approved for use with your telehandler could cause machine damage or an accident.

### 5.3 JLG SUPPLIED ATTACHMENTS

Before S/N 0160037671

Attachment	Part Number	Applicable Model G9-43A
Carriage, 48 in (1220 mm)	91405073	X
Carriage, 50 in (1270 mm)	1170019	X
Carriage, 60 in (1524 mm)	1170022	X
Carriage, 72 in (1829 mm)	91405074	X
Carriage, 72 in (1829 mm)	1170025	X
Carriage, Drywall 72 in (1829 mm)	91405077	X
Side Tilt Carriage, 48 in (1220 mm)	91405101	X
Side Tilt Carriage, 72 in (1829 mm)	91405079	X
100° Swing Carriage, 72 in (1829 mm)	91405075	X
180° Swing Carriage, 72 in (1829 mm)	91563146	X
6 ft Mast Carriage, 48 in (1220 mm)	91405060	X
6 ft Mast Carriage, 72 in (1829 mm)	91405061	X
6 ft Mast Carriage, 100°, 72 in (1829 mm)	91405070	X
Fork, Pallet 1.75x4x48 in (44x101x1220 mm)	91403364	X
6 ft Mast Carriage, 100°, 60 in (1524 mm)	91415026	X
Fork, Pallet 2x6x60 in (50x152x1524 mm)	91403580	X
8 ft Mast Carriage with Side Tilt, 72 in (1830 mm)	1001108669	X
Fork, Pallet 2.25x4x48 in (57x101x1220 mm)	91513206	X
Fork, Pallet 2.36x4x48 in (60x101x1220 mm)	2340045	X
Fork, Pallet 2.25x5x48 in (57x127x1220 mm)	91563141	X
Fork, Pallet 2.36x5x48 in (60x127x1220 mm)	2340038	X
Fork, Pallet 1.75x6x48 in (44x152x1220 mm)	91403361	X
Fork, Pallet 2x4x48 in (50x101x1220 mm)	91403362	X
Fork, Pallet 2x6x48 in (50x152x1220 mm)	91403363	X
Fork, Pallet 2x6x60 in (50x152x1524 mm)	91403360	X
Fork, Pallet 2x6x60 in (50x152x1524 mm)	91403365	X
Fork, Lumber 2.25x6x60 in (57x152x1524 mm)	91563142	X
Fork, Dual Taper 1.75x7x60 in (44x178x1524 mm)	2340046	X
Fork, Dual Taper 2.36x6x60 in (60x152x1524 mm)	2340039	X
Fork, Dual Taper 2x6x72 in (50x152x1830mm)	1001092391	X
Fork, Lumber 2.25x6x72 in (57x152x1830 mm)	91563143	X
Fork, Cubing 2x2x48 in (50x50x1220 mm)	91403359	X
Fork, Block 2x2x48 in (50x50x1220 mm)	2340037	X
Fork, Drywall 1.75x4x48 in (50x101x1220 mm)	91403366	X
Bucket, 60 in - 0.75 yd <sup>3</sup>	91405054	X

## Section 5 - Attachments


Attachment	Part Number	Applicable Model G9-43A
Bucket, 74 in - 1.25 yd <sup>3</sup>	91405055	X
Bucket, 102 in - 1.25 yd <sup>3</sup>	91405071	X
Grapple Bucket, 96 in - 1.75 yd <sup>3</sup>	0930021	X
Hook, Fork Mounted	90553036	X
Hook, Fork Mounted	91565094	X
Truss Boom, 10 ft (3048 mm)	91405083	X
Truss Boom w/ Winch, 10 ft (3048 mm)	91405081	X
Truss Boom, 15 ft (4572 mm)	91405082	X
Truss Boom w/ Winch, 15 ft (4572 mm)	91405080	X
Winch, Boom Head-Mounted	91515036	X
Platform, Quick Switch Mounted	91415025	X
Platform, Fork Mounted (ASME)	1001092280	X
	1001103637	X
Platform, Fork Mounted (ASME - French)	1001097072	X
	1001103736	X
Platform, Fork Mounted (ISO)	1001096306	X
	1001103730	X

**S/N 0160037671 & After**

Attachment	Part Number	Applicable Model	
		G9-43A	G10-43A
Carriage, 50 in (1270 mm)	1170021	X	X
Carriage, 60 in (1524 mm)	1170024	X	X
Carriage, 72 in (1829 mm)	1170027	X	X
Side Tilt Carriage, 50 in (1270 mm)	1170054	X	X
Side Tilt Carriage, 60 in (1524 mm)	1001101956	X	X
Side Tilt Carriage, 72 in (1829 mm)	1170057	X	X
90° Swing Carriage, 72 in (1829 mm)	1001095418	X	X
Dual Fork Positioning Carriage, 50 in (1270 mm)	7301295	X	X
8 ft Mast Carriage, 50 in (1270 mm)	1001108668	X	X
8 ft Mast Carriage w/ Side Tilt, 50 in (1270 mm)	1001108669	X	X
Fork, Pallet 2.36x4x48 in (60x100x1220 mm)	2340045	X	X
Fork, Pallet 2.36x5x48 in (60x127x1220 mm)	2340038	X	X
Fork, Dual Taper 1.75x7x60 in (44x178x1524 mm)	2340046	X	X
Fork, Dual Taper 2.36x6x60 in (60x152x1524 mm)	2340039	X	X
Fork, Dual Taper 2x6x72 in (50x152x1830mm)	1001092391	X	X
Fork, Block 2x2x48 in (50x50x1220 mm)	2340037	X	X
Bucket, 72 in - 1.0 yd <sup>3</sup>	1001100822	X	X
Bucket, 96 in - 1.5 yd <sup>3</sup>	1001100823	X	X
Bucket, 102 in - 2.0 yd <sup>3</sup>	1001100824	X	X
Grapple Bucket, 96 in - 1.75 yd <sup>3</sup>	0930020	X	X
Hook, Fork Mounted	90553036	X	X
Hook, Fork Mounted	91565094	X	X
Truss Boom, 12 ft (3658 mm)	1001099902	X	X
Truss Boom w/ Winch, 12 ft (3658 mm)	1001099351	X	X
Truss Boom, 15 ft (4572 mm)	1001099901	X	X
Platform, Fork Mounted (ASME)	1001092280	X	X
	1001103637	X	X
Platform, Fork Mounted (ASME - French)	1001097072	X	X
	1001103736	X	X
Platform, Fork Mounted (ISO)	1001096306	X	X
	1001103730	X	X

## Section 5 - Attachments

### 5.4 TELEHANDLER/ATTACHMENT/FORK CAPACITY

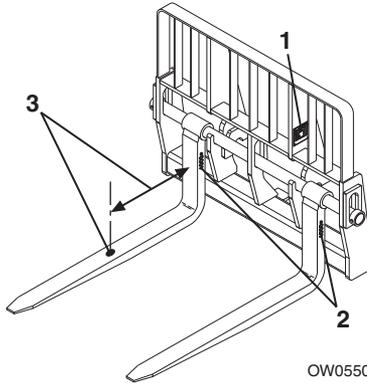

Prior to installing the attachment verify it is approved and the telehandler is equipped with the proper capacity chart. See “*Approved Attachments*” on page 5-1.

To determine the maximum capacity of the telehandler and attachment, use the **smallest** of the following capacities:

- Capacity stamped on the attachment identification plate (1).
- Fork capacities and load centers are stamped on the side of each fork (2) (if equipped). This rating specifies the maximum load capacity that the individual fork can safely carry at the maximum load center (3). Total attachment capacity is multiplied by the number of forks on the attachment (if equipped), up to the maximum capacity of the attachment.
- Maximum capacity as indicated on the proper capacity chart. See “*Approved Attachments*” on page 5-1.
- When the load rating of the telehandler differs from the capacity of the forks or attachment, the lower value becomes the overall load capacity.

Use the proper capacity chart to determine maximum capacity at various machine configurations. Lifting and placing a load may require use of more than one capacity chart based on machine configuration.

Other than block forks, all forks should be used in matched pairs, block forks used in matched sets.



## WARNING

Never use an attachment without the appropriate JLG approved capacity chart installed on the telehandler.


### 5.5 USE OF THE CAPACITY CHART

To properly use the capacity chart (see page 5-8), the operator must first determine and/or have the following:

1. An approved attachment. See "Approved Attachments" on page 5-1.
2. The proper Capacity Chart(s).
3. Weight of the load being lifted.
4. Load placement information:
  - a. HEIGHT where the load is to be placed.
  - b. DISTANCE from the front tires of the telehandler where the load is to be placed.
5. On the capacity chart, find the line for the height and follow it over to the distance.
6. The number in the load zone where the two cross is the maximum capacity for this lift. If the two cross at a division between zones, the smaller number must be used.

The number in the load zone must be equal to or greater than the weight of the load to be lifted. Determine the limits of the load zone on the capacity chart and keep within these limits.


### Capacity Indicator Locations

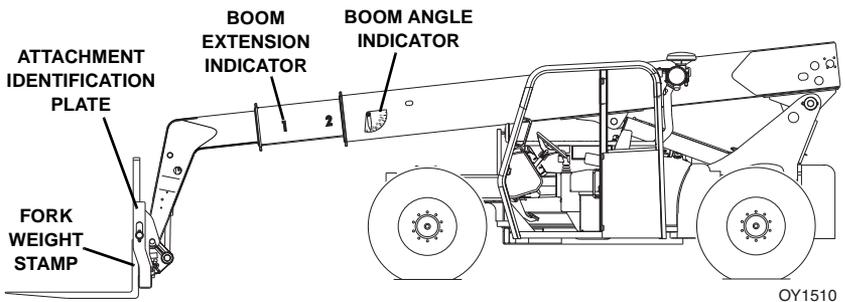

## Section 5 - Attachments

### Sample Capacity Chart

Before S/N 0160037671

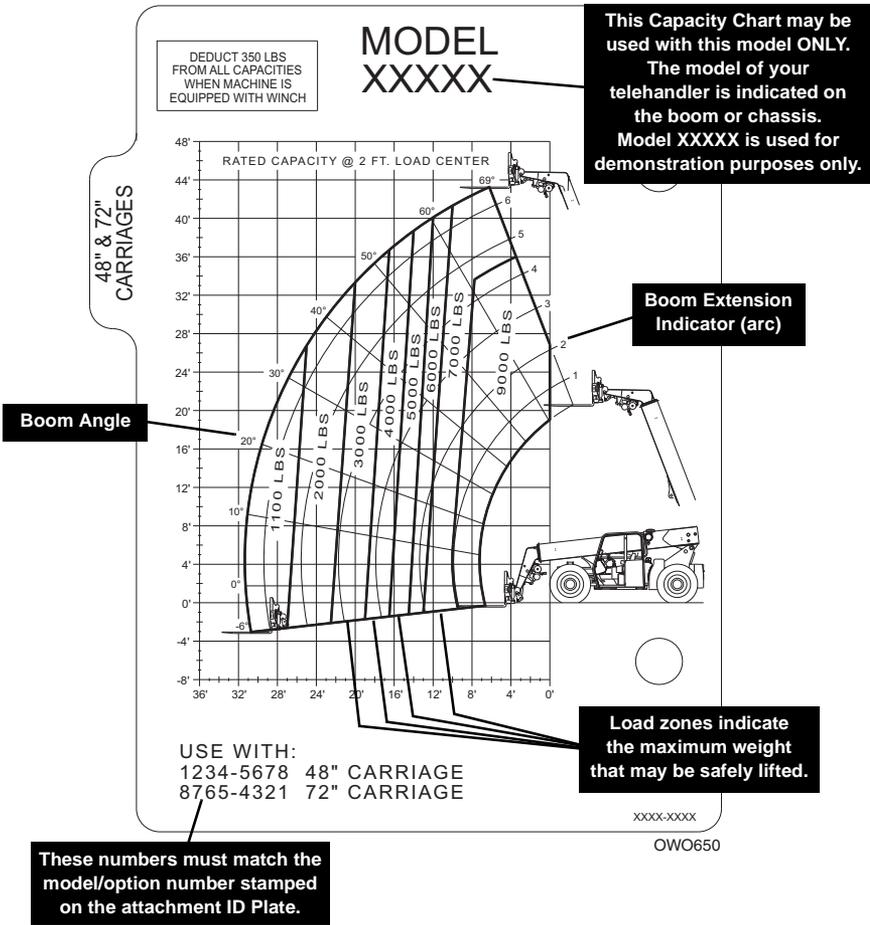

**Note:** This is a sample capacity chart **only!** **DO NOT** use this chart, use the one located in your operator cab.

# ! WARNING

**TIP OVER HAZARD.** All loads shown on rated capacity chart are based on machine being on firm ground with frame level (see page 4-7); the forks being positioned evenly on carriage; the load being centered on forks; proper size tires being properly inflated; and the telehandler being in good operating condition.

## Section 5 - Attachments

---


To identify the proper capacity chart on telehandlers equipped with outriggers, refer to the following icons which may be located on the capacity chart.

- Use when lifting a load with outriggers up.



OAL1090

- Use when lifting a load with outriggers down.

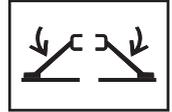

OAL1100



## Section 5 - Attachments


To identify the proper load chart on telehandlers equipped with outriggers, refer to the following icons which may be located on the load chart.

- Use when lifting a load with outriggers up.



OAL1090

- Use when lifting a load with outriggers down.

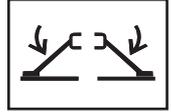

OAL1100

## Section 5 - Attachments

### Example

A contractor owns a model xxxxx telehandler with a fork carriage. He knows this attachment may be used with his model since:

#### Before S/N 0160037671


- The attachment model/option number matches the attachment number on the capacity chart.
- The capacity chart is clearly marked for model xxxxx and corresponds with machine configuration being used.

#### S/N 0160037671 & After

- The attachment style, weight, dimensions and load center match the attachment data on the capacity chart.
- The capacity chart is clearly marked for model xxxxx and corresponds with machine configuration being used.


Below are examples with various conditions the contractor may encounter and whether or not the load may be lifted.

	Load Weight	Distance	Height	OK to Lift
1	6000 lb (2722 kg)	18 ft (5,5 m)	12 ft (3,7 m)	Yes
2	4000 lb (1814 kg)	30 ft (9,1 m)	26 ft (7,9 m)	NO
3	7500 lb (3402 kg)	8 ft (2,4 m)	24 ft (7,3 m)	Yes
4	5750 lb (2608 kg)	12 ft (3,7 m)	44 ft (13,4 m)	NO

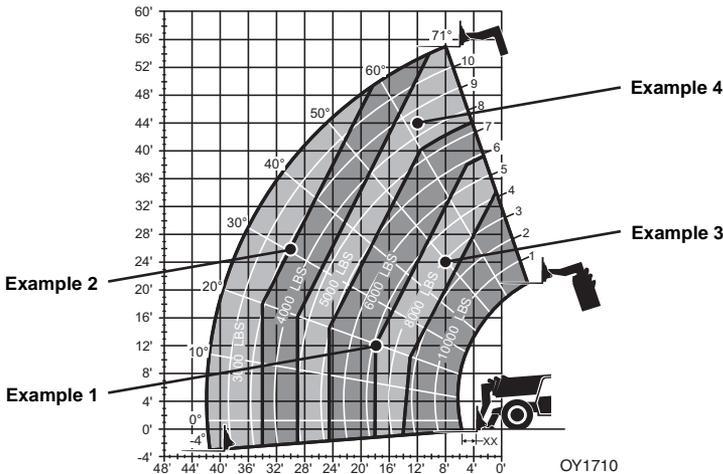

**Note:** This is a sample capacity chart **only!** **DO NOT** use this chart, use the one located in your operator cab.

5.6 ATTACHMENT INSTALLATION

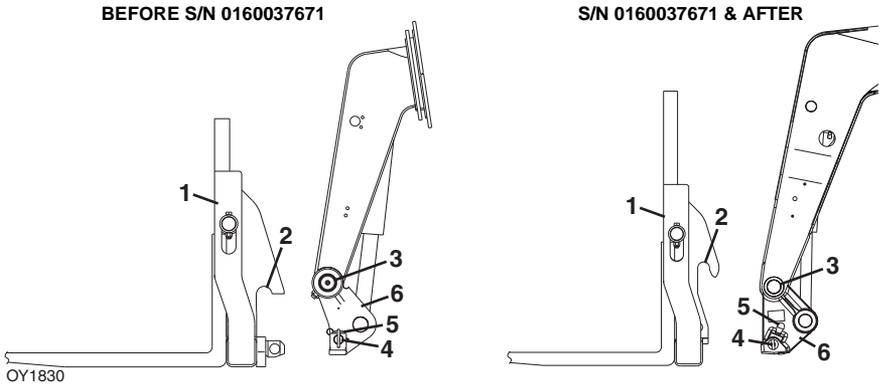

1. Attachment
2. Attachment Pin Recess
3. Attachment Pin
4. Lock Pin
5. Retaining Pin
6. Quick Switch (attachment tilt control in cab, see page 3-12 or page 3-14)



**WARNING**


**CRUSH HAZARD.** Always be certain that carriage or attachment is properly positioned on boom and is secured by lock pin and retainer pin. Failure to ensure proper installation could permit carriage/attachment/load to disengage.

## Section 5 - Attachments


### Before S/N 0160037671

This installation procedure is designed for one-person operation. Prior to exiting cab, perform "Shut-Down Procedure" on page 4-5.


1. Tilt quick switch back to provide clearance. Check to be sure lock pin is secured in out position with retainer pin.

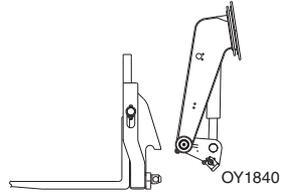


2. Align attachment pin with recess in attachment. Raise boom slightly to engage attachment pin in recess.

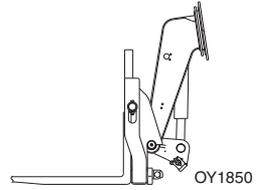


3. Tilt quick switch forward to engage attachment.

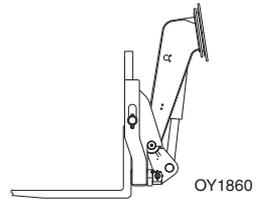

4. Remove retainer pin and slide lock pin in fully. Secure lock pin in locked position using retainer pin.

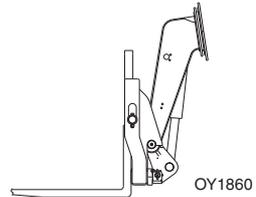

5. If equipped, swing attachment saddles down and pin in place.

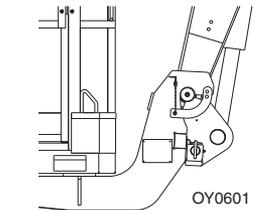


6. If equipped, connect auxiliary hydraulic hoses. See "Hydraulic Operated Attachment" on page 5-16.
7. If equipped, connect auxiliary electric harness.

## Section 5 - Attachments


### S/N 0160037671 & After

This installation procedure is designed for one-person operation. Prior to exiting cab, perform “*Shut-Down Procedure*” on page 4-5.


1. Tilt quick switch back to provide clearance.  
Check to be sure lock pin is removed.

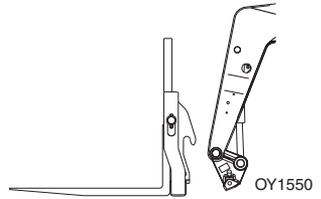


2. Align attachment pin with recess in attachment.  
Raise boom slightly to engage attachment pin in recess.

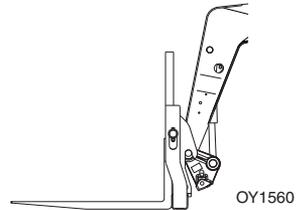

3. Tilt quick switch forward to engage attachment.

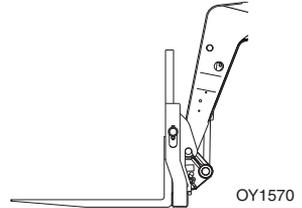

4. Lift retainer pin and insert lock pin completely through quick switch. Release retainer pin and ensure lock pin is secured.

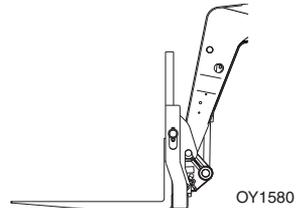


5. If equipped, connect auxiliary hydraulic hoses. See “*Hydraulic Operated Attachment*” on page 5-16.
6. If equipped, connect auxiliary electric harness.

## Section 5 - Attachments


### Hydraulic Operated Attachment

1. Install attachment (see page 5-13).
2. Lower attachment to ground and perform "Shut-Down Procedure" on page 4-5.

BEFORE S/N 0160037671

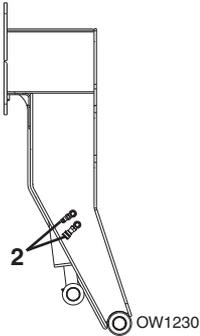

S/N 0160037671 & AFTER

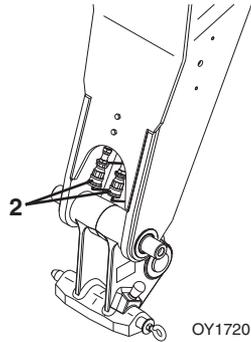

3. Connect attachment hoses to both auxiliary fittings (2).

### 5.7 ADJUSTING/MOVING FORKS

Carriages may have different locations where forks can be positioned. Two different methods can be used for repositioning, depending upon the carriage structure.

**Note:** Apply a light coating of appropriate lubricant to ease sliding of forks or fork bar.

#### To slide forks:

1. Ensure attachment is properly installed. See "Attachment Installation" on page 5-13.
2. Elevate attachment to approximately 5 ft (1,5 m) and tilt carriage forward until fork heel is free from attachment.
3. Stand at the side of the carriage. To slide fork toward the center of the carriage, push the fork near the fork eye. To slide fork toward the edge of the carriage, pull the fork near the fork eye. To avoid pinching, do not place fingers or thumb between the fork and carriage structure.

#### If removing fork bar is necessary:

1. Rest forks on ground.
2. Remove fork bar.
3. Reposition forks.
4. Reinstall the fork bar and fork bar retaining mechanism(s).

## Section 5 - Attachments

---

### 5.8 ATTACHMENT OPERATION

- Capacities and range limits for the telehandler change depending on the attachment in use.
- Separate attachment instructions must be kept in manual holder in cab with this Operation & Safety Manual. An additional copy must be kept with the attachment if it is equipped with a manual holder.

**Note:** Operations described within this section reference the G9-43A attachment tilt and frame level joystick configuration. Refer to page 3-12 if equipped with a different joystick configuration.


## NOTICE

**EQUIPMENT DAMAGE.** Some attachments may contact the front tires or machine structure when the boom is retracted and the attachment is rotated. Improper use of attachment may result in attachment or machine structural damage.

## NOTICE


**EQUIPMENT DAMAGE.** Avoid contact with any structure or object when lifting a load. Maintain clearance around boom structure and load. Failure to maintain clearance may result in attachment or machine structural damage.

### Carriage w/Forks

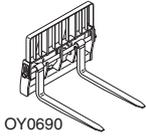

Use Carriage Attachment Capacity Chart

To determine maximum capacity, refer to “*Telehandler/ Attachment/Fork Capacity*” on page 5-6.

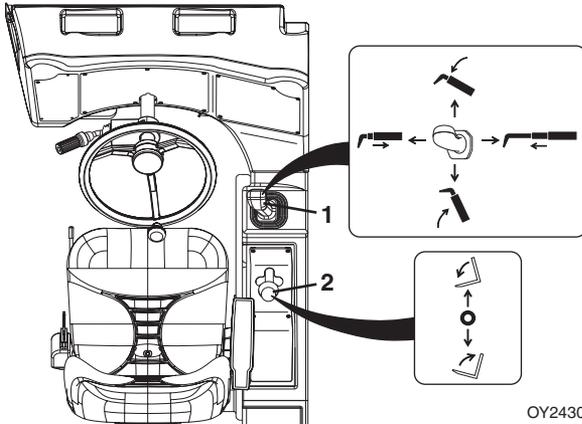

The boom joystick (1) controls lift/lower and extend/retract movement of the boom.

The attachment tilt joystick (2) controls fork tilt.

- Move joystick back to tilt up.
- Move joystick forward to tilt down.

#### Installation Procedure:

- Refer to “*Attachment Installation*” on page 5-13.

#### Equipment Damage Precautions:

- Do not use forks as a lever to pry material. Excessive prying forces could damage forks or machine structure.
- Do not attempt to lift loads that are attached or connected to another object.

## Section 5 - Attachments


### Side Tilt Carriage



OAL1550

Use Side Tilt Carriage Capacity Chart

To determine maximum capacity, refer to "Telehandler/Attachment/Fork Capacity" on page 5-6.

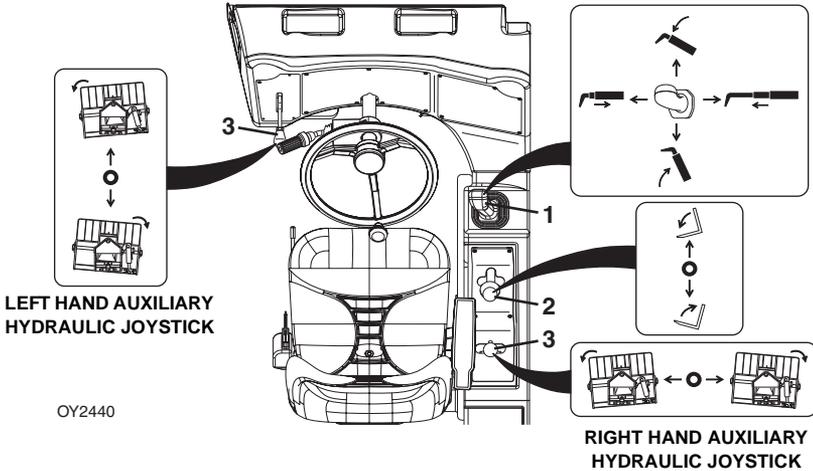

The boom joystick (1) controls lift/lower and extend/retract movement of the boom.

The attachment tilt joystick (2) controls fork tilt.

- Move joystick back to tilt up.
- Move joystick forward to tilt down.

#### To Side Tilt:

The auxiliary hydraulic joystick (3) controls the carriage side tilt.

#### Left Hand Hydraulic Joystick

- Move joystick up to (side) tilt left.
- Move joystick down to (side) tilt right.

#### Right Hand Hydraulic Joystick

- Move joystick left to (side) tilt left.
- Move joystick right to (side) tilt right.

### Installation Procedure:

- Refer to “Attachment Installation” on page 5-13.



# WARNING

**CRUSH HAZARD.** Do not use side tilt to push or pull objects or load. Failure to comply could cause object or load to fall.

### Operation:


- Approach load with forks centered on load and stop telehandler.
- Level telehandler before side tilting carriage to engage load.
- Side tilt carriage to left or right to align forks with load and engage load.
- Raise load slightly and level carriage side to side.
- Travel in accordance with the requirements set forth in Section 1 - General Safety Practices.

### Equipment Damage Precautions:

- Do not use forks as a lever to pry material. Excessive prying forces could damage forks or machine structure.
- Do not attempt to lift loads that are attached or connected to another object.

## Section 5 - Attachments


### Swing Carriage

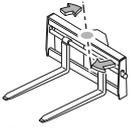

OU2150

Use Swing Carriage Capacity Chart

To determine maximum capacity, refer to "Telehandler/Attachment/Fork Capacity" on page 5-6.

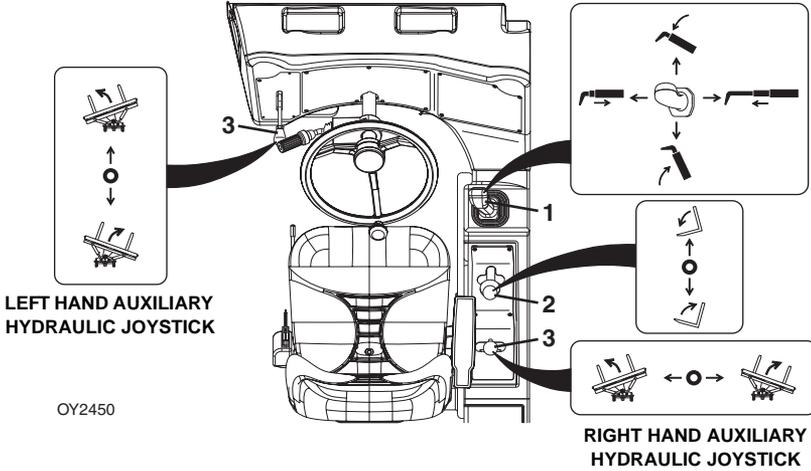

The boom joystick (1) controls lift/lower and extend/retract movement of the boom.

The attachment tilt joystick (2) controls fork tilt.

- Move joystick back to tilt up.
- Move joystick forward to tilt down.

#### To Swing:

The auxiliary hydraulic joystick (3) controls the swing function.

#### Left Hand Hydraulic Joystick

- Move joystick up to swing left.
- Move joystick down to swing right.

#### Right Hand Hydraulic Joystick

- Move joystick left to swing left.
- Move joystick right to swing right.

### Installation Procedure:

- Refer to “Attachment Installation” on page 5-13.



## WARNING

**CRUSH HAZARD.** Always level forks (horizontally) and telehandler frame before swinging load to side. Swinging unlevel forks could cause load to slide off forks.



## WARNING

**CRUSH HAZARD.** Do not use swing carriage to push or pull objects or load. Failure to comply could cause object or load to fall.



## WARNING

**CRUSH HAZARD.** Use retaining pin (if equipped) for locking swing frame to fixed frame when carrying loads greater than 5000 lb. Failure to comply could cause object or load to fall.

### Operation:


- To drive with a load, keep forks pointed forward and travel in accordance with the requirements set forth in Section 1 - General Safety Practices.

### Equipment Damage Precautions:

- Do not use forks as a lever to pry material. Excessive prying forces could damage forks or machine structure.
- Do not attempt to lift loads that are attached or connected to another object.

## Section 5 - Attachments


### Dual Fork Positioning Carriage

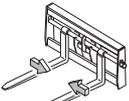

OZ3670

Use Carriage Attachment Capacity Chart

To determine maximum capacity, refer to “Telehandler/Attachment/Fork Capacity” on page 5-6.

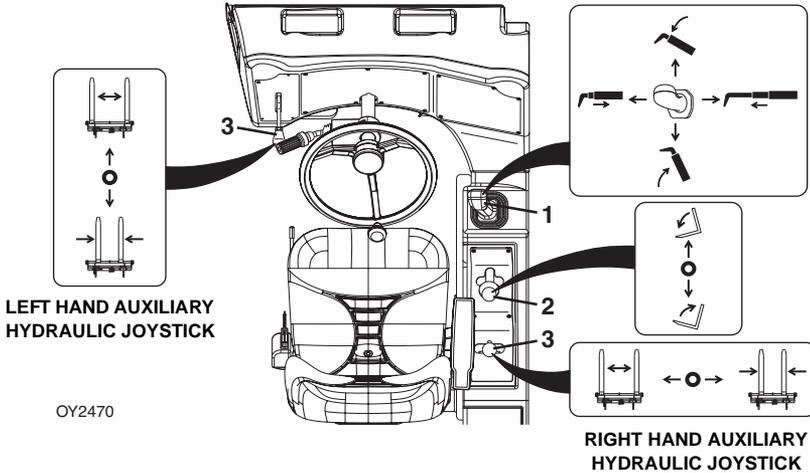

The boom joystick (1) controls lift/lower and extend/retract movement of the boom.

The attachment tilt joystick (2) controls fork tilt.

- Move joystick back to tilt up.
- Move joystick forward to tilt down.

#### To Fork Position:

The auxiliary hydraulic joystick (3) controls the fork position.

#### Left Hand Hydraulic Joystick

- Move joystick up to shift forks out.
- Move joystick down to shift forks in.

#### Right Hand Hydraulic Joystick

- Move joystick left to shift forks out.
- Move joystick right to shift forks in.

### Installation Procedure:

- Refer to “Attachment Installation” on page 5-13.



# WARNING

**CRUSH HAZARD.** Do not use fork positioning to push or pull objects or load. Failure to comply could cause object or load to fall.

### Operation:


- Travel in accordance with the requirements set forth in Section 1 - General Safety Practices.

### Equipment Damage Precautions:

- Do not use forks as a lever to pry material. Excessive prying forces could damage forks or machine structure.
- Do not attempt to lift loads that are attached or connected to another object.


## Section 5 - Attachments

### Mast Carriage

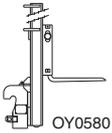

Use Mast Carriage Capacity Chart

To determine maximum capacity, refer to "Telehandler/ Attachment/Fork Capacity" on page 5-6.

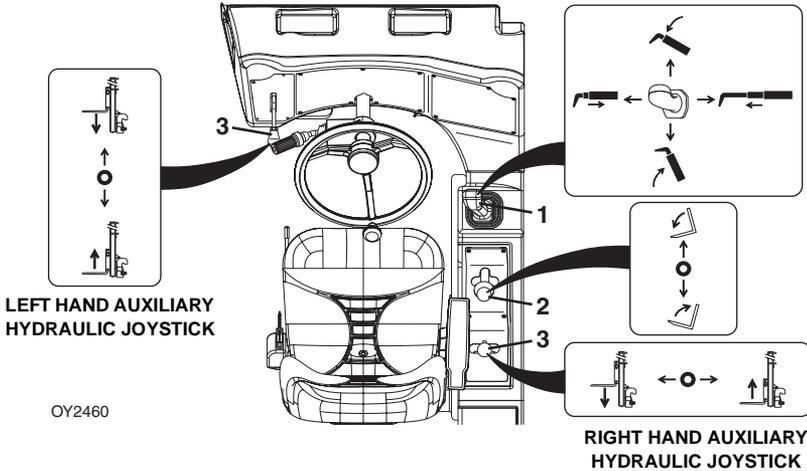

The boom joystick (1) controls lift/lower and extend/retract movement of the boom.

The attachment tilt joystick (2) controls fork tilt.

- Move joystick back to tilt up.
- Move joystick forward to tilt down.

#### To Raise/Lower Mast:

The auxiliary hydraulic joystick (3) controls the raise/lower movement of the mast.

#### Left Hand Hydraulic Joystick

- Move joystick up to lower.
- Move joystick down to raise.

#### Right Hand Hydraulic Joystick

- Move joystick left to lower.
- Move joystick right to raise.

### Installation Procedure:

- Refer to “Attachment Installation” on page 5-13.



# WARNING

**CRUSH HAZARD.** Do not use mast to push or pull objects or load. Failure to comply could cause object or load to fall.

### Operation:


- Always lower forks fully in mast before engaging load.
- To drive with a load, lower forks fully in mast and travel in accordance with the requirements set forth in Section 1 - General Safety Practices.
- Use a signal person to assist in positioning of load if necessary.

### Equipment Damage Precautions:

- Do not use forks as a lever to pry material. Excessive prying forces could damage forks or machine structure.
- Do not attempt to lift loads that are attached or connected to another object.


## Section 5 - Attachments

### Mast Carriage w/Swing and Side Shift (Before S/N 0160037671)

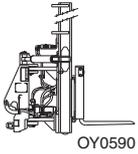

Use 6 ft Mast Carriage Capacity Chart

To determine maximum capacity, refer to "Telehandler/ Attachment/Fork Capacity" on page 5-6.

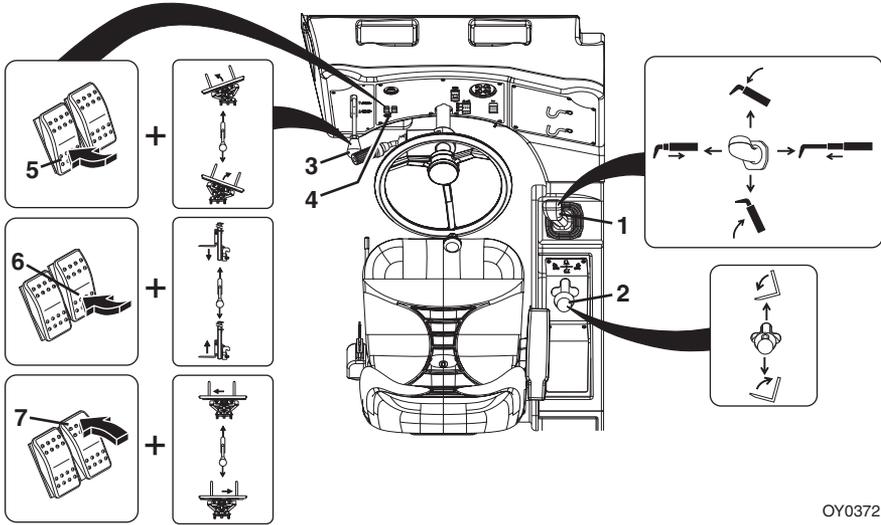

OY0372

The boom joystick (1) controls lift/lower and extend/retract movement of the boom.

The attachment tilt joystick (2) controls fork tilt.

- Move joystick back to tilt up.
- Move joystick forward to tilt down.

#### To Swing:

Press Swing Switch (5) located on dash panel (4) to activate Swing function.

The auxiliary hydraulic joystick (3) controls the carriage swing.

- Move joystick up to swing left.
- Move joystick down to swing right.

### To Raise/Lower Mast:

Press Forks Raise/Lower Switch (6) located on dash panel to activate Forks Raise/Lower function.

The auxiliary hydraulic joystick controls the mast raise/lower function.

- Move joystick up to lower.
- Move joystick down to raise.

### To Side Shift:

Press Side Shift Switch (7) located on dash panel to activate Side Shift function.

The auxiliary hydraulic joystick controls the carriage side shift.

- Move joystick up to shift left.
- Move joystick down to shift right.

### Installation Procedure:

- Refer to "Attachment Installation" on page 5-13.



## WARNING

**CRUSH HAZARD.** Always level forks (horizontally) and telehandler frame before swinging load to side. Swinging unlevel forks could cause load to slide off forks.



## WARNING

**CRUSH HAZARD.** Do not use mast to push or pull objects or load. Failure to comply could cause object or load to fall.

### Operation:


- Always lower forks fully in mast and position forks straight ahead before engaging load.
- To drive with a load, lower forks fully in mast, keep forks pointed forward and travel in accordance with the requirements set forth in Section 1 - General Safety Practices.
- Use a signal person to assist in positioning load if necessary.

### Equipment Damage Precautions:

- Do not use forks as a lever to pry material. Excessive prying forces could damage forks or machine structure.
- Do not attempt to lift loads that are attached or connected to another object.


## Section 5 - Attachments

### Mast Carriage w/Side Tilt (S/N 0160037671 & After)

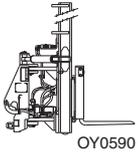

Use Mast Carriage Capacity Chart

To determine maximum capacity, refer to "Telehandler/ Attachment/Fork Capacity" on page 5-6.

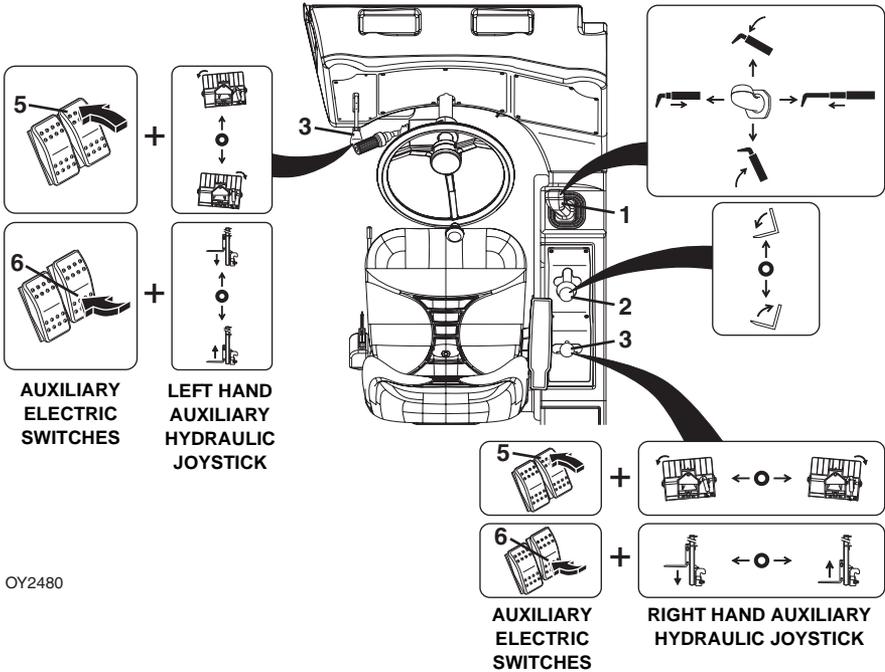

The boom joystick (1) controls lift/lower and extend/retract movement of the boom.

The attachment tilt joystick (2) controls fork tilt.

- Move joystick back to tilt up.
- Move joystick forward to tilt down.

#### To Side Tilt:

Press Side Tilt Switch (5) located on dash panel (4) to activate Side Tilt function.

The auxiliary hydraulic joystick (3) controls the carriage side tilt.

#### Left Hand Hydraulic Joystick

- Move joystick up to (side) tilt left.
- Move joystick down to (side) tilt right.

### Right Hand Hydraulic Joystick

- Move joystick left to (side) tilt left.
- Move joystick right to (side) tilt right.

### To Raise/Lower Mast:

Press Forks Raise/Lower Switch (6) located on dash panel to activate Forks Raise/Lower function.

The auxiliary hydraulic joystick controls the mast raise/lower function.

### Left Hand Hydraulic Joystick

- Move joystick up to lower.
- Move joystick down to raise.

### Right Hand Hydraulic Joystick

- Move joystick left to lower.
- Move joystick right to raise.

### Installation Procedure:

- Refer to “Attachment Installation” on page 5-13.



## WARNING

**CRUSH HAZARD.** Do not use mast to push or pull objects or load. Failure to comply could cause object or load to fall.



## WARNING

**CRUSH HAZARD.** Do not use side tilt to push or pull objects or load. Failure to comply could cause object or load to fall.

### Operation:


- Always lower forks fully in mast before engaging load.
- To drive with a load, lower forks fully in mast and travel in accordance with the requirements set forth in Section 1 - General Safety Practices.
- Use a signal person to assist in positioning load if necessary.

### Equipment Damage Precautions:

- Do not use forks as a lever to pry material. Excessive prying forces could damage forks or machine structure.
- Do not attempt to lift loads that are attached or connected to another object.

## Section 5 - Attachments


### Fork Mounted Hook

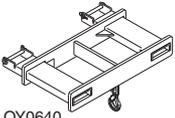

Use Appropriate Carriage Attachment Capacity Chart

To determine maximum capacity, refer to “Telehandler/ Attachment/Fork Capacity” on page 5-6.

**Suspend loads in accordance with requirements set forth in Section 1 - General Safety Practices.**

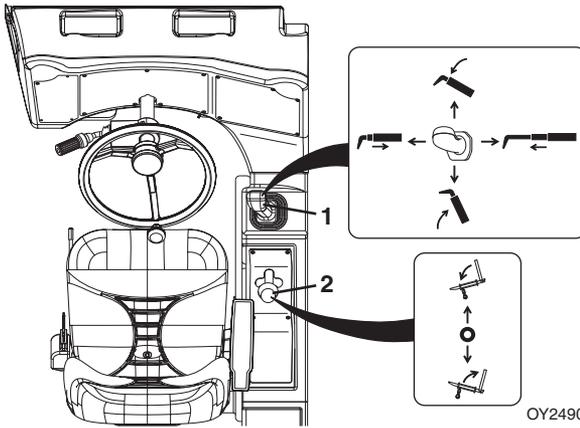

The boom joystick (1) controls lift/lower and extend/retract movement of the boom.

The attachment tilt joystick (2) controls fork tilt.

- Move joystick back to tilt up.
- Move joystick forward to tilt down.

#### Installation Procedure:


- Ensure carriage is properly installed. Refer to “Attachment Installation” on page 5-13.
- Secure the fork mounted hook to the forks by sliding the fork mounted hook onto the parent forks and install the retaining pin behind the vertical shank of the fork.

### **Operation:**

- Pallet or lumber forks of an appropriate load rating must be used. Do not use with cubing or block forks.
- Weight of fork mounted hook and rigging must be included as part of total load being lifted.
- Do not use with mast carriage attachment.
- Do not use fork mounted hook with attachments capable of rotating (i.e. side tilt and swing carriages) without disabling the rotation feature(s).

## Section 5 - Attachments


### Truss Boom

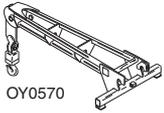

Use Appropriate Truss Boom Capacity Chart

To determine maximum capacity, refer to "Telehandler/Attachment/Fork Capacity" on page 5-6.

**Suspend loads in accordance with requirements set forth in Section 1 - General Safety Practices.**

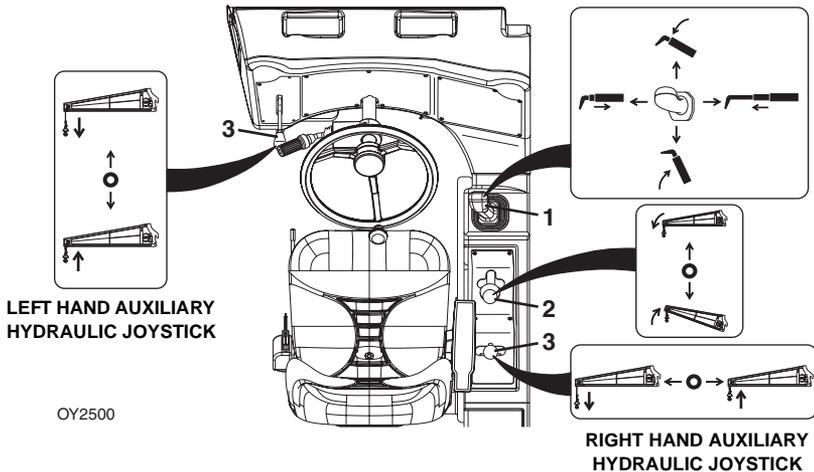

The boom joystick (1) controls lift/lower and extend/retract movement of the boom.

The attachment tilt joystick (2) controls truss boom tilt.

- Move joystick back to tilt up.
- Move joystick forward to tilt down.

#### **Winch Control (if equipped):**

The auxiliary hydraulic joystick (3) controls the truss boom mounted winch.

#### **Left Hand Hydraulic Joystick**

- Move joystick up to lower cable.
- Move joystick down to raise cable.

#### **Right Hand Hydraulic Joystick**

- Move joystick left to lower cable.
- Move joystick right to raise cable.

### Installation Procedure:

- Refer to “Attachment Installation” on page 5-13.



# WARNING


**CRUSH HAZARD.** Maintain a minimum of three wraps of wire rope on the cable drum at all times. Failure to comply could cause object or load to fall.

### Operation:

- Weight of rigging must be included as part of total load being lifted.

## Section 5 - Attachments


### Bucket

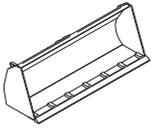

OZ0730

Use Appropriate Bucket Capacity Chart

To determine maximum capacity, refer to “Telehandler/ Attachment/Fork Capacity” on page 5-6.

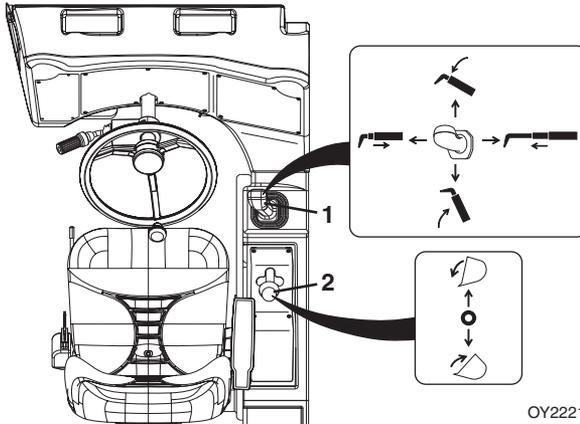

OY2221

The boom joystick (1) controls lift/lower and extend/retract movement of the boom.

The attachment tilt joystick (2) controls bucket tilt.

- Move joystick back to tilt up.
- Move joystick forward to tilt down.

#### Installation Procedure:

- Refer to “Attachment Installation” on page 5-13.

#### Operation:

- Raise or lower boom to appropriate height for loading material from stockpile.
- Align telehandler with face of stockpile and drive slowly and smoothly into pile to load bucket.
- Tilt bucket up far enough to retain load and back away from pile.
- Travel in accordance with requirements set forth in Section 1 - General Safety Practices.
- Tilt bucket down to dump load.

### **Equipment Damage Precautions**

- Except for lifting or dumping a load, the boom must be fully retracted for all bucket operations.
- Do not corner-load bucket. Distribute material evenly within the bucket. Bucket capacity charts are for evenly distributed loads only.
- Do not use bucket as a lever to pry material. Excessive prying forces could damage bucket or machine structure.
- Do not attempt to load material which is hard or frozen. This could cause severe damage to quick switch or machine structure.
- Do not use bucket for "back dragging." This could cause severe damage to quick switch and retraction cables/chains.

## Section 5 - Attachments


### Grapple Bucket



OZ1450

Use Grapple Bucket Capacity Chart

To determine maximum capacity, refer to "Telehandler/  
Attachment/Fork Capacity" on page 5-6.

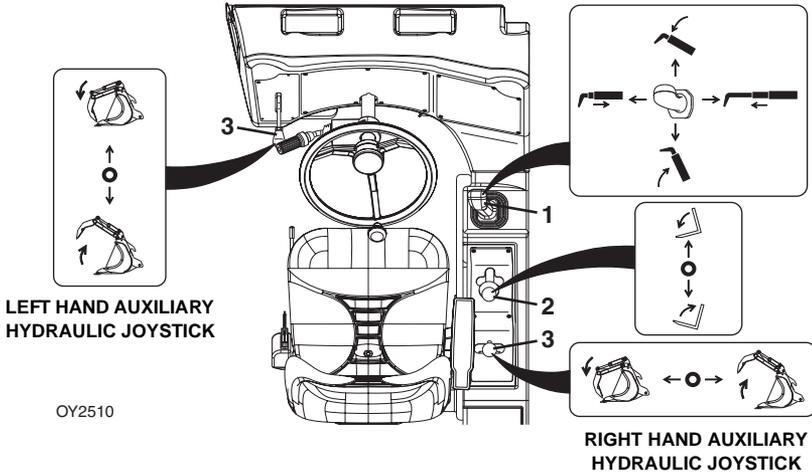

The boom joystick (1) controls lift/lower and extend/retract movement of the boom.

The attachment tilt joystick (2) controls grapple bucket tilt.

- Move joystick back to tilt up.
- Move joystick forward to tilt down.

#### To open/close grapple:

The auxiliary hydraulic joystick (3) controls the open/close movement of the grapple.

#### Left Hand Hydraulic Joystick

- Move joystick up to close grapple.
- Move joystick down to open grapple.

#### Right Hand Hydraulic Joystick

- Move joystick left to close grapple.
- Move joystick right to open grapple.

### Installation Procedure:

- Refer to “Attachment Installation” on page 5-13.

### Operation:


- Raise or lower boom to appropriate height and open grapple for loading material from stockpile.
- Align telehandler with face of stockpile and drive slowly and smoothly into pile to load bucket.
- Tilt bucket up far enough to retain load, close grapple and back away from pile.
- Travel in accordance with requirements set forth in Section 1 - General Safety Practices.
- Open grapple and tilt bucket down to dump load.

### Equipment Damage Precautions

- Except for lifting or dumping a load, the boom must be fully retracted for all bucket operations.
- Do not corner-load bucket. Distribute material evenly within the bucket. Bucket capacity charts are for evenly distributed loads only.
- Do not use bucket as a lever to pry material. Excessive prying forces could damage bucket or machine structure.
- Do not attempt to load material which is hard or frozen. This could cause severe damage to quick switch or machine structure.
- Do not use bucket for "back dragging." This could cause severe damage to quick switch and retraction cables/chains.

## Section 5 - Attachments


### Personnel Work Platform - Quick Switch Mounted (Before S/N 0160037671)

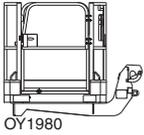

Use Personnel Work Platform - Quick Switch Mounted Capacity Chart

To determine maximum capacity, refer to "Telehandler/Attachment/Fork Capacity" on page 5-6.

The operator and personnel in platform must read and understand the separate personnel work platform manual prior to installing and using a platform.

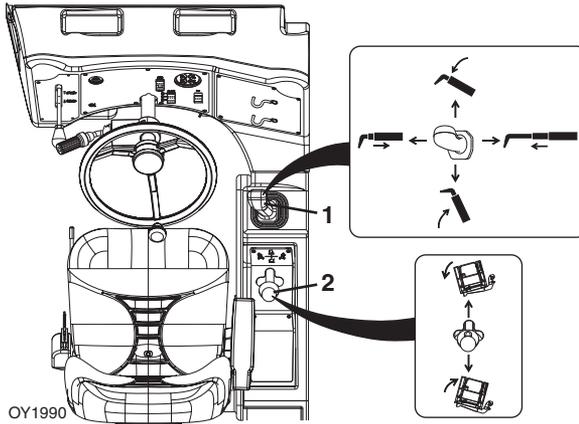

The boom joystick (1) controls lift/lower and extend/retract movement of the boom.

The attachment tilt joystick (2) controls platform tilt.

- Move joystick back to tilt up.
- Move joystick forward to tilt down.

#### Installation Procedure:

- Refer to "Attachment Installation" on page 5-13.

### Preparation and Setup:

1. Ensure the telehandler is on a firm surface and is level.
2. Engage the park brake. Blocking the wheels is also recommended.
3. Level the platform, both side to side (frame level) and front to back (attachment tilt).
4. Keep area under platform free from personnel.
5. When personnel are on platform, the operator must remain seated in cab with personnel in direct line of sight.
6. **DO NOT** lift or carry persons in a bucket or on forks.




## WARNING

**FALL HAZARD.** Never tilt the platform forward, rearward, or level the machine when the platform is occupied.

## Section 5 - Attachments


### Personnel Work Platform - Fork Mounted

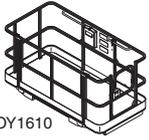

Use Appropriate Carriage Attachment Capacity Chart

To determine maximum capacity, refer to “Telehandler/ Attachment/Fork Capacity” on page 5-6.

The operator and personnel in platform must read and understand the separate personnel work platform manual prior to installing and using a platform.

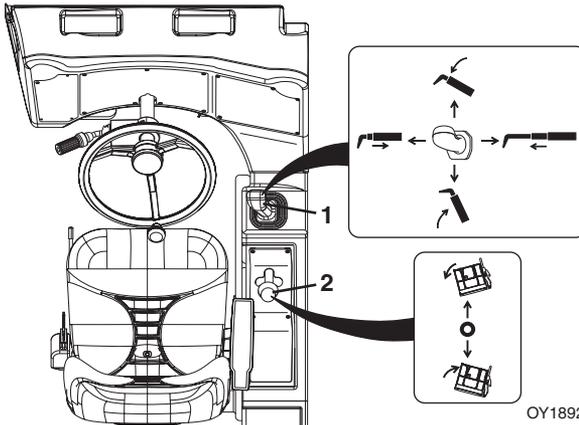

The boom joystick (1) controls lift/lower and extend/retract movement of the boom.

The attachment tilt joystick (2) controls platform tilt.

- Move joystick back to tilt up.
- Move joystick forward to tilt down.

#### Installation Procedure:

- Ensure carriage is properly installed. Refer to “Attachment Installation” on page 5-13.
- Secure the fork mounted platform to the forks by sliding the fork mounted platform onto the parent forks and install the retaining pin behind the vertical shank of the fork.

### Preparation and Setup:

1. Ensure the telehandler is on a firm surface and is level.
2. Engage the park brake. Blocking the wheels is also recommended.
3. Level the platform, both side to side (frame level) and front to back (attachment tilt).
4. Keep area under platform free from personnel.
5. When personnel are on platform, the operator must remain seated in cab with personnel in direct line of sight.
6. **DO NOT** lift or carry persons in a bucket or on forks.




## WARNING

**FALL HAZARD.** Never tilt the platform forward, rearward, or level the machine when the platform is occupied.

## Section 5 - Attachments


### Boom Head-Mounted Winch (Before S/N 0160037671)

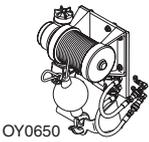

Use Carriage Attachment Capacity Chart

To determine maximum capacity, refer to "Telehandler/Attachment/Fork Capacity" on page 5-6.

**Suspend loads in accordance with requirements set forth in Section 1 - General Safety Practices.**

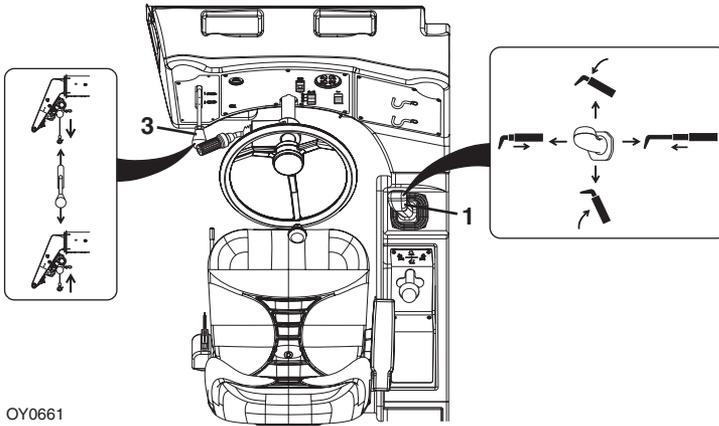

The boom joystick (1) controls lift/lower and extend/retract movement of the boom.

The auxiliary hydraulic joystick (3) controls the winch.

- Move joystick up lower cable.
- Move joystick down to raise cable.



## WARNING

**CRUSH HAZARD.** Maintain a minimum of three wraps of wire rope on the cable drum at all times. Failure to comply could cause object or load to fall.

#### Operation:

- Weight of rigging must be included as part of total load being lifted.

---

## **SECTION 6 - EMERGENCY PROCEDURES**

---

### **6.1 TOWING A DISABLED PRODUCT**

The following information assumes the telehandler cannot be moved under its own power.

- Before moving the telehandler, read all of the following information to understand options available. Then select the appropriate method.
- Machine mounted retrieval devices provide suitable means to attach a tow rope, chain or tow bar only in the event the telehandler becomes stuck or disabled. Retrieval devices are not intended for trailer towing devices.
- The steering system permits manual steering if engine or power assist feature fails; however, **steering will be slow and will require much greater force.**
- **DO NOT** attempt to tow a telehandler that is loaded or the boom/attachment is raised above 4 ft (1,2 m).

#### **Moving Short Distances**

---

- If it is only necessary to move telehandler a short distance, less than 100 ft (30 m), it is permissible to use a vehicle of sufficient capacity to tow the unit with no previous preparation. Drive wheels will not roll.

#### **Moving Longer Distances**

---

- See Service Manual for information.

**Contact a local Authorized Distributor for specific instructions if neither of these methods are applicable.**

## Section 6 - Emergency Procedures

---

### 6.2 EMERGENCY LOWERING OF BOOM

In the event of total loss of engine power or hydraulic pump failure with an elevated load, the situation must be properly evaluated and dealt with on an individual basis.


**Contact a local Authorized Distributor for specific instructions.**

Secure the telehandler using the following procedures:

1. Clear the area around telehandler of all personnel.
2. Engage the parking brake. Place the transmission control lever in "NEUTRAL".
3. Block all four wheels.
4. Section off a large area under the boom with string or tape to restrict any personnel from entering this area.

---

### 6.3 EMERGENCY EXIT FROM ENCLOSED CAB

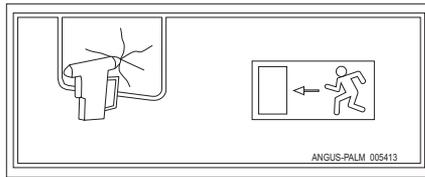

OWO740


- In an emergency, an escape hammer located directly below the rear window in an enclosed cab can be used to exit the telehandler.

## SECTION 7 - LUBRICATION AND MAINTENANCE


### 7.1 INTRODUCTION

Service the product in accordance with the maintenance schedule on the following pages.

BEFORE S/N 0160040675 EXCLUDING 0160040468 & 0160040672

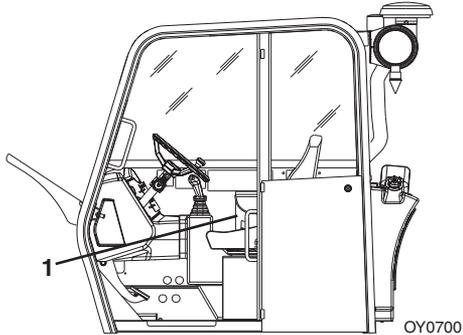

S/N 0160040675 & AFTER INCLUDING 0160040468 & 0160040672

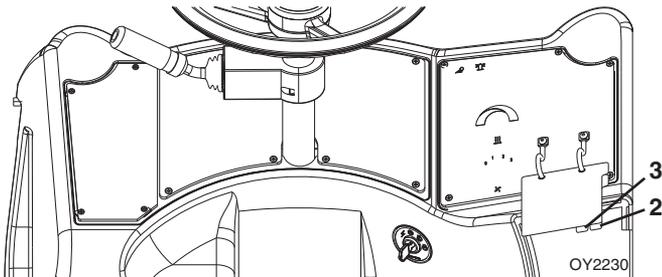

The lubrication and maintenance decal (1) or lubrication (2) and maintenance (3) charts contain instructions that must be followed to keep this product in good operating condition. The Operation & Safety Manual and Service Manual contain more detailed service information with specific instructions.

### Clothing and Safety Gear

- Wear all the protective clothing and personal safety devices issued to you or called for by job conditions.
- **DO NOT** wear loose clothing or jewelry that can get caught on controls or moving parts.

## **Section 7 - Lubrication and Maintenance**

---

### **7.2 GENERAL MAINTENANCE INSTRUCTIONS**

**Prior to performing any service or maintenance on the telehandler, follow the shut-down procedure on page 4-5 unless otherwise instructed. Ensure telehandler is level, for proper fluid readings.**

- Clean lubrication fittings before lubricating.
- After greasing telehandler, cycle all functions several times to distribute lubricants. Perform this maintenance procedure without attachment installed.
- Apply a light coating of engine oil to all linkage pivot points.
- Intervals shown are for normal usage and conditions. Adjust intervals for abnormal usage and conditions.
- Check all lubricant levels when lubricant is cool, with the exception of the transmission fluid. For ease of filling hydraulic reservoir, use a funnel with a hose or flexible tube for best results.



## **WARNING**

**CUT/CRUSH/BURN HAZARD.** Do not perform service or maintenance on the machine with the engine running, with the exception of the transmission level and hydraulic return filter indicator checks.

7.3 SERVICE AND MAINTENANCE SCHEDULE

10, 1st 50 & 50 Hour Maintenance Schedule



**EVERY**

**10** 



Check Fuel Level



Air Filter Restriction Indicator




Check Engine Oil Level



Check Hydraulic Oil Level




Check Tire Condition & Pressure

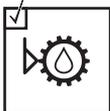

Check Transmission Oil Level



Check Hydraulic Return Filter Indicator (Before S/N 0160040675)

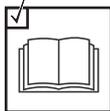

Additional Checks - Section 8

**1<sup>st</sup>**

**50** 



Check Wheel Lug Nut Torque

**EVERY**


**50** 




Drain Fuel/Water Separator



Check Engine Coolant Level

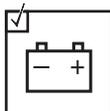

Check Battery

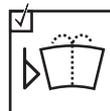

Check Washer Fluid Level (if equipped)



Lubrication Schedule


OY2520

# Section 7 - Lubrication and Maintenance


## 1st 250, 250 & 500 Hour Maintenance Schedule



1<sup>st</sup>  
**250** 

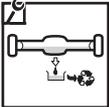


Change Axle Oil

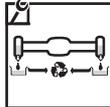

Change Wheel End Oil



Change Transmission Oil & Filter

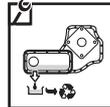


Change Transfer Case Oil


EVERY  
**250** 




Change Engine Oil and Filter\*

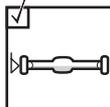

Check Axle Oil Level

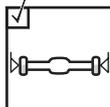

Check Wheel End Oil Levels

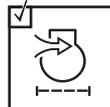


Air Filter Vacuator Valve




Check Fan Belt




Check Boom Wear Pads

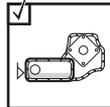

Check Transfer Case Oil Level

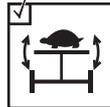

Check Rear Axle Stabilization

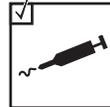

Lubrication Schedule

EVERY  
**500** 



Change Fuel Filters



Change Fuel Strainer (Before S/N 0160040675)



Check Wheel Lug Nut Torque

OY2530

**Note:** Engine oil and filter service interval can be extended, see page 7-14 for details.

## Section 7 - Lubrication and Maintenance


### 1000, 1500 & 2000 Hour Maintenance Schedule




**EVERY**  
**1000** 




Change  
Transmission  
Oil & Filter

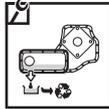

Change  
Transfer Case  
Oil

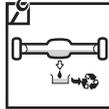

Change  
Axle Oil

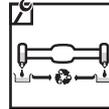

Change Wheel  
End Oil



Check  
Air Intake  
System




Check Boom  
Chains



Lubrication  
Schedule

**EVERY**  
**1500** 

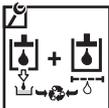

Change  
Hydraulic  
Fluid & Filters



Change  
Hydraulic Tank  
Breather



Change Engine  
Coolant (Before  
S/N 0160040675)

**EVERY**  
**2000** 



Engine Valve  
Lash  
Adjustment



Change Engine  
Coolant (S/N  
0160040675 & After)




OY2540

# Section 7 - Lubrication and Maintenance

## 7.4 LUBRICATION SCHEDULES


### 50 Hour Lubrication Schedule

**EVERY**  
**50** ⌚

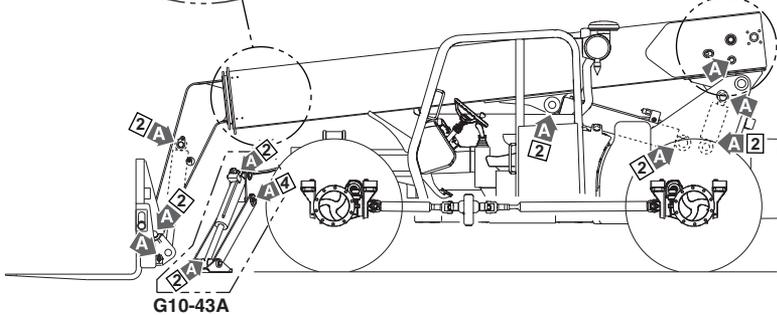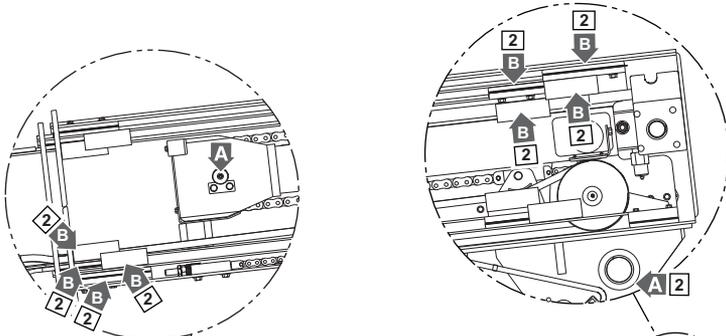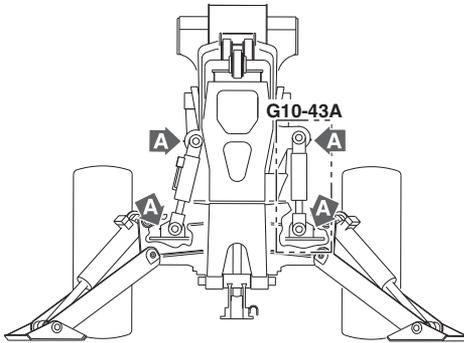

OY2550

250 Hour Lubrication Schedule


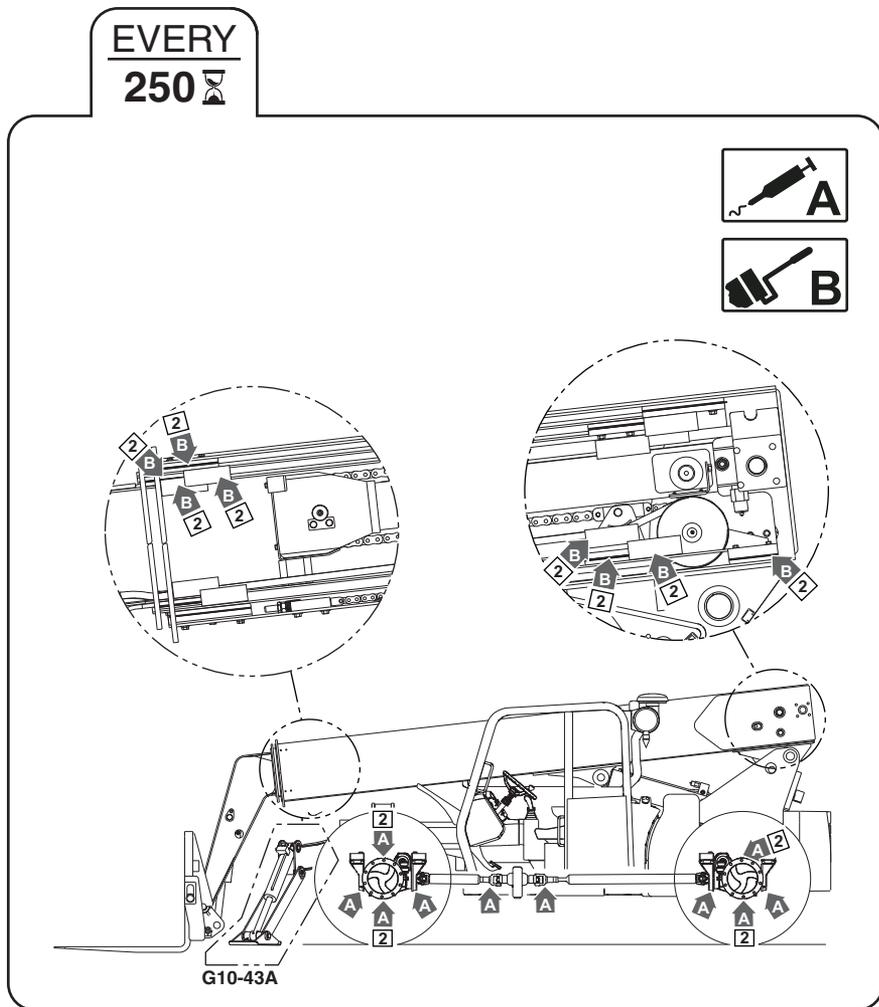


OY2560

# Section 7 - Lubrication and Maintenance

## 1000 Hour Lubrication Schedule

EVERY  
1000 

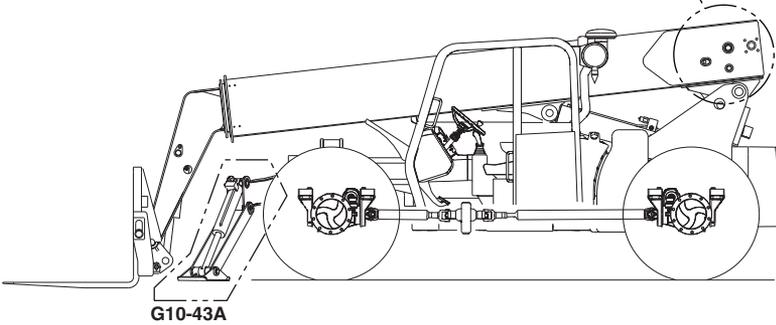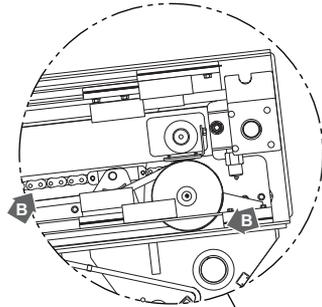

OY2570

**This Page Intentionally Left Blank**

## Section 7 - Lubrication and Maintenance


### 7.5 OPERATOR MAINTENANCE INSTRUCTIONS

#### Fuel System

##### A. Fuel Level Check

10   
OW0970

  
OW0990

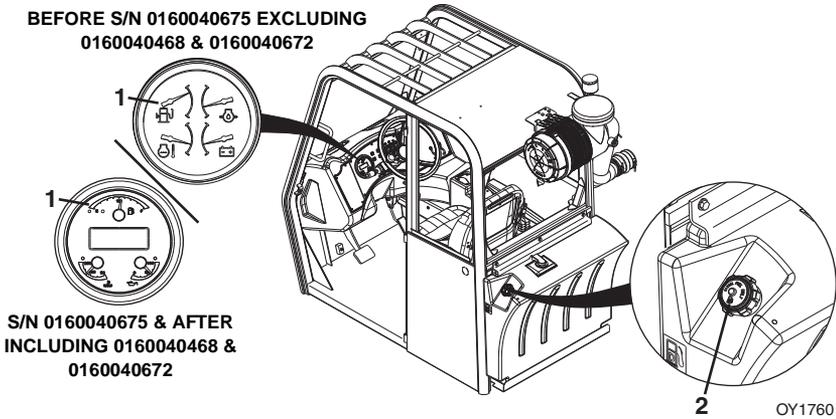

1. Check fuel gauge (1) located on instrument panel in cab.
2. If fuel is low, proceed to fuel source and perform “Shut-Down Procedure” on page 4-5.
3. Turn fuel tank cap (2) and remove from filler neck.
4. Add diesel fuel as needed.
5. Replace and secure fuel tank cap.

**Note:** Replenish diesel fuel at end of each work shift to minimize condensation.

## NOTICE


**EQUIPMENT DAMAGE.** Do not allow machine to run out of fuel during operation. See Engine Operation & Maintenance Manual for details prior to servicing.

### B. Drain Fuel/Water Separator

**50**   
OW0980




**BEFORE S/N 0160040675 EXCLUDING 0160040468 & 0160040672  
JOHN DEERE PERKINS**

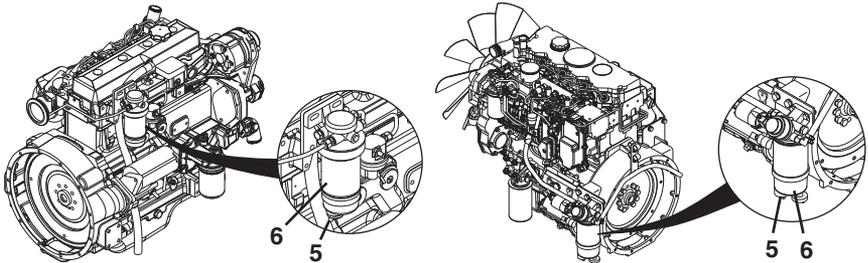

OW0821

**S/N 0160040675 & AFTER INCLUDING 0160040468 & 0160040672**

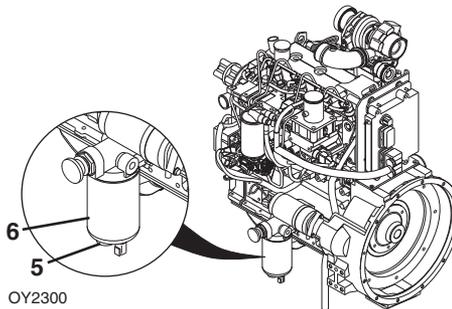



1. Perform “*Shut-Down Procedure*” on page 4-5.
2. Open the engine cover.
3. Loosen drain cock (5) on underside of fuel filter (6) and allow all water to drain into a glass until clear fuel is visible.
4. Tighten drain cock.
5. Close and secure the engine cover.

## Section 7 - Lubrication and Maintenance

### Air Intake System

#### A. Air Filter Restriction Indicator Check

10   
OW0970

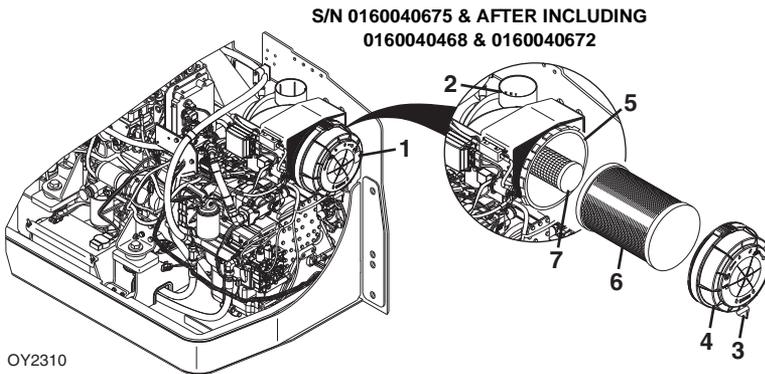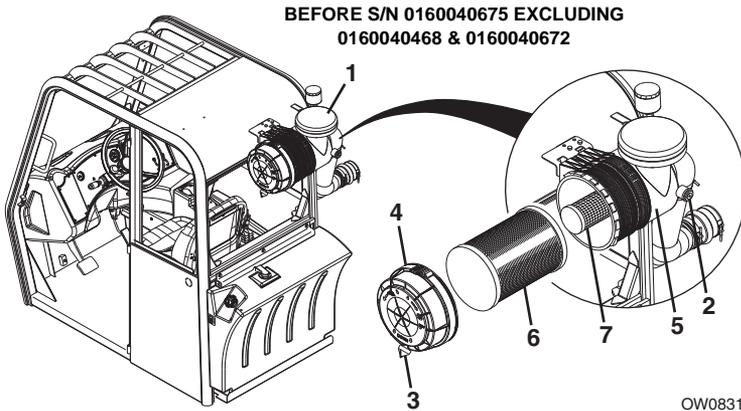

1. Perform "Shut-Down Procedure" on page 4-5.
2. Open the engine cover. (S/N 0160040675 & After including 0160040468 & 0160040672)
3. Locate air cleaner (1) and check restriction indicator (2). If red band is visible, filter(s) must be replaced.
4. Remove dust from vacuum valve (3) by squeezing bottom of valve to allow loose particles to fall out.
5. Close and secure the engine cover. (S/N 0160040675 & After including 0160040468 & 0160040672)

**Note:** Only remove canister cover to service the elements as restriction indicator indicates. Excessive access to check an element can lead to premature element failure.

## Section 7 - Lubrication and Maintenance

---

### B. Element Change (as restriction indicator indicates)

1. Perform “*Shut-Down Procedure*” on page 4-5.
2. Open the engine cover. (S/N 0160040675 & After including 0160040468 & 0160040672)
3. Unlock air cleaner cover (**4**), turn counterclockwise and remove from air cleaner canister (**5**).
4. Remove outer primary element (**6**) and inspect for damage. Damaged elements should not be reused.
5. Thoroughly clean the interior of the air cleaner canister and vacuator valve.
6. Replace inner safety element (**7**) after every third primary element change. If replacing the inner safety element at this time, carefully slide the element out and replace with new element.
7. Slide the new primary element over the inner element making sure the sealing edge is flush with the base of the air cleaner.
8. Position air cleaner cover in place, turn clockwise and lock into position.
9. Depress button on restriction indicator to reset.
10. Close and secure the engine cover. (S/N 0160040675 & After including 0160040468 & 0160040672)

**Note:** *An inner safety element should never be washed or reused. Always install a new element.*


## Section 7 - Lubrication and Maintenance

### Engine Oil


#### A. Engine Oil Level Check

10   
OW0970

  
OW1020

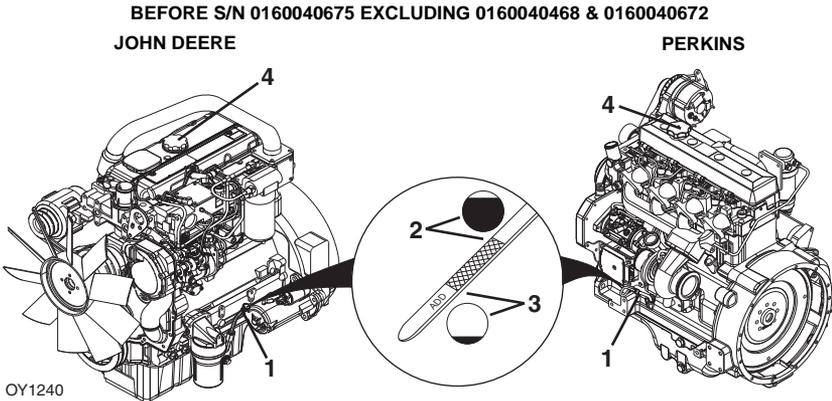

S/N 0160040675 & AFTER INCLUDING 0160040468 & 0160040672

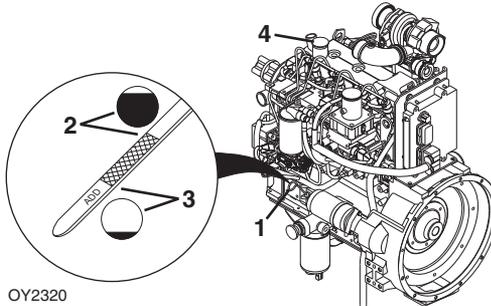

1. Perform "Shut-Down Procedure" on page 4-5.
2. Open the engine cover.
3. Remove dipstick (1) and check oil mark. The oil should be between the full (2) and add (3) marks within the crosshatched area of the dipstick.
4. If oil is low, remove oil fill cap (4) and add motor oil to bring oil up to the full mark in the crosshatch area.
5. Replace oil fill cap and dipstick.
6. Close and secure the engine cover.

**Note:** The standard service interval for engine oil and filter is 250 hours maximum. If an extended service interval is desired, see your engine manual for specific guidelines for optimizing oil change intervals.


### Hydraulic Oil

#### A. Hydraulic Oil Level Check


**10**   
OW0970



**BEFORE S/N 0160040675 EXCLUDING 0160040468 & 0160040672**

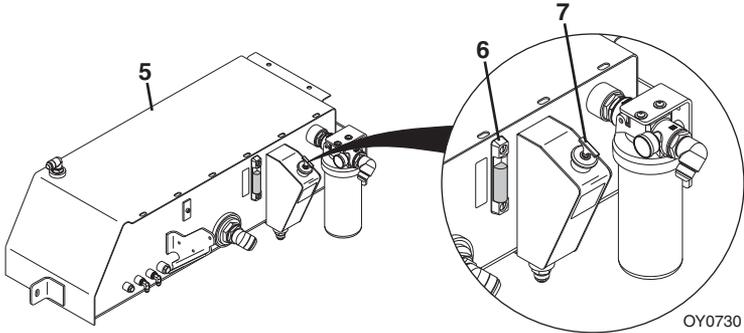

**S/N 0160040675 & AFTER INCLUDING 0160040468 & 0160040672**

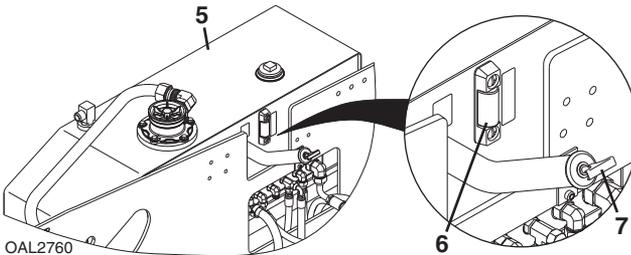

1. Be sure all cylinders are fully retracted and machine is level.
2. Perform “*Shut-Down Procedure*” on page 4-5.
3. Open the engine cover.
4. Check level of hydraulic oil at the sight gauge (6) on the hydraulic tank (5). The oil level should be visible in the gauge window.
5. If hydraulic oil is low, remove oil fill cap (7) from filler neck. Add fluid to bring oil up to the upper mark on the sight gauge.
6. Replace hydraulic oil fill cap.
7. Close and secure the engine cover.

## Section 7 - Lubrication and Maintenance

### Tires

#### A. Tire Air Pressure Check



1. Perform “Shut-Down Procedure” on page 4-5.
2. Remove valve stem cap.
3. Check tire pressure.
4. Add air if required.

##### **G9-43A**

13.00 x 24, G-2/L-2 Bias-Ply Traction - 12 Ply.....	65 psi (4,5 bar)
13.00 x 24, G-3/L-3 Bias Ply Rock - 12 Ply.....	65 psi (4,5 bar)
13.00 x 24, G-2/L-2 Radial - 1 Star.....	70 psi (4,8 bar)
15.50 x 25, G-2/L-2 Bias-Ply Traction - 12 Ply.....	58 psi (4,0 bar)
15.50 x 25, G-3/L-3 Bias Ply Rock - 12 Ply.....	65 psi (4,5 bar)
15.50 x 25, G-2/L-2 Radial - 1 Star.....	70 psi (4,8 bar)
370/75-28, 14 Ply.....	76 psi (5,2 bar)

##### **G10-43A**

14.00 x 24, G-2/L-2 Bias-Ply Traction - 12 Ply.....	70 psi (4,8 bar)
14.00 x 24, G-2/L-2 Bias-Ply Rock - 12 Ply.....	70 psi (4,8 bar)
400/75-28, 16 Ply.....	76 psi (5,2 bar)

5. Replace valve stem cap.

#### B. Tire Damage

For pneumatic tires, when any cut, rip or tear is discovered that exposes sidewall or tread area cords in the tire, measures be taken to remove the product from service immediately. Arrangements must be made for replacement of the tire or tire assembly.

For polyurethane foam filled tires, when any of the following are discovered, measures must be taken to remove the product from service immediately. Arrangements must be made for replacement of the tire or tire assembly.

- a smooth even cut through the cord piles which exceeds 3 in (7,5 cm) in total length.
- any tears or rips (ragged edges) in the cord plies which exceeds 1 in (2,5 cm) in any direction
- any punctures which exceed 1 in (2,5 cm) in diameter.

If a tire is damaged but within the above noted criteria, the tire must be inspected daily to ensure the damage has not propagated beyond the allowable criteria.

### **C. Tire and Wheel Replacement**

It is recommended that a replacement tire to be the same size, ply and brand as originally installed. Refer to the appropriate parts manual for ordering information. If not using an approved replacement tire, the replacement tires must have the following characteristics:

- Equal or greater ply/load rating and size of original.
- Tire tread contact width equal or greater than original.
- Wheel diameter, width and offset dimensions equal to the original.
- Approved for the application by the tire manufacturer (including inflation pressure and maximum tire load).

Unless specifically approved by JLG, do not replace a foam filled or ballast filled tire assembly with a pneumatic tire. Due to size variations between tire brands, when selecting and installing a replacement tire ensure both tires on the axle are the same.

The rims installed have been designed for stability requirements which consist of track width, tire pressure and load capacity. Size changes such as rim width, center piece location, larger or smaller diameter, etc., without written factory recommendations, may result in unsafe condition regarding stability.


## Section 7 - Lubrication and Maintenance

### E. Wheel Installation

Torque lug nuts after first 100 hours and after each wheel installation.

**Note:** If machine is equipped with directional tire assemblies, the wheel and tire assemblies must be installed with the directional tread pattern "arrows" facing in the direction of forward travel.

1. Start all nuts by hand to prevent cross threading. DO NOT use a lubricant on threads or nuts.
2. Tighten lug nuts in an alternating pattern as indicated in figure. Torque to 350-400 lb-ft (475-542 Nm).

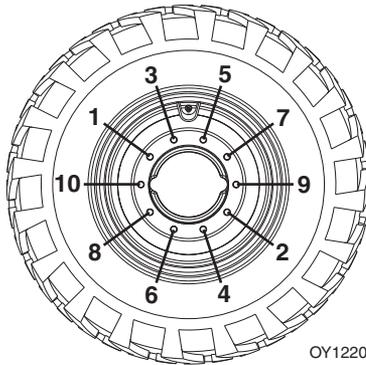

## WARNING

**TIP OVER HAZARD.** Lug nuts must be installed and maintained at the proper torque to prevent loose wheels, broken studs and possible separation of wheel from the axle.


### Transmission Oil

#### A. Transmission Oil Level Check


**10**   
OW0970

  
OW1050

**BEFORE S/N 0160040675 EXCLUDING 0160040468 & 0160040672**

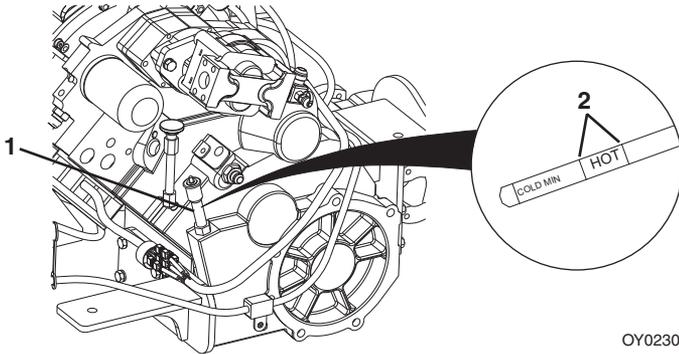

**S/N 0160040675 & AFTER INCLUDING 0160040468 & 0160040672**

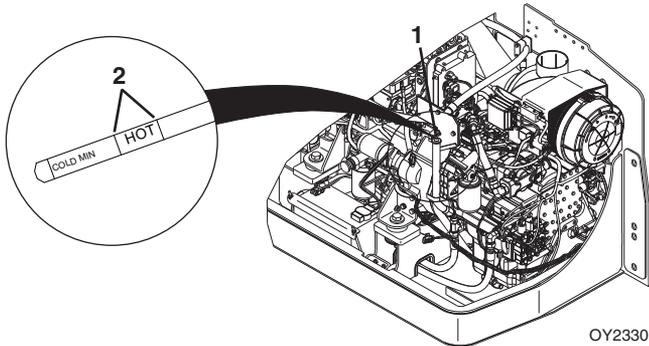


1. Apply park brake, shift transmission to "Neutral" and lower forks or attachment to the ground.
2. Check transmission oil level with engine at idle and oil at normal operating temperature.
3. Open the engine cover.
4. Remove the transmission dipstick (1) and check oil level. The oil level should be within the "HOT" zone (2).
5. If oil is low, add hydraulic fluid to bring oil up to the "HOT" zone.
6. Replace transmission dipstick.
7. Close and secure the engine cover.

## Section 7 - Lubrication and Maintenance

### Hydraulic Return Filter (Before S/N 0160040675 excluding 0160040468 & 0160040672)

#### A. Hydraulic Return Filter Indicator Check

**10**   
OW0970

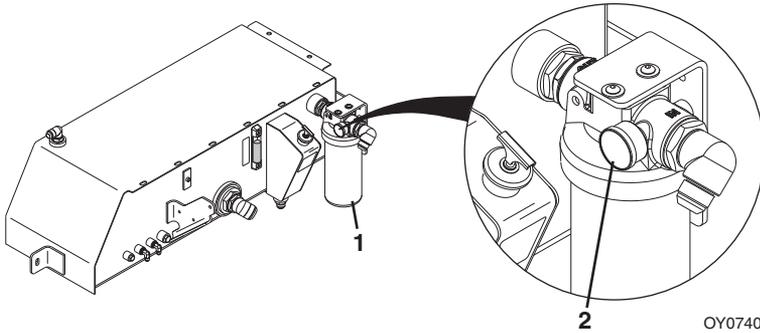

1. Apply park brake, shift transmission to "Neutral" and lower forks or attachment to horizontal position.
2. Check hydraulic return filter indicator with engine normal operating temperature.
3. Have an assistant open the engine cover.
4. With the engine at full throttle and the assistant observing the indicator (2) located on the hydraulic return filter (1), extend and retract the boom 10 to 12 ft (3,0 to 3,7 m). The bar gauge should be within the green area.
5. Replace filter before the gauge reaches the red area on the indicator. If it reaches the red area, the filter is too dirty and hydraulic oil is bypassing the filter.
6. Close and secure the engine cover.


Engine Cooling System

A. Engine Coolant Level Check

50   
OW0980



Before S/N 0160040675 excluding 0160040468 & 0160040672

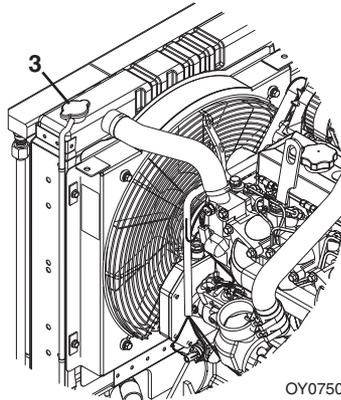


1. Perform “Shut-Down Procedure” on page 4-5.
2. Open the engine cover.
3. When coolant is cool remove radiator cap (3). Check coolant level in radiator.
4. If coolant is low, add coolant as required.
5. Replace radiator cap.
6. Close and secure the engine cover.

**Note:** When filling the engine with coolant, the maximum fill rate is 2.4 gallon per minute (9 liters per minute).

## Section 7 - Lubrication and Maintenance

S/N 0160040675 & After including 0160040468 & 0160040672

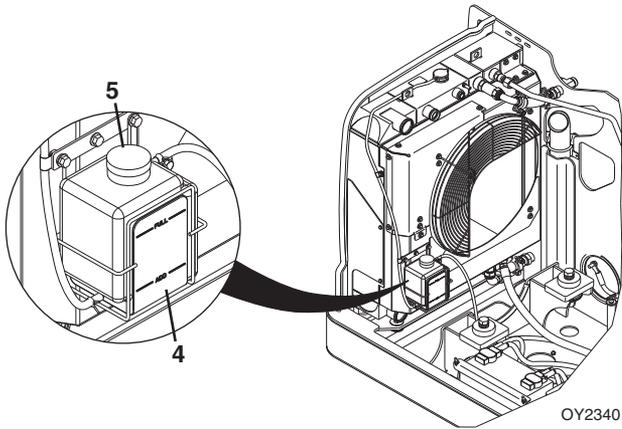


1. Perform “*Shut-Down Procedure*” on page 4-5.
2. Open the engine cover.
3. Check coolant level in overflow bottle (3). When coolant is hot, bottle should be 1/2 to 3/4 full. When coolant is cool, bottle should be 1/4 to 1/2 full.
4. If coolant is low, remove overflow bottle cap (4) and add coolant as required.
5. Replace overflow bottle cap.
6. Close and secure the engine cover.

**Note:** When filling the engine with coolant, the maximum fill rate is 2.4 gallon per minute (9 liters per minute).


### Battery

#### A. Battery Check


**50**   
OW0980

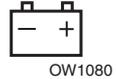

**BEFORE S/N 0160040675 EXCLUDING 0160040468 & 0160040672**

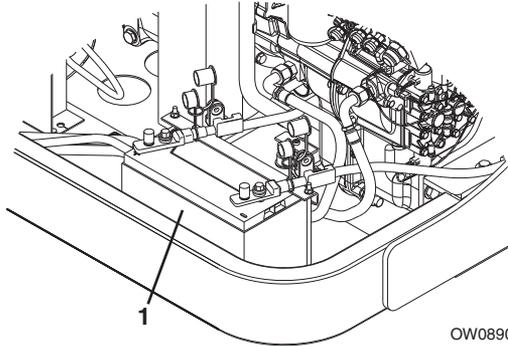

**S/N 0160040675 & AFTER INCLUDING 0160040468 & 0160040672**

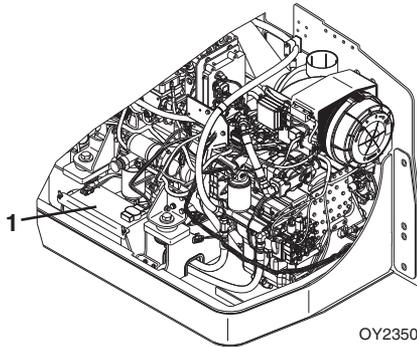


1. Perform “*Shut-Down Procedure*” on page 4-5.
2. Open the engine cover.
3. Wearing eye protection, visually inspect the battery (1). Check terminals for corrosion. Replace battery if it has a cracked, melted or damaged case.
4. Close and secure the engine cover.

## Section 7 - Lubrication and Maintenance

### Windshield Washer System (if equipped)

#### A. Windshield Washer Fluid Level Check

**50**   
OW0980

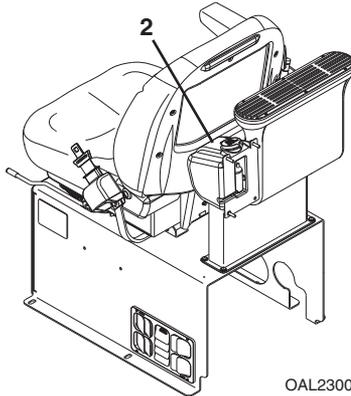

1. Perform "Shut-Down Procedure" on page 4-5.
2. The windshield washer fluid should be visible in the reservoir (2).
3. If washer fluid level is low, add fluid as needed.

**SECTION 8 - ADDITIONAL CHECKS**

**This Page Intentionally Left Blank**

**This Page Intentionally Left Blank**

**SECTION 9 - SPECIFICATIONS**

**9.1 PRODUCT SPECIFICATIONS**

**Capacities**

**Engine Crankcase Oil**

Capacity with Filter Change

Before S/N 0160040675 excluding 0160040468 & 0160040672

John Deere

Before S/N 0160007868 .....14.5 qt (13,7 L)

S/N 0160007868 thru 0160040674.....15.5 qt (14,7 L)

Perkins.....7 qt (6,5 L)

S/N 0160040675 & After including 0160040468 & 0160040672 .....7.6 qt (7,2 L)

Type of Oil

0° to 104° F (-20° to 40° C) ..... 15W-40 CH

-40° to 0° F (-40° to -20° C)..... 0W-40 CH

**Fuel Tank**

Capacity .....38 gal (144 L)

Type of Fuel

0° to 104° F (-20° to 40° C) ..... #2 Diesel

-40° to 0° F (-40° to -20° C)..... #1 Diesel

Anti-gel Fluid

-40° to 0° F (-40° to -20° C) ..... 16 oz (0,5 L)

**Cooling System**

System Capacity

Before S/N 0160040675 excluding 0160040468 & 0160040672 .....22 qt (20,8 L)

S/N 0160040675 & After including 0160040468 & 0160040672 .....18 qt (17 L)

Overflow Bottle Capacity

S/N 0160040675 & After including 0160040468 & 0160040672 .....2.5 qt (2,4 L)

Type of Coolant

0° to 104° F (-20° to 40° C)..... 50/50 ethylene glycol & water

-40° to 0° F (-40° to -20° C) ..... 60/40 ethylene glycol & water

**Hydraulic System**

System Capacity .....40 gal (151 L)

Reservoir Capacity to Full Mark .....23.3 gal (88,2 L)

Type of Oil

0° to 104° F (-20° to 40° C) ..... Mobilfluid® 424 Tractor Hydraulic Fluid

-40° to 0° F (-40° to -20° C)..... Exxon Univis HVI All Season Hydraulic Fluid

## Section 9 - Specifications

---

### Transmission

#### Capacity with Filter Change

Before S/N 0160040675 excluding 0160040468 & 0160040672...3.4 gal (12,9 L)

S/N 0160040675 & After including 0160040468 & 0160040672 ...4.2 gal (15,9 L)

#### Type of Oil

0° to 104° F (-20° to 40° C)..... Mobilfluid® 424 Tractor Hydraulic Fluid

-40° to 0° F (-40° to -20° C) ..... Mobilfluid® LT Hydraulic Fluid (75W-80)

### Transfer Case

Capacity..... 1.5 qt (1,4 L)

#### Type of Oil

0° to 104° F (-20° to 40° C)..... Mobilfluid® 424 Tractor Hydraulic Fluid

-40° to 0° F (-40° to -20° C) ..... Mobilfluid® LT Hydraulic Fluid (75W-80)

### Axles

Differential Housing Capacity ..... 15 qt (14,2 L)

Wheel End Capacity ..... 1.75 qt (1,7 L)

#### Type of Oil

0° to 104° F (-20° to 40° C)..... Mobilfluid® 424 Tractor Hydraulic Fluid

-40° to 0° F (-40° to -20° C) ..... Mobilfluid® LT Hydraulic Fluid (75W-80)

### Air Conditioning System (if equipped)

System Capacity.....3.25 lb (1474 g)

**Tires**

**G9-43A**

13.00 x 24, G-2/L-2 Bias-Ply Traction - 12 Ply	
Pneumatic.....	65 psi (4,5 bar)
Foam .....	Approx 542 lb (246 kg)
13.00 x 24, G-3/L-3 Bias Ply Rock - 12 Ply	
Pneumatic.....	65 psi (4,5 bar)
Foam .....	Approx 542 lb (246 kg)
13.00 x 24, G-2/L-2 Radial - 1 Star	
Pneumatic.....	70 psi (4,8 bar)
Foam .....	Approx 542 lb (246 kg)
15.50 x 25, G-2/L-2 Bias-Ply Traction - 12 Ply	
Pneumatic.....	58 psi (4,0 bar)
Foam .....	Approx 600 lb (272 kg)
15.50 x 25, G-3/L-3 Bias Ply Rock - 12 Ply	
Pneumatic.....	65 psi (4,5 bar)
Foam .....	Approx 600 lb (272 kg)
15.50 x 25, G-2/L-2 Radial - 1 Star	
Pneumatic.....	70 psi (4,8 bar)
Foam .....	Approx 600 lb (272 kg)
370/75-28, 14 Ply	
Pneumatic.....	76 psi (5,2 bar)
Foam .....	Approx 464 lb (210 kg)

**G10-43A**

14.00 x 24, G-2/L-2 Bias-Ply Traction - 12 Ply	
Pneumatic.....	70 psi (4,8 bar)
Foam .....	Approx 720 lb (327 kg)
14.00 x 24, G-3/L-3 Bias Ply Rock - 12 Ply	
Pneumatic.....	70 psi (4,8 bar)
Foam .....	Approx 720 lb (327 kg)
400/75-28, 16 Ply	
Pneumatic.....	76 psi (5,2 bar)
Foam .....	Approx 570 lb (259 kg)

**Wheel Lug Nut**

Torque .....	350-400 lb-ft (475-542 Nm)
--------------	----------------------------

## Section 9 - Specifications

---

### Performance

---

**Note:** Values shown are per machine as originally manufactured. Reference capacity charts in operator cab for specific model and attachment configuration values.

#### Maximum Lift Capacity

G9-43A .....	9,000 lb (4082 kg)
G10-43A .....	10,000 lb (4536 kg)

Maximum Lift Height..... 43 ft (13,1 m)

Capacity at Maximum Height..... 7,000 lb (3175 kg)

Maximum Forward Reach ..... 30.5 ft (9,29 m)

#### Capacity at Maximum Forward Reach

##### G9-43A

Before S/N 0160037671 .....	1,500 lb (680 kg)
S/N 0160037671 & After .....	1,200 lb (544 kg)

##### G10-43A

Outriggers Engaged.....	2700 lb (1225 kg)
Outriggers Not Engaged .....	1100 lb (499 kg)

Reach at Maximum Height ..... 5.5 ft (1,7 m)

Maximum Travel Speed.....19.5 mph (31,4 kmph)

Towing Capacity .....9,000 lb (4082 kg)

Frame Leveling..... 10 degrees

#### Maximum Travel Grade

Gradeability.....	45%
Side Slope .....	8.75%

**Dimensions**

---

Overall Height.....	95.5 in (2.426 mm)
Overall Width.....	99 in (2515 mm)
Cab Width.....	37 in (940 mm)
Track Width .....	82.2 in (2.088 mm)
Wheelbase .....	132 in (3.353 mm)
Length at Front Wheels .....	189.5 in (4.813 mm)
Overall Length (less Forks) .....	237.5 in (6.033 mm)
Ground Clearance .....	19 in (483 mm)
Turning Radius Over Tires .....	144 in (3.658 mm)
Turning Radius at Forks .....	204.6 in (5.197 mm)
Maximum Gross Vehicle Weight (no attachment)	
G9-43A .....	29,319 lb (13.299 kg)
G10-43A .....	30,119 lb (13.662 kg)
Maximum Front Axle Weight (no attachment) (boom level and fully retracted)	
G9-43A .....	12,915 lb (5858 kg)
G10-43A .....	14,423 lb (6542 kg)
Maximum Rear Axle Weight (no attachment) (boom level and fully retracted)	
G9-43A .....	16,404 lb (7441 kg)
G10-43A .....	15,696 lb (7120 kg)

## Section 9 - Specifications

---

### Maximum Ground Bearing Pressure

#### G9-43A

13.00 x 24

Air Filled ..... 149 lb/in<sup>2</sup> (10,5 kg/cm<sup>2</sup>)

Foam Filled ..... 201 lb/in<sup>2</sup> (14,1 kg/cm<sup>2</sup>)

15.50 x 25

Air Filled ..... 150 lb/in<sup>2</sup> (10,5 kg/cm<sup>2</sup>)

Foam Filled ..... 199 lb/in<sup>2</sup> (14,0 kg/cm<sup>2</sup>)

370/75-28

Air Filled ..... 94 lb/in<sup>2</sup> (6,6 kg/cm<sup>2</sup>)

Foam Filled ..... 121 lb/in<sup>2</sup> (8,5 kg/cm<sup>2</sup>)

#### G10-43A

14.00 x 24

Air Filled ..... 143 lb/in<sup>2</sup> (10,1 kg/cm<sup>2</sup>)

Foam Filled ..... 188 lb/in<sup>2</sup> (13,2 kg/cm<sup>2</sup>)

400/75-28

Air Filled ..... 120 lb/in<sup>2</sup> (8,4 kg/cm<sup>2</sup>)

Foam Filled ..... 154 lb/in<sup>2</sup> (10,8 kg/cm<sup>2</sup>)

<b>A</b>	
Accessory Control Lever .....	3-20
Additional Checks.....	8-1
Adjusting/Moving Forks.....	5-17
Air Conditioning Controls.....	3-18, 3-19
Air Conditioning System.....	9-2
Attachment Installation.....	5-13
Attachment Operation .....	5-18
Attachment Tilt Control.....	3-12, 3-13, 3-14
Attachments	
Approved.....	5-1
JLG Supplied .....	5-3
Unapproved .....	5-2
Auxiliary Hydraulic Joystick.....	3-16
<b>B</b>	
Battery.....	7-23
Boom Head-Mounted Winch .....	5-44
Boom Indicator	
Angle.....	3-26
Extension .....	3-26
Boom Joystick .....	3-12
Bucket .....	5-36
<b>C</b>	
Capacities	
Axles .....	9-2
Cooling System.....	9-1
Engine Oil .....	9-1
Fuel Tank.....	9-1
Hydraulic System.....	9-1
Transfer Case .....	9-2
Transmission.....	9-2
Capacity .....	5-6
Capacity Chart	
Example.....	5-12
Sample.....	5-8
Capacity Indicator Locations .....	5-7
Carriage w/Forks .....	5-19
Chemical Hazards .....	1-13
Cold Weather Starting Aids.....	4-2
Controls.....	3-2
<b>D</b>	
Decals .....	2-3
Dimensions .....	9-5
Disengaging a Load.....	4-8
Disengaging a Suspended Load.....	4-11
Driving Hazards on Slopes .....	1-9
Dual Fork Positioning Carriage.....	5-24
<b>E</b>	
Electrical Hazards .....	1-2
Emergency Exit from Enclosed Cab.....	6-2
Emergency Lowering of Boom.....	6-2
Emergency Procedures .....	6-1
Engine	
Extreme Cold Weather Starting...	4-3
Normal Operation .....	4-5
Starting .....	4-1
Engine Coolant Level.....	7-21
Engine Oil Level.....	7-14
<b>F</b>	
Fall Hazard.....	1-12
Fork Mounted Hook .....	5-32
Frame Level Joystick .....	3-14
Fuel Level .....	7-10
Fuel/Water Separator.....	7-11
<b>G</b>	
General Maintenance.....	7-2
Grapple Bucket .....	5-38
<b>H</b>	
Hazard Classification System .....	1-1
Headlights .....	3-21
Heater Controls.....	3-18, 3-19
Hydraulic Oil Level .....	7-15
Hydraulic Operated Attachment.....	5-16

# Index

---

<b>I</b>	
Ignition .....	3-8
<b>L</b>	
Leveling Procedure.....	4-7, 4-10
Lifting Personnel.....	1-8
Load Falling Hazard .....	1-7
Lubrication and Maintenance .....	7-1
Lubrication Schedule	
1000 Hour .....	7-8
250 Hour .....	7-7
50 Hour .....	7-6
<b>M</b>	
Mast Carriage .....	5-26
Mast Carriage w/Side Tilt .....	5-30
Mast Carriage w/Swing and Side Shift .....	5-28
<b>O</b>	
Operating with a Non-Suspended Load.....	4-6
Operating with a Suspended Load ...	4-9
Operation.....	4-1
Operational Check.....	2-16
Operator Cab.....	2-17
Operator Maintenance Instructions .....	7-10
Operator Seat .....	3-23
Outrigger Joysticks .....	3-15
<b>P</b>	
Park Brake.....	3-9
Parking Lights.....	3-21
Parking Procedure.....	3-9
Performance .....	9-4
Personnel Work Platform	
Fork Mounted .....	5-42
Quick Switch Mounted .....	5-40
Picking Up a Load .....	4-6
Picking Up a Suspended Load .....	4-9
Pinch Points and Crush Hazards ....	1-10
Placing a Load .....	4-8
Placing a Suspended Load .....	4-11
Pre-Operation Check and Inspection.....	2-1
<b>R</b>	
Restriction Indicator .....	7-12
Return Filter Indicator.....	7-20
Right Hand Panel .....	3-18
<b>S</b>	
Safety Decals .....	2-3
Safety Practices .....	1-1
Safety Signal Words.....	1-1
Seat Belt.....	3-25
Service and Maintenance Schedule	
10 Hour .....	7-3
1000 Hour .....	7-5
1500 Hour .....	7-5
1st 250 Hour .....	7-4
1st 50 Hour .....	7-3
2000 Hour .....	7-5
250 Hour .....	7-4
50 Hour .....	7-3
500 Hour .....	7-4
Shut-Down Procedure.....	4-5
Side Tilt Carriage .....	5-20
Specifications .....	9-1
Steer Modes.....	3-22
Swing Carriage.....	5-22
<b>T</b>	
Tip Over Hazard.....	1-3
Tires .....	7-16, 9-3
Air Pressure .....	7-16
Damage .....	7-16
Replacement.....	7-17
Towing.....	6-1
Transmission Control Lever	
Direction of Travel.....	3-10
Gear Selection .....	3-11

Transport	
Lifting .....	4-13
Tiedown .....	4-12
Transporting a Load .....	4-7
Transporting a Suspended Load ....	4-10
Travel Hazard.....	1-6
Truss Boom .....	5-34
Turn Signal .....	3-21

**W**

Walk-Around Inspection .....	2-14
Warm-Up Check.....	2-16
Wheel Installation .....	7-18
Wheel Lug Nut.....	9-3
Wheel Replacement .....	7-17
Windows.....	2-18
Windshield Washer Fluid Level .....	7-24









An Oshkosh Corporation Company

# TRANSFER OF OWNERSHIP

**To Product Owner:**

If you now own but ARE NOT the original purchaser of the product covered by this manual, we would like to know who you are. For the purpose of receiving safety-related bulletins, it is very important to keep JLG Industries, Inc. updated with the current ownership of all JLG products. JLG maintains owner information for each JLG product and uses this information in cases where owner notification is necessary.

Please use this form to provide JLG with updated information with regard to the current ownership of JLG products. Please return completed form to the JLG Product Safety & Reliability Department via facsimile or mail to address as specified below.

Thank You,  
Product Safety & Reliability Department  
*JLG Industries, Inc.*  
13224 Fountainhead Plaza  
Hagerstown, MD 21742  
USA  
Telephone: +1-717-485-6591  
Fax: +1-301-745-3713

**NOTE:** Leased or rented units should not be included on this form.

**Mfg. Model:** \_\_\_\_\_

**Serial Number:** \_\_\_\_\_

**Previous Owner:** \_\_\_\_\_

**Address:** \_\_\_\_\_  
\_\_\_\_\_

**Country:** \_\_\_\_\_ **Telephone:** (\_\_\_\_\_) \_\_\_\_\_

**Date of Transfer:** \_\_\_\_\_

**Current Owner:** \_\_\_\_\_

**Address:** \_\_\_\_\_  
\_\_\_\_\_

**Country:** \_\_\_\_\_ **Telephone:** (\_\_\_\_\_) \_\_\_\_\_








**Who in your organization should we notify?**

**Name:** \_\_\_\_\_

**Title:** \_\_\_\_\_



# Hand Signals

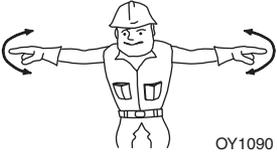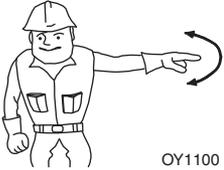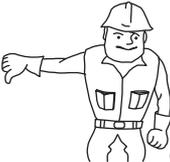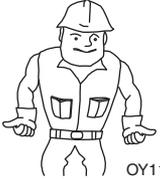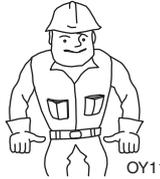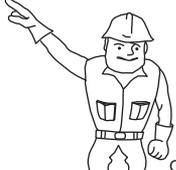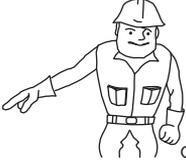 <p>OY1090</p> <p>EMERGENCY STOP - With both arms extended laterally, hands open downward, move arms back and forth.</p>	 <p>OY1100</p> <p>STOP - With either arm extended laterally, hand open downward, move arm back and forth.</p>	 <p>OY1110</p> <p>STOP ENGINE - Draw thumb or forefinger across throat.</p>
 <p>OY1120</p> <p>RAISE BOOM - With either arm extended horizontally, fingers closed, point thumb upward.</p>	 <p>OY1130</p> <p>LOWER BOOM - With either arm extended horizontally, fingers closed, point thumb downward.</p>	 <p>OY1140</p> <p>MOVE SLOWLY - Place one hand motionless in front of hand giving motion signal. (Raise load slowly shown)</p>
 <p>OY1150</p> <p>EXTEND BOOM - With both hands clenched, point thumbs outward.</p>	 <p>OY1160</p> <p>RETRACT BOOM - With both hands clenched, point thumbs inward.</p>	 <p>OY1170</p> <p>THIS FAR TO GO - With hands raised and open inward, move hands laterally, indicating distance to go.</p>
 <p>OY1180</p> <p>TILT FORKS UP - With one arm held at side, extend other arm upward at about 45 degrees.</p>	 <p>OY1190</p> <p>TILT FORKS DOWN - With one arm held at side, extend other arm downward at about 45 degrees.</p>	

**Special Signals** - When signals for auxiliary equipment functions or conditions not covered are required, they shall be agreed upon in advance by the operator and signalman.



31200150



An Oshkosh Corporation Company

*JLG Industries, Inc.*  
*1 JLG Drive*  
*McConnellsburg PA. 17233-9533*  
*USA*  
*Phone: +1-717-485-5161*  
*Customer Support Toll Free: 1-877-554-5438*  
*Fax: +1-717-485-6417*

## ***JLG Worldwide Locations***

---

JLG Industries (Australia)  
P.O. Box 5119  
11 Bolwarra Road  
Port Macquarie  
N.S.W. 2444  
Australia  
Phone: +61 265 811 111  
Fax: +61 265 810 122

JLG Latino Americana Ltda.  
Rua Eng. Carlos Stevenson,  
80-Suite 71  
13092-310 Campinas-SP  
Brazil  
Phone: +55 193 295 0407  
Fax: +55 193 295 1025

JLG Industries (UK) Ltd  
Bentley House  
Bentley Avenue  
Middleton  
Greater Manchester  
M24 2GP - England  
Phone: +44 (0)161 654 1000  
Fax: +44 (0)161 654 1001

JLG France SAS  
Z.I. de Baulieu  
47400 Fauillet  
France  
Phone: +33 (0)5 53 88 31 70  
Fax: +33 (0)5 53 88 31 79

JLG Deutschland GmbH  
Max-Planck-Str. 21  
D - 27721 Ritterhude-Ihlpohl  
Germany  
Phone: +49 (0)421 69 350 20  
Fax: +49 (0)421 69 350 45

JLG Equipment Services Ltd.  
Rm 1107 Landmark North  
39 Lung Sum Avenue  
Sheung Shui N.T.  
Hong Kong  
Phone: +852 2639 5783  
Fax: +852 2639 5797

JLG Industries (Italia) s.r.l.  
Via Po. 22  
20010 Pregnana Milanese - MI  
Italy  
Phone: +39 029 359 5210  
Fax: +39 029 359 5845

JLG Europe B.V.  
Polaris Avenue 63  
2132 JH Hoofddorp  
The Netherlands  
Phone: +31 (0)23 565 5665  
Fax: +31 (0)23 557 2493

JLG Polska  
Ul. Krolewska  
00-060 Warszawa  
Poland  
Phone: +48 (0)914 320 245  
Fax: +48 (0)914 358 200

Plataformas Elevadoras  
JLG Iberica, S.L.  
Trapadella, 2  
P.I. Castellbisbal Sur  
08755Castellbisbal, Barcelona  
Spain  
Phone: +34 93 772 4 700  
Fax: +34 93 771 1762

JLG Sverige AB  
Enkopingsvagen 150  
Box 704  
SE - 176 27 Jarfalla  
Sweden  
Phone: +46 (0)850 659 500  
Fax: +46 (0)850 659 534