



Turbocharger Coolant Feed Pip...**TURBOCHARGER COOLANT FEED PIPE REPLACEMENT (1.6L DIESEL LH7) (ENGINE HEATING AND COOLING)**Document ID#
3287046**TURBOCHARGER COOLANT FEED PIPE REPLACEMENT (1.6L DIESEL LH7) (ENGINE HEATING AND COOLING)****Removal Procedure**

1. Remove the turbocharger. Refer to [Turbocharger Replacement](#) .

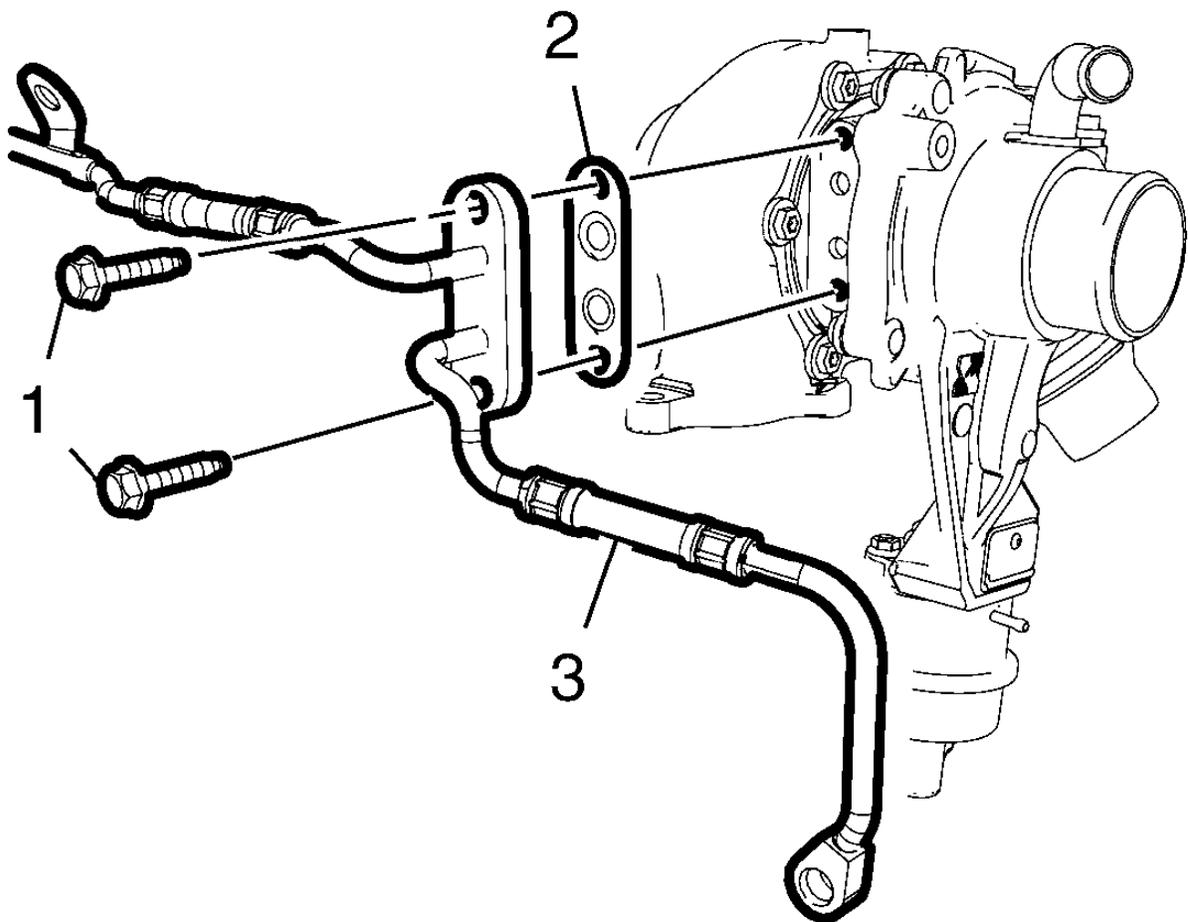

2. Remove the 2 turbocharger coolant feed and return pipe assembly bolts (1).
3. Remove the turbocharger coolant feed and return pipe assembly (3) and the gasket (2).

Installation Procedure

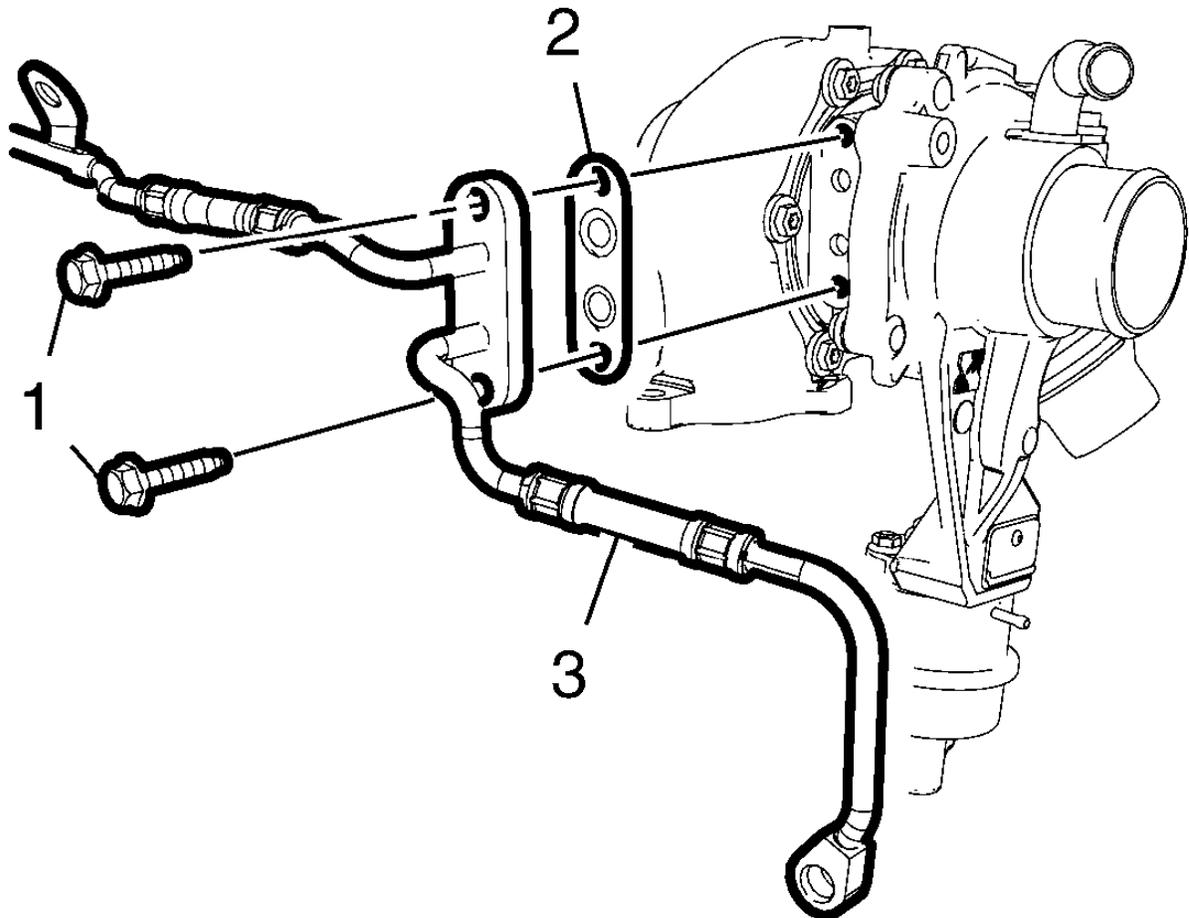

1. Install the turbocharger coolant feed and return pipe assembly (3) and a NEW gasket (2).

Caution: Refer to [Fastener Caution](#) .

2. Install the 2 turbocharger coolant feed and return pipe assembly bolts (1) and tighten to **10 N•m (89 lb in)** .

3. Install the turbocharger. Refer to [Turbocharger Replacement](#) .

Portions of materials contained herein are sourced from General Motors Inc., Co.

Copyright 2007 - 2018 Service Repair Solutions, Inc.