


**INSTRUMENT CLUSTER SCHEMATICS...**

**AIR TEMPERATURE AND DRIVER INFORMATION CENTER**

Document ID# 4335171

**AIR TEMPERATURE AND DRIVER INFORMATION CENTER**

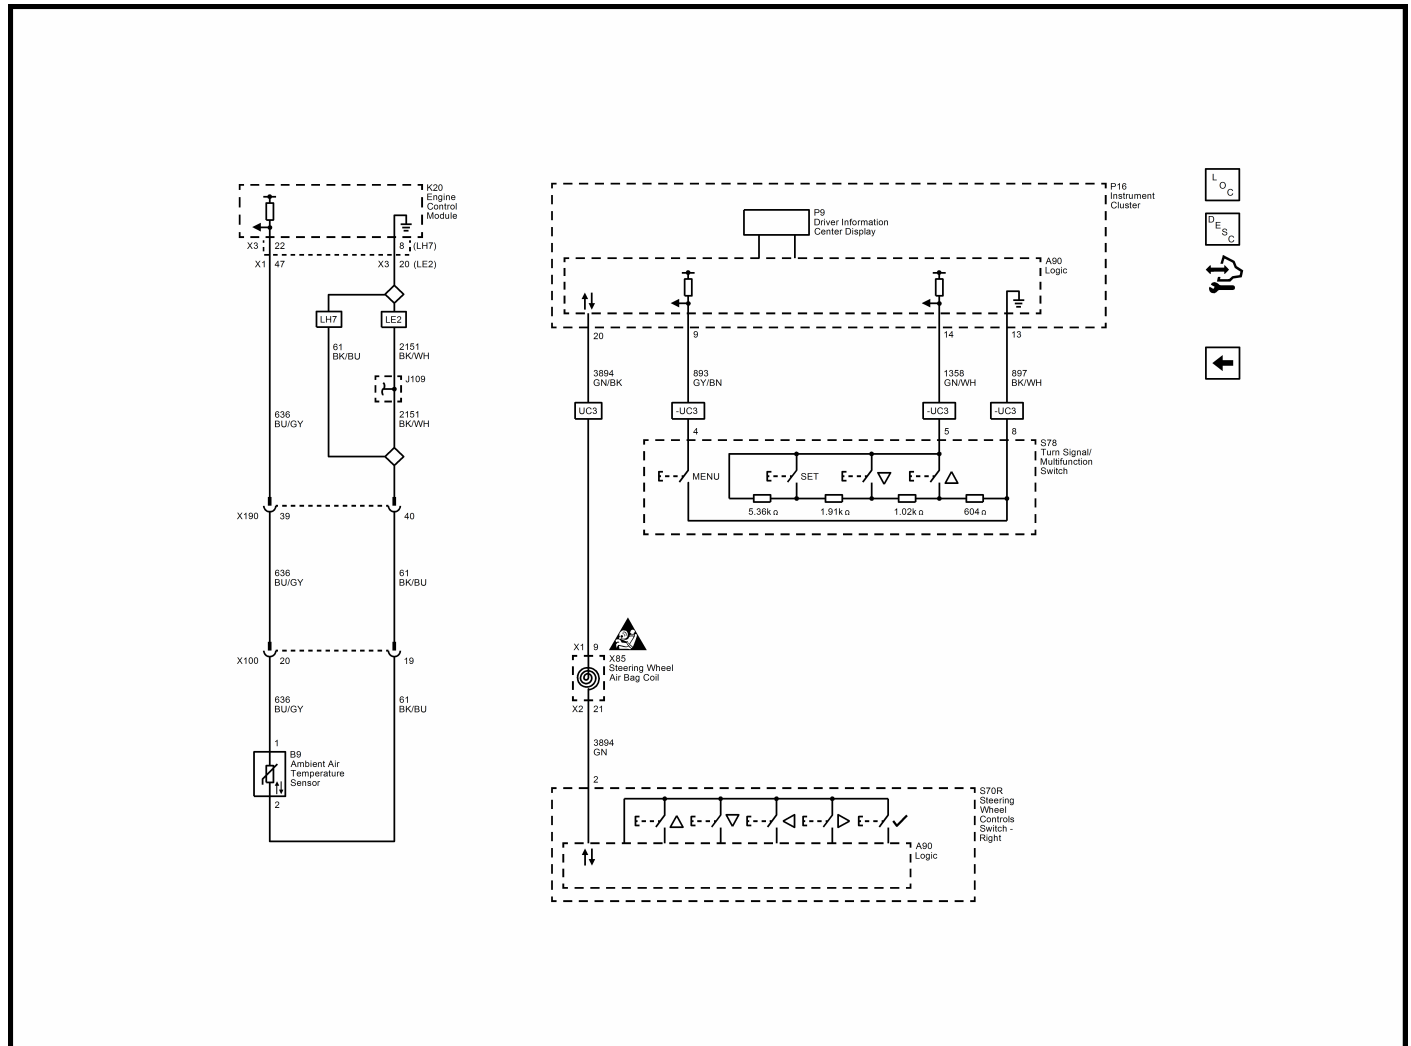

Show/hide callouts

ID	Description
61	Outside Ambient Temperature Sensor Low Reference
636	Outside Ambient Air Temperature Sensor Signal
893	Driver Information Center Select Menu Switch Signal
897	Driver Information Center Switch Low Reference
1358	Driver Information Center Switch Signal
2151	Signal Ground
3894	Local Interconnect Network Bus 12
COMP	<a href="#">Control Module References</a>
DESC	<a href="#">Indicator/Warning Message Description and OperationInstrument Cluster Description and OperationDriver Information Center (DIC) Description and Operation</a>
ICON	<a href="#">Master Electrical Schematic Icons</a>

ID	Description
LOC	<a href="#">Master Electrical Component List</a>
PREV	<a href="#">Engine Oil Pressure Control and Gauges</a>
1358_GN/WH	1358 GN/WH
2151_BK/WH	2151 BK/WH
2151_BK/WH	2151 BK/WH
3894_GN	3894 GN
3894_GN/BK	3894 GN/BK
61_BK/BU	61 BK/BU
61_BK/BU	61 BK/BU
61_BK/BU	61 BK/BU
636_BU/GY	636 BU/GY
636_BU/GY	636 BU/GY
636_BU/GY	636 BU/GY
893_GY/BU	893 GY/BU
897_BK/WH	897 BK/WH
A90	A90 Logic
A90	A90 Logic
B9	B9 Ambient Air Temperature Sensor <a href="#">Front of the Vehicle Components</a> <a href="#">B9 Ambient Air Temperature Sensor</a>
CAV_1	1
CAV_13	13
CAV_14	14
CAV_19	19
CAV_2	2
CAV_20	20
CAV_20	20
CAV_20	20
CAV_21	21
CAV_22	22
CAV_39	39
CAV_4	4
CAV_40	40
CAV_47	47
CAV_5	5

ID	Description
CAV_7	7
CAV_8	8
CAV_8	8
CAV_9	9
CAV_9	9
CONN_X1	X1
CONN_X1	X1
CONN_X2	X2
CONN_X3	X3
CONN_X3	X3
J109	J109 <a href="#">Engine Harness Routing View - Right Front (LE2).</a>
K20	K20 Engine Control Module <a href="#">K20 Engine Control Module X1 (LE2+LEX).</a> <a href="#">K20 Engine Control Module X1 (LH7).</a> <a href="#">K20 Engine Control Module X2 (LE2+LEX).</a> <a href="#">K20 Engine Control Module X2 (LH7).</a> <a href="#">K20 Engine Control Module X3 (LE2+LEX).</a> <a href="#">K20 Engine Control Module X3 (LH7).</a>
LE2	ENGINE-GAS, 4 CYL, L4, 1.4L, DI, DOHC, VVT, TURBO, ALUM, GEN 1, GMNA <a href="#">Schematics RPO Code List</a>
LE2	ENGINE-GAS, 4 CYL, L4, 1.4L, DI, DOHC, VVT, TURBO, ALUM, GEN 1, GMNA <a href="#">Schematics RPO Code List</a>
LEX	ENGINE-GAS, 4 CYL, L4, 1.4L, DI, DOHC, VVT, ALUM, TURBO, GEN 1, VAR 1 <a href="#">Schematics RPO Code List</a>
LEX	ENGINE-GAS, 4 CYL, L4, 1.4L, DI, DOHC, VVT, ALUM, TURBO, GEN 1, VAR 1 <a href="#">Schematics RPO Code List</a>
LH7	ENGINE-DIESEL, UREA, 4 CYL, 1.6L, L4, CRI, DOHC, VGT, ALUM <a href="#">Schematics RPO Code List</a>
LH7	ENGINE-DIESEL, UREA, 4 CYL, 1.6L, L4, CRI, DOHC, VGT, ALUM <a href="#">Schematics RPO Code List</a>
P16	P16 Instrument Cluster <a href="#">Instrument Panel Components</a> <a href="#">P16 Instrument Cluster</a>
P9	P9 Driver Information Center Display
S70R	S70R Steering Wheel Controls Switch - Right
S78	S78 Turn Signal/Multifunction Switch <a href="#">Instrument Panel Components</a> <a href="#">S78 Turn Signal/Multifunction Switch</a>
UC3	CONTROL-STEERING WHEEL, <a href="#">RADIO</a> and <a href="#">PHONE</a> , REDUNDANT CONTROLS <a href="#">Schematics RPO Code List</a>
UC3	CONTROL-STEERING WHEEL, <a href="#">RADIO</a> and <a href="#">PHONE</a> , REDUNDANT CONTROLS <a href="#">Schematics RPO Code List</a>
UC3	CONTROL-STEERING WHEEL, <a href="#">RADIO</a> and <a href="#">PHONE</a> , REDUNDANT CONTROLS <a href="#">Schematics RPO Code List</a>

ID	Description
UC3	CONTROL-STEERING WHEEL, <a href="#">RADIO</a> and PHONE, REDUNDANT CONTROLS <a href="#">Schematics RPO Code List</a>
X100	X100 <a href="#">Forward Lamp Harness Routing-Driver Side Engine Compartment</a> <a href="#">Body Harness Routing - Engine Compartment</a> <a href="#">X100 Forward Lamp Harness to Body Harness</a>
X100	X100 <a href="#">Forward Lamp Harness Routing-Driver Side Engine Compartment</a> <a href="#">Body Harness Routing - Engine Compartment</a> <a href="#">X100 Forward Lamp Harness to Body Harness</a>
X190	X190 <a href="#">Engine Harness Routing View - Right Front (LH7)</a> <a href="#">Engine Harness Routing View - Left Rear (LE2)</a> <a href="#">X190 Engine Harness to Body Harness (LE2+LEX)</a> <a href="#">X190 Engine Harness to Body Harness (LH7+M3D)</a> <a href="#">X190 Engine Harness to Body Harness (LH7+MZ4)</a>
X190	X190 <a href="#">Engine Harness Routing View - Right Front (LH7)</a> <a href="#">Engine Harness Routing View - Left Rear (LE2)</a> <a href="#">X190 Engine Harness to Body Harness (LE2+LEX)</a> <a href="#">X190 Engine Harness to Body Harness (LH7+M3D)</a> <a href="#">X190 Engine Harness to Body Harness (LH7+MZ4)</a>
X85	X85 Steering Wheel Air Bag Coil <a href="#">Instrument Panel Components</a> <a href="#">X85 Steering Wheel Air Bag Coil</a>

Portions of materials contained herein are sourced from General Motors Inc., Co.

Copyright 2007 - 2018 Service Repair Solutions, Inc.