


INSTRUMENT CLUSTER SCHEMATICS...

POWER, GROUND, SERIAL DATA, AND INDICATORS

Document ID# 4335167

POWER, GROUND, SERIAL DATA, AND INDICATORS

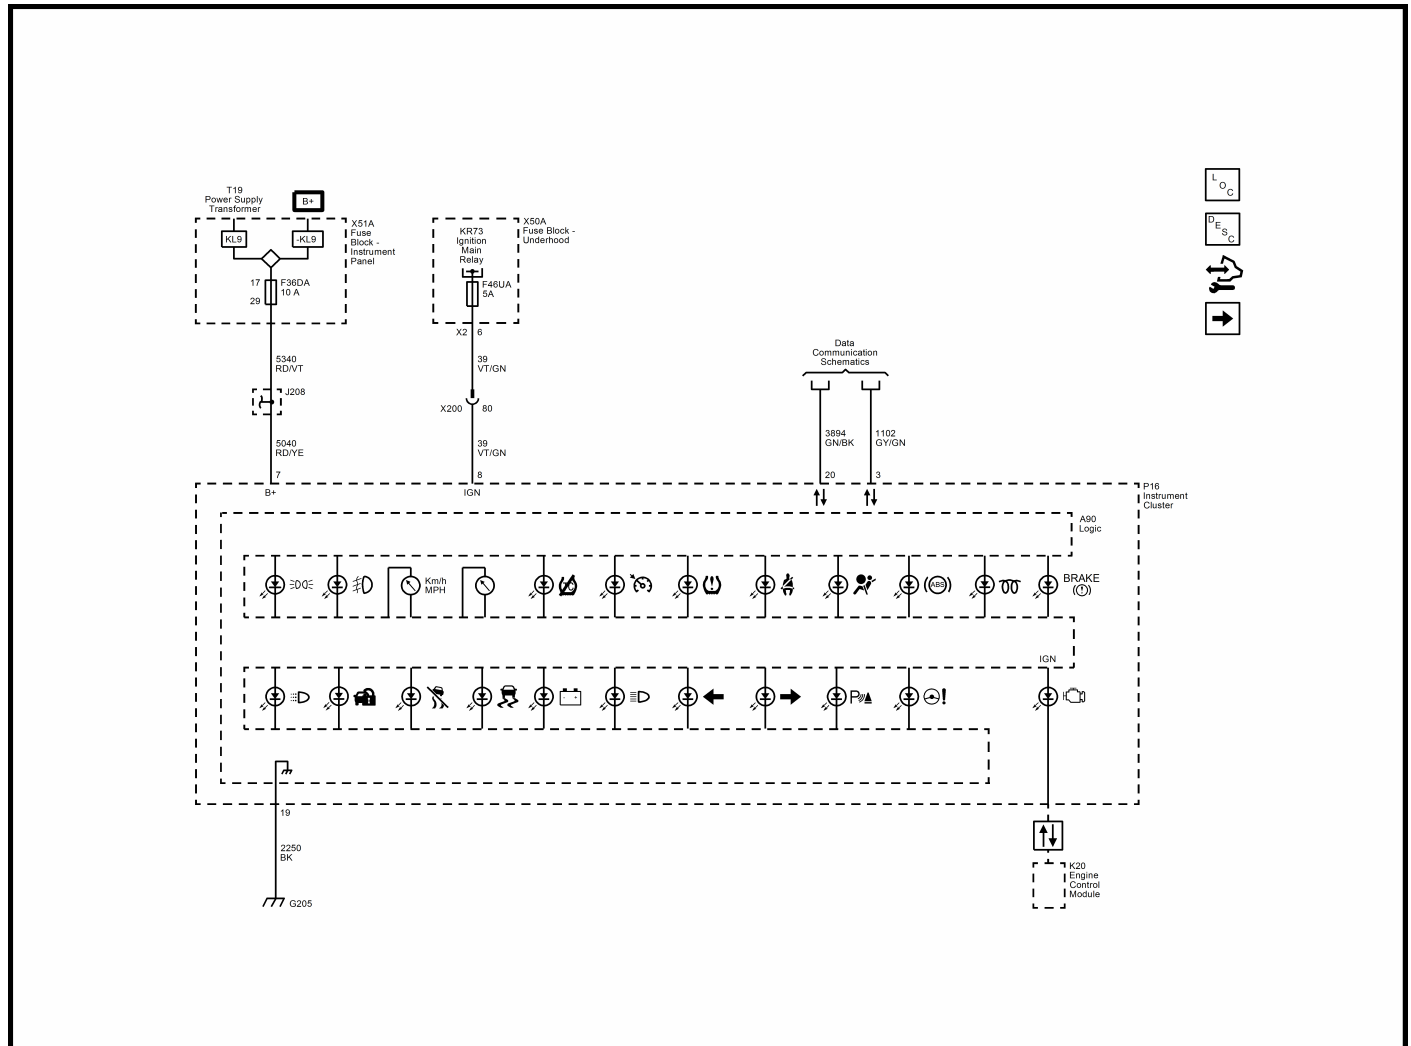

Show/hide callouts

ID	Description
39	Run/Crank Ignition 1 Voltage
2250	Ground
3894	Local Interconnect Network Bus 12
5060	Low Speed GMLAN Serial Data
5340	Battery Positive Voltage
COMP	Control Module References
DESC	Indicator/Warning Message Description and Operation Instrument Cluster Description and Operation Driver Information Center (DIC) Description and Operation
LOC	Master Electrical Component List
NEXT	Engine Oil Pressure Control and Gauges

ID	Description
2250_BK	2250 BK
3894_GN/BK	3894 GN/BK
39_VT/GN	39 VT/GN
39_VT/GN	39 VT/GN
5060_GN	5060 GN
5340_RD/VT	5340 RD/VT
5340_RD/VT	5340 RD/VT
A90	A90 Logic
CAV_17	17
CAV_19	19
CAV_20	20
CAV_29	29
CAV_3	3
CAV_6	6
CAV_7	7
CAV_8	8
CAV_80	80
CONN_X2	X2
Data_Communication_Schematics_REF	Data Communication Schematics Data Communication Schematics
Data_Communication_Schematics_REF	Data Communication Schematics Linear Interconnect Network (LIN) Serial Data Low Speed GMLAN
F36DA	F36DA 10 A F15DA, F28DA, F32DA, F34DA, F35DA, F36DA and F37DA Fuses X51A Fuse Block - Instrument Panel Top View
F46UA	F46UA 5A B+ Bus (2 of 3) F10UA, F21UA, F32UA, F43UA, F44UA, F45UA, F46UA, F47UA, F50UA, F52UA and F56UA Fuses
G205	G205 G205 G205
J208	J208 Instrument Panel Harness Routing
K20	K20 Engine Control Module K20 Engine Control Module X1 (LE2+LEX) K20 Engine Control Module X1 (LH7) K20 Engine Control Module X2 (LE2+LEX) K20 Engine Control Module X2 (LH7) K20 Engine Control Module X3 (LE2+LEX) K20 Engine Control Module X3 (LH7)
KL9	ENG CONTROL-STOP/START SYS, CONVENTIONAL AT, CONVENTIONAL MT OR BRAKE RELEASE LATE RESTART Schematics RPO Code List

ID	Description
KL9	ENG CONTROL-STOP/START SYS, CONVENTIONAL AT, CONVENTIONAL MT OR BRAKE RELEASE LATE RESTART Schematics RPO Code List
KR73	KR73 Ignition Main Relay X50A Fuse Block - Underhood Top View
P16	P16 Instrument Cluster Instrument Panel Components P16 Instrument Cluster
SD	Serial Data
T19	T19 Power Supply Transformer T19 Power Supply Transformer
X200	X200 Instrument Panel Harness Routing Passenger Compartment Harness Routing-Driver Side Front X200 Instrument Panel Harness to Body Harness
X50A	X50A Fuse Block - Underhood Engine Compartment Components X50A Fuse Block - Underhood X1 X50A Fuse Block - Underhood X11 X50A Fuse Block - Underhood X12 X50A Fuse Block - Underhood X2 X50A Fuse Block - Underhood X3 (LE2) X50A Fuse Block - Underhood X6 X50A Fuse Block - Underhood X8
X51A	X51A Fuse Block - Instrument Panel Instrument Panel Components Center X51A Fuse Block - Instrument Panel Wire Entry

Portions of materials contained herein are sourced from General Motors Inc., Co.

Copyright 2007 - 2018 Service Repair Solutions, Inc.