

PISTOLERO™



PistoLaser™ Instructions




Robert Louis Company 31 Shepard Hill Road Newtown, CT 06470
Phone: 203-270-1400 Fax: 203-270-3881
www.robertlouisco.com Email: bob@rlouis.com

First Thing: Remove magazine. Unload pistol. Unload cylinder (revolver). Remove all live ammo from the practice area.

1. Screw the appropriate caliber spud to the Nose Cone. The five spuds are 45, 44, 40, 357/9mm, 22.
2. Place the spud end into the muzzle of the gun. The spud will enter the barrel without harming it since the construction is all aluminum with brass bead contact balls. Set the PistoLaser firmly against the gun muzzle.
3. Adjust the finger ring to fit your trigger finger and place it so you can comfortably touch your ring-mounted finger to the gun trigger. Touching the ring to the trigger and squeezing will close the microswitch on the ring and fire the laser.

Caliber Spud Color Key	
Gold	- 45
Green	- 44
Blue	- 40
Red	- 357/9mm
Silver	- 22




Always install the Cable Wire "down" when using the PistoLaser.

Sighting in the PistoLaser for your gun:

There are four 4-40 size adjustment screws; the screws use a .050" Allen wrench.


1. To move the laser dot "up" on the target, loosen the top screw – 1/20th turn increments – and tighten the bottom screw in very small increments.
2. To move the laser dot "left" on the target, loosen the right screw – 1/20th turn increments – and tighten the left screw in very small increments.



Do not overtighten the spud to the nose cone – hand tightening is fine.

CAUTION: ALWAYS REMOVE THE PISTOLASER BEFORE SHOOTING THE GUN!!

Battery Installation: When installing the three (3) LR-44 batteries into the PistoLaser, the smaller section of the batteries faces the Nose Cone; the larger section faces the PistoLaser spud.



The Pistolero PistoLaser is U.S. Patented, #9,243,860.