



# INSTRUCTIONS FOR INSTALLING INSYNC ENG KEYPADS DEPICTED BELOW:

INSYNC P/N  
D13004

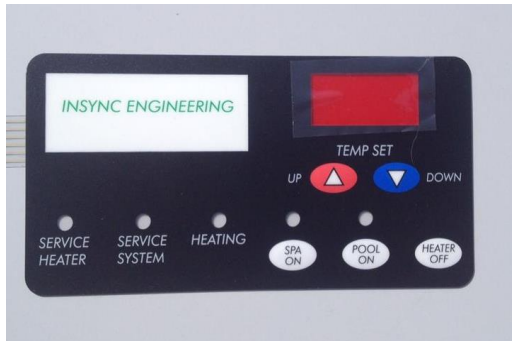

INSYNC P/N  
D13021

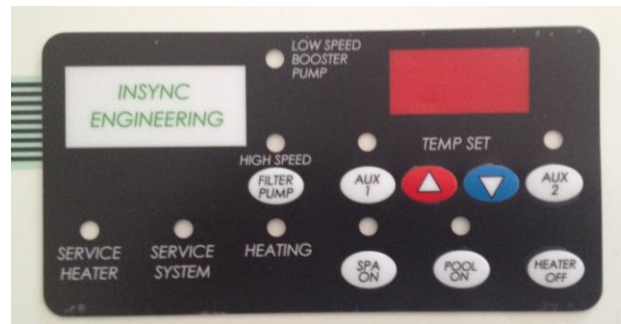

INSYNC P/N  
D13004 CLR



## EXISTING HEATERS MAY LOOK LIKE THOSE DEPICTED BELOW:



BEFORE DOING ANY OF THESE STEPS **SHUT OFF ALL POWER TO THE HEATER BY FLIPPING THE CIRCUIT BREAKERS ON YOUR POOL EQUIPMENT.** IF YOU DO NOT KNOW HOW TO DO THIS FIND A NEIGHBOR THAT DOES – IT IS REALLY SIMPLE AND YOU SHOULD NOT HAVE TO PAY AN ELECTRICIAN TO HELP YOU. **IF YOU DO NOT FEEL COMFORTABLE THEN PAY AN ELECTRICIAN!**

**Take pictures with your phone if you need to remember how things get hooked up**

STEP 1. ALL OF THESE KEYPAD REPLACEMENTS ARE : YOU MUST REMOVE THE HOUSING THAT YOUR KEYPAD IS CURRENTLY BONDED TOO. THIS MAY REQUIRE REMOVING SCREWS. REFER TO YOUR SOPECIFIC OWNERS MANUAL FOR THE PARTS THAT NEED TO BE REMOVED.

STEP 2: REMOVE THE CONTROL BOARD THAT IS BEHIND YOUR KEYPAD. HANDLE BOARD BY THE EDGES ONLY, AND REMEMBER TO DISSIPATE ANY STATIC CHARGE IN YOUR BODY BY TOUCHING METAL.

STEP 3: UNPLUG YOUR OLD KEYPAD FROM THE CONTROL BOARD. REMOVE YOUR OLD KEYPAD. REMOVE ALL DEBRIS AND OLD ADHESIVE FROM YOUR EXISTING PLASTIC. YOU CAN USE ISOPROPYL ALCOHOL TO DO THIS (IPA)

STEP 4: ADHERE YOUR NEW KEYPAD TO YOUR PLASTIC.

STEP 5: PLUG IN ALL CONNECTIONS

“All Pentair trademarks and logos are owned by Pentair plc, or one of its global affiliates. MasterTemp®, Max-E-Therm® and Sta-Rite® are registered trademarks of Pentair Water Pool and Spa, Inc. and/or its affiliated companies in the United States and/ or other countries.”