## INSTRUCTIONS FOR INSTALLING INSYNC ENG OVERLAYS DEPICTED BELOW:

**INSYNC P/N** INSYNC ENGINEERING TEMPERATURE SET D13032 UP DOWN 0 ۲ RUN TC POOL SPA **INSYNC ENGINEERING** TEMPERATURE SET **INSYNC P/N** D13033 POOL SPA

"All HAYWARD trademarks and logos are owned by HAYWARD or one of its global affiliates.

EXISTING HEAT PUMPS MAY LOOK LIKE THOSE DEPICTED BELOW



## REMOVE YOUR OLD WORN OUT OVERLAY, REPLACE WITH YOUR NEW INSYNC ENGINEERING OVERLAY BY FOLLOWING THESE STEPS

**Disconnect power** 

Remove outer black cover screws

Disconnect main 14-pin harness

Remove 4 circuit board mounting screws from large black cover

Disconnect two bezel clips (one on each side) holding bad overlay mount to circuit boards

Peel old label

Make sure all appropriate bezel plate holes clear of label debris

Dry fit, ensuring proper holes (run, pool, spa) visible and switch hole areas clear

Clean bezel with plastic cleaner and dry

Affix label

**Connect Bezel Clips** 

Re-mount circuit board

Affix harness

Affix cover screws

**Connect Power** 











