INSTALLATION INSTRUCTIONS FOR MAYTAG NEPTUNE COMPATIBLE KEYPAD REPLACEMENT MANUFACTURED BYINSYNC ENGINEERING

PREPARE FOR INSTALLATION:

- 1. TURN OFF POWER
- 2. PULL DRYER AWAY FROM WALL SO YOU CAN GET TO THE REAR
- 3. GET ACCESS TO TOP OF PLASTIC HOUSING USING STEPSTOOL



GET ACCESS FROM TOP OF PLASTIC HOUSING REMOVE ANY SCREWS HOLDING THE HOUSING ONTO YOUR WASHER. LIFT HOUSING TO ACCESS THE CONTROL BOARD AND KEYPAD CONNECTOR



▲ WARNING



Warning - Always shut off electrical power to the unit before beginning any service repair procedures.

The replacement console assembly consists of the console, medallion and membrane pad.

CONSOLE REMOVAL

- 1. Disconnect power to the unit.
- Remove the four screws securing the console to the rear cover plate.

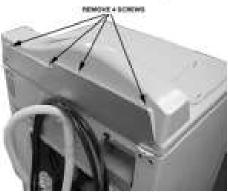


Figure 5-1

- Lay a drop cloth across the top cover of the washer.
- Grasp the top of the console and gently rock the top of the console forward away from the rear console back. Note the hooked tabs on bottom of the console, which engage the slots in the top cover.



Figure 5-2

 For reinstallation, reverse the aforementioned steps.

MICROPROCESSOR BOARD REMOVAL

- 1. Disconnect power to the washer.
- 2. Remove the console assembly.
- Carefully remove the membrane pad harness and other wires from the microprocessor board.

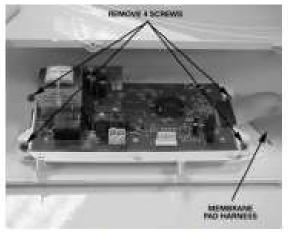


Figure 5-3 LCD MODEL



Figure 5-4 LED MODEL

UNPLUG THE RIBBON CABLE FROM YOUR CONTROL BOARD REMOVE YOUR OLD KEYPAD FROM THE HOUSING

TIP: IF OLD KEYPAD IS DIFICULT TO REMOVE OR IS LEAVING DEBRIS – USE A HAIR DRYER TO HEAT UP THE KEYPAD AND LOOSEN THE OLD ADHESIVE



CLEAN THE MATING SURFACE OF ANY DEBRIS YOU CAN USE IPA – ISO PROPYL ALCOHOL

ROUTE NEW RIBBON THRU HOLE AND THEN ADHERE YOUR KEYPAD TO SURFACE YOU GET ONE CHANCE TO DO THIS BECAUSE YOU CAN NOT PULL UP THE KEYPAD WITHOUT DAMAGING THE DOME SWITCHES SO CAREFULLY ALIGN THE NEW KEYPAD BEFORE PRESSING IN PLACE

