



wig alive[®]

WIG CAPS

WIG DRYING CABINETS

www.wigalive.com | tel: (980) 890-7010

SAVE THESE INSTRUCTIONS

Installation and Operation of your Guardian[®] Manikin & Wig Dryer

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed.

Read all instructions before using the appliance.

See grounding instructions and only connect to properly grounded outlets.

Your Manikin & Wig Dryer has been carefully inspected and packaged at the factory for normal handling and transportation.

The dryer should be carefully inspected for any sign of damage to the unit by improper handling.

Interstate commerce regulations require that claims for damage be reported to the transportation company within 5 days AFTER receipt of the unit.

SETTING UP THE DRYER

The Manikin & Wig Dryer should be placed on a level floor. If the floor is not level, insert shims or spacers to provide a firm, stable footing for the dryer cabinet.

ELECTRICAL SERVICE

Electrical service for this dryer is 115 volts, single phase, 60 cycle, AC current only. The current rating is 15 Amps.

The Manikin & Wig Dryer should be used on a separate electrical circuit protected by a 20 Amp fuse or circuit breaker.

If an extension cord is required, use a heavy-duty cord with at least 16 guage wire and with a grounding type plug that is compatible with the plug of the dryer.

GROUNDING INSTRUCTIONS

This appliance should be grounded while in use to protect the operator from electric shock hazard. The appliance is equipped with a three-conductor cord and three prong grounding type plug.

PLACING YOUR DRYER INTO OPERATION

Your Manikin & Wig Dryer provides maximum drying efficiency with maximum economy of operation. The Guardian Dryer reduces air conditioning costs. Operating cost for the Guardian Dryer is less than one fourth the costs of individual dome dryers.

The Guardian Dryer provides protection to fibers and materials for the wigs and manikins with a patented drying action that avoids “baking” of hair and fiber.

The Wig Dryer is placed in operation by setting the “time control” switch for the desired drying time. At the end of the drying cycle, your dryer will shut itself off until it is again placed into operation.

An automatic thermostat “heat control” is furnished to regulate the temperature. This may be set at “high” for all normal hairpieces.

TYPICAL MANIKIN & WIG DRYING PROCEDURES

CAUTION: DO NOT dry wigs with any residue of flammable solvent or dry-cleaning fluid.

Drying time will vary for individual wigs, depending on style and technique of the hair set, the material of the weft and block and the setting lotions used.

Some setting solutions extend drying time. It will take longer to dry when starting with a cold drying cabinet.

Full wigs usually dry in 50-90 minutes. Wiglets dry in 15-30 minutes. Old drying blocks which are saturated will keep the wig weft wet and cause extended drying times. Use a layer of aluminum foil to separate the wig from an old wet block.

After drying synthetic hair, allow wig to cool to room temperature before combing and styling. This must be done to ensure a proper set of synthetic hair.

Actual drying procedures may vary to the individual needs of each shop, thanks to the versatility of your Manikin & Wig Dryer.

NOTE: There are some plastic curlers which lose their shape at higher drying temperatures. Test a sample of your curler at your desired operating temperatures and use only the curlers that perform at these temperatures.

MAINTENANCE

Clean the air inlet on the left side of the dryer with a vacuum cleaner each month to keep it from becoming clogged with hair cuttings and other dirt. If this happens, the drying effect will be reduced.

It is desirable for the blower / heating unit to be inspected and cleaned once each year by a qualified serviceman.

PROTECTING THE FINISH

The insulating wood cabinet has a furniture style finish that is moisture and heat resistant.

Use neutral furniture polish for maintaining the exterior finish.

Only use a damp cloth on the interior surfaces.

LIMITED WARRANTY

The manufacturer warrants each dryer for a period of one year from the date of sale against defective material and workmanship.

The warranty DOES NOT include any cost for labor to affect the replacement of any parts under this warranty.

Any parts replaced or exchanged will be FOB manufacture's plant in Allentown, PA. All freight charges will be paid by the purchaser. No collect shipments will be accepted. This guarantee shall be void if the unit has been misused, improperly handled, or improperly serviced. The manufacturer shall be the sole judge of guarantee applicability.

Expressly excluded are implied warranties of merchantability and fitness for purpose. There are no warranties expressed or implied which extend beyond the description on the face hereof.

MANUFACTURER CONTACT

Address service inquiries to:

MirOil USA, LLC
13114 Bleinheim Lane STE B
Matthews
28105
+1 980 890 7010
ORDERS@MIROIL.COM

FURNISH THE DRYER SERIAL NUMBER with all inquiries.



wig alive®

**WIG CAPS
WIG DRYING CABINETS**

www.wigalive.com | tel: (980) 890-7010