



Picture 2

**Control Panel (Picture 2)**

- A:Knob for Burner H1**
- B:Knob for Burner H2**
- C:Knob for Burner H4**
- D:Knob for Burner H3**
- F:Knob for Oven Down Burner**
- G:Rack**
- H1:Medium Burner and Medium Burner Cap**
- H2:Medium Burner and Medium Burner Cap**
- H3:Small Burner and Small Burner Cap**
- H4:Large Burner and Large Burner Cap**
- I:Lamp**

**USING METHOD**

**1)Installation**

- A:** This cooker must be placed on an even floor, and a small gap should be kept between the machine and the wall;
- B:** The burner nozzles are designed in accordance with all safety requirements and fit for standard gas;

**2) Operation**

- A:** Open the top cover, push and turn the corresponding knob to ignite the burners with a sparker.
- B:** When stop using, shut down the cylinder before turning the knob to OFF position.