Promix-Truck CANbus Interface Module - 230511

LED STATUS


LED 1: Tacho/Road Speed (Flashing when

above 400 RPM or above 0Kms)

LED 2: Neutral Park ON.

LED 3: Service Brake ON. (Foot Brake)

LED 4: Park Brake ON.

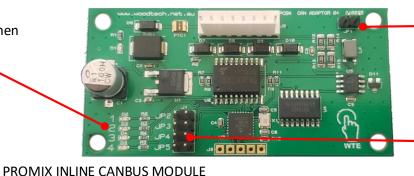

JP1 (120ohm Resistor)

JP2: Acknowledgement

JP3: Spare

JP4: Spare

JP5: Tacho or Road Speed Mode

Required Jumper Positioning								
Truck	Model	JP1	JP2	JP3	JP4	JP5	Line	
Kenworth	T360	Off	Off	Off	Off	See Below	Open	
UD	CG303060	On	On	Off	Off	See Below	ВВ	
Mack	Metroliner(before 2022)	On	Off	Off	Off	See Below	ВВ	
Mack	Metroliner(after - 2022)	On	On	Off	Off	See Below	ВВ	
Western Star		On	Off	Off	Off	See Below	ВВ	
Hino	Mini	On	Off	Off	Off	See Below	ВВ	
Hino	Maxi	On	Off	Off	Off	See Below	ВВ	
Isuzu	F Series	On	Off	Off	Off	See Below	ВВ	
Freightliner		On	Off	Off	Off	See Below	ВВ	
Sino Truck	T5G	On	Off	Off	Off	See Below	OBD	
Iveco	Euro 6	Off	Off	Off	Off	See Below	Open	
MAN		On	Off	Off	Off	See Below	ВВ	
Diamond Reo		Off	Off	Off	Off	See Below	Open	
Important Notes								
JP1 Jumper - 120ohm terminal resistor is required								
JP2 Jumper – Ack	nowledgements Required							·
JP5 Jumper Position - Tacho Output (leave OFF) Road Speed Output (leave ON) for Auto Travel Mode								

Please Note:

- 1. Always make sure the Promix SD main board jumpers for Park Brake and Neutral Park Input lockout jumpers are placed in the positive position not negative.
- 2. Jumper JP5 ON (Road Speed) is also used for the Auto travel mode if not require leave jumper off as default.