



Alarm Testing Procedures (Recommended Once/Month)

- 1. PUT ALARM IN TEST by calling your monitoring station.
(Alarm Central phone # 1-888-463-6023) Make sure you have Account # and/or password/passcode to authorize test mode.**
- 2. Make sure all zones are “closed” as if you were leaving for the day and then arm the system.**
- 3. Open each zone, ie: front door, back door, walk under motions, safe/vaults doors, each panic, etc. A complete zone list can be provided to you from your monitoring station. PLEASE NOTE: The alarm will sound.**
- 4. Enter code in keypad to disarm/clear/reset alarm AFTER all zones have been triggered/opened. (For DMP Alarms, hold #2 button on keypad for sensor reset)**
- 5. Call your monitoring station back to remove from test mode and verify signals were received from each zone you tested.**
- 6. If just completing a simple communication test, PUT ALARM IN TEST, push a holdup, and verify with monitoring station it was received when removing from test mode.**