



## Convection / Microwave Oven Quick Start Guide

### **MICROWAVE:**

REMOVE ALL METAL FROM INSIDE THE MICROWAVE

Press COOK TIME once and turn knob to select cooking time. Press knob.

Press START to begin cooking.

Press PAUSE or CANCEL to end cooking.

### **CONVECTION OVEN:**

METAL SHELVES AND TRAYS CAN BE USED INSIDE OVEN

Press the CONVECTION BAKE or CONVECTION ROAST.

Turn the knob to set the oven temperature. Press knob.

Press the START button to preheat.

The unit will beep when preheated.

Place food in oven, being careful of heat inside oven.

Close the door and turn the dial to the desired cook time. Press knob.

Press the START button to begin cooking.