



## Dishwasher Quick Start Guide:

1. Rinse dishes and load into dishwasher
2. Add detergent to dispenser on door and close lid
3. Select cycle
4. Select delay, if desired
5. Press START and close door within four seconds

Opening the door will cause the wash cycle to pause. The dishwasher will beep every minute to remind you to close the door.

Press the START button to resume the cycle and close the door within four seconds.

To cancel a wash cycle, open the door and press and hold the START button for three seconds until the LED turns off. Close the door.

A beeping dishwasher is asking you what you'd like it to do!  
Resume or cancel the cycle to silence it.