



Washer Dryer Quick Start Guide

WASHER:

Add detergent to bottom of wash tub

Add fabric softener to cup in center (optional)

Add clothes

Close lid

Select WASHER CYCLES, TEMPERATURE
and OPTIONS

Press START

DRYER:

Add clothes

Select DRYER CYCLES

Press START