



Adjusting Temperature Setpoint: RWD 68

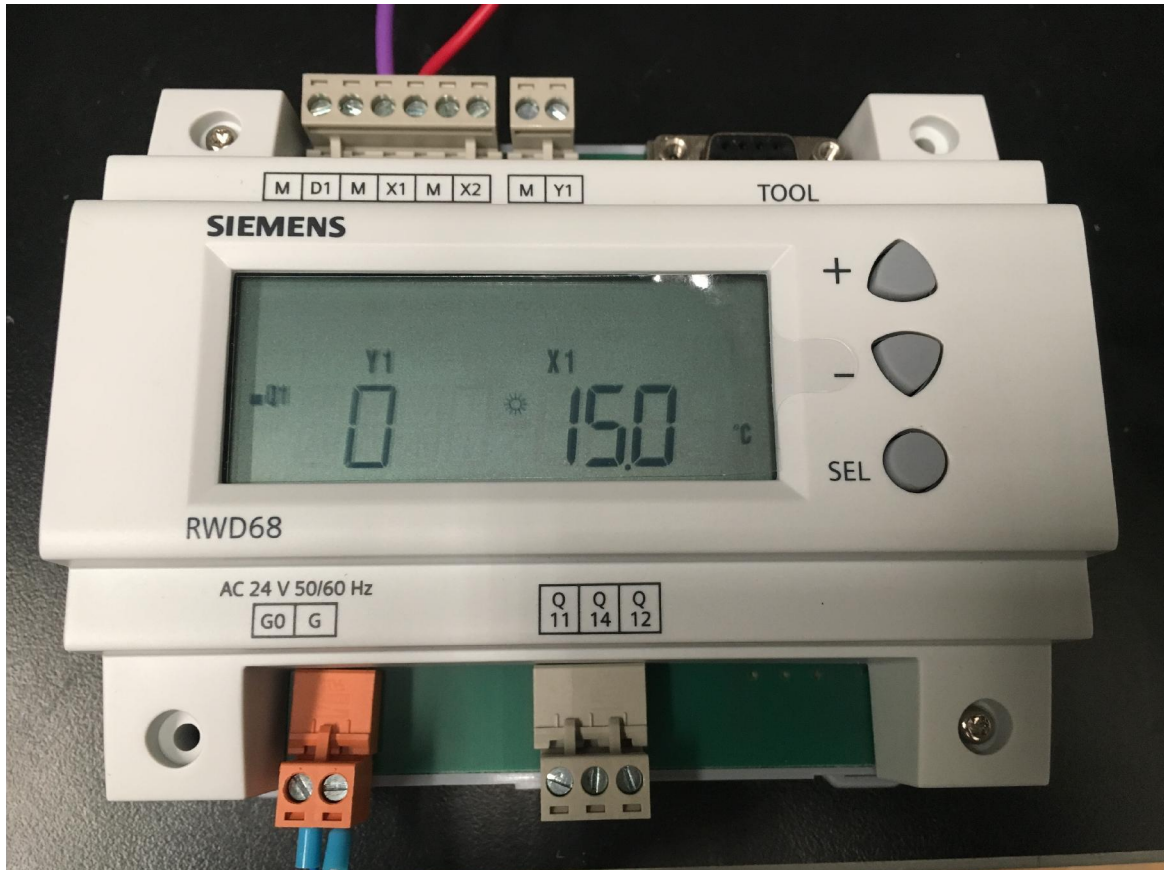


X1 Value is the current room temperature

Y1 Value is the cooling signal, 0=no cooling signal, 10=maximum cooling signal


Q1 is the Electric duct heater status

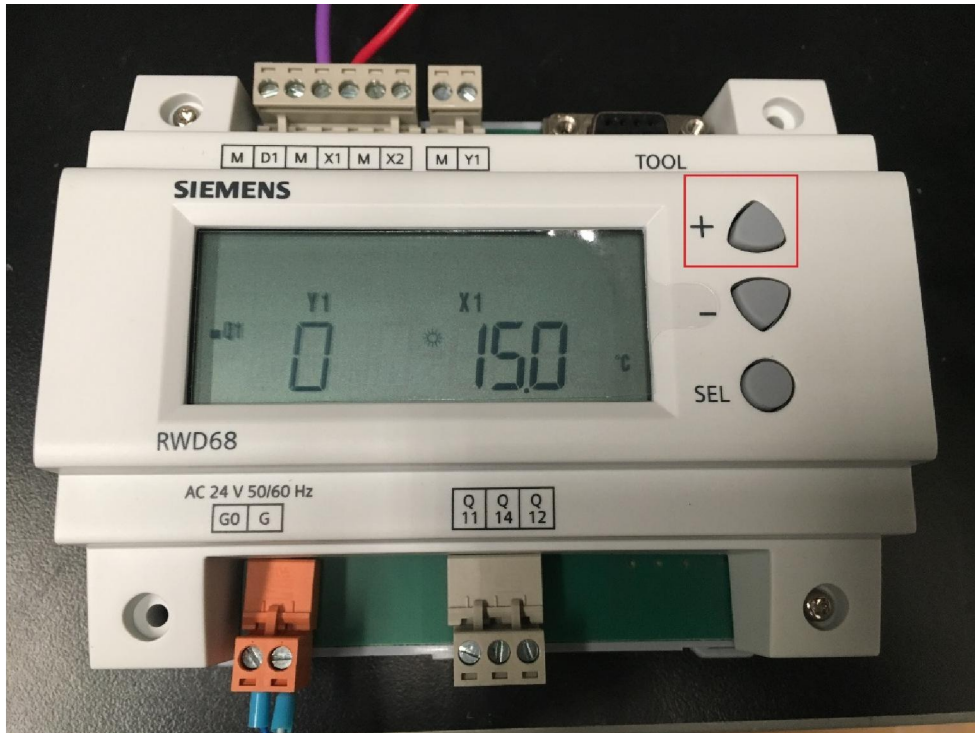


To adjust the cooling setpoint, press the + button until 'SP-C' is on the screen

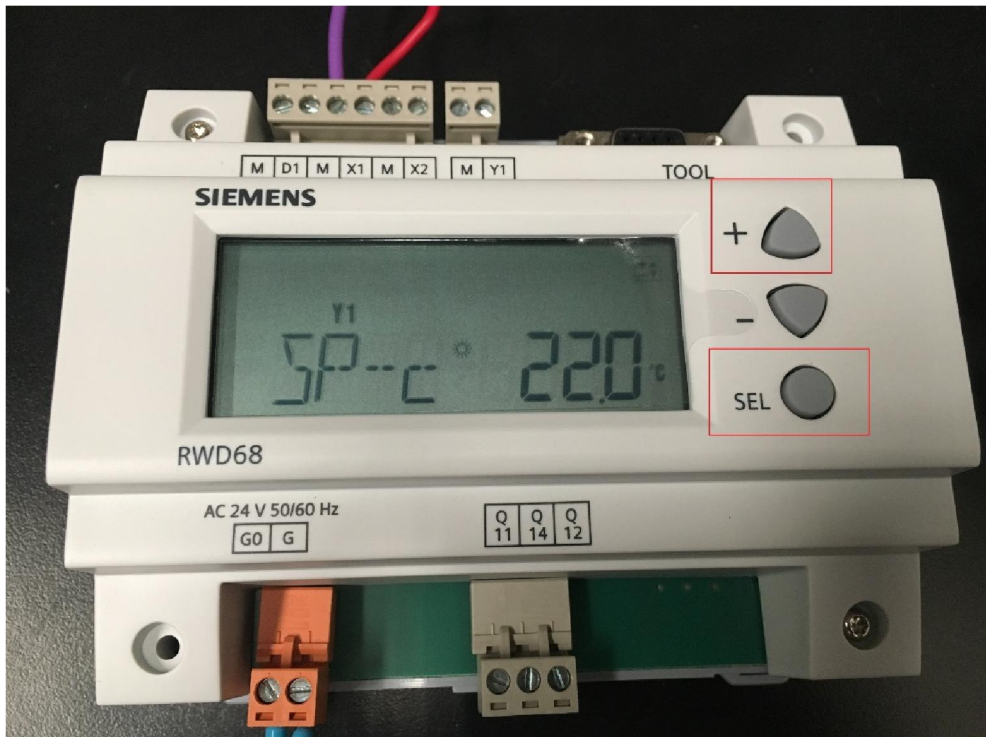

Press 'SEL' button, the number value will flash, adjust to desired value using + or - buttons. Press 'Sel' button to confirm selection.

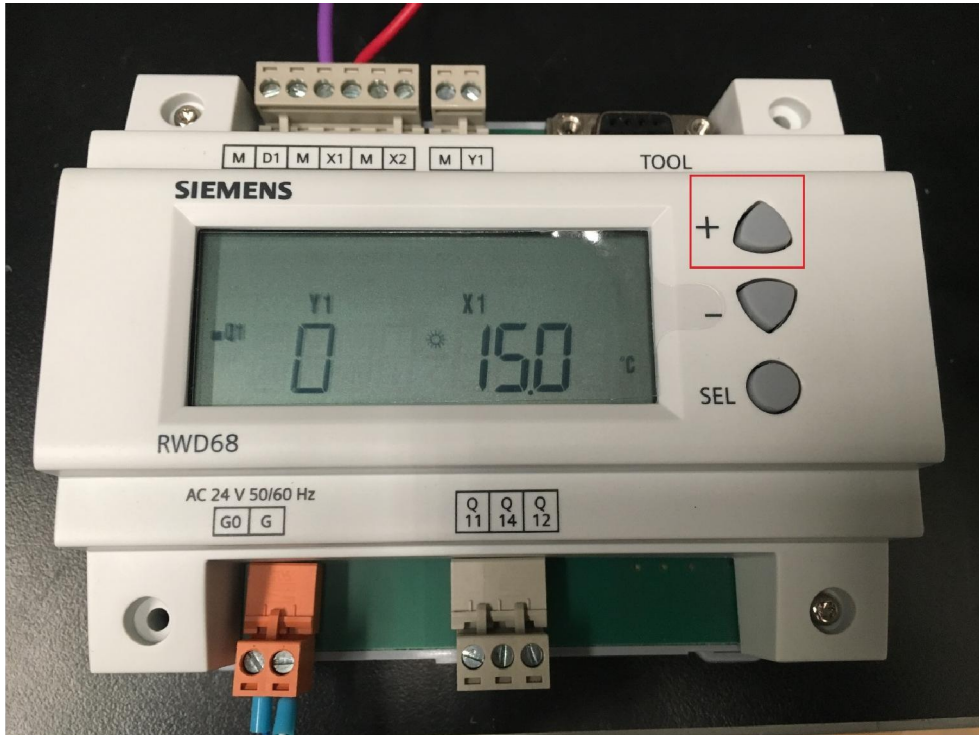

To adjust the heating setpoint, press the '+' button until 'SP-H' is on the screen

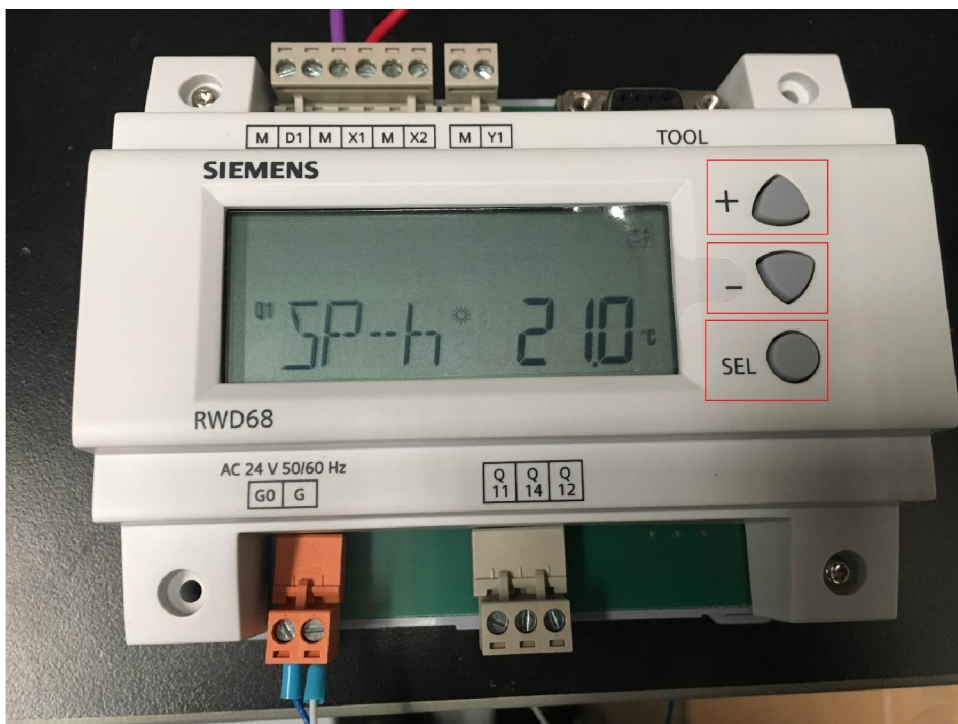

Press 'SEL' button, the number value will flash, adjust to desired value using + or – buttons. Press 'Sel' button to confirm selection.

Note: The SP-H value must always be lower than the SP-C value, in some cases, both value may need to be adjusted to select the desired temperature.