



Landis Controls Pty Ltd
A B N 60 160 601 516

Unit 2 / 79 Station Road
Seven Hills, NSW, 2147
Sydney, Australia

Telephone: (02) 9674 3898

Facsimile: (02) 9686 6146

E-mail: sales@landiscontrols.com.au

IQ Nexus – Wireless Monitoring

Onsite Step-By-Step Pre-Commissioning Guide

NANO/GATEWAYS

- Identify locations for Nano (black box) and Gateways, ensure they are located as per ranges below.
 - o Internal Gateway range approx. 2km from field devices, External Gateway range approx. 10-15km from field devices.
- Plug in Nano & Gateways to power source (Nano turns on via button, Gateway automatic).
- Connect Nano & Gateways to network via ethernet, all devices require same network.
- Ensure Nano is provided with a FIXED IP address.

FIELD DEVICES

- Mount field devices in required locations, be sure to be within range of at least one gateway (note range above).
- Note individual field device serial numbers and locations.

INFORMATION REQUIRED FOR COMMISSIONING

Forward below information to Landis Controls **before** commissioning date, commissioning attendance will be delayed if information is not provided.

- NANO (black box) FIXED IP address
- List of Field device's locations and serial numbers
- Confirmation Landis Controls technician laptop is able to plug in to same network as NANO/Gateways, via ethernet.