


## Siemens RMZ790 Display Operating Instructions

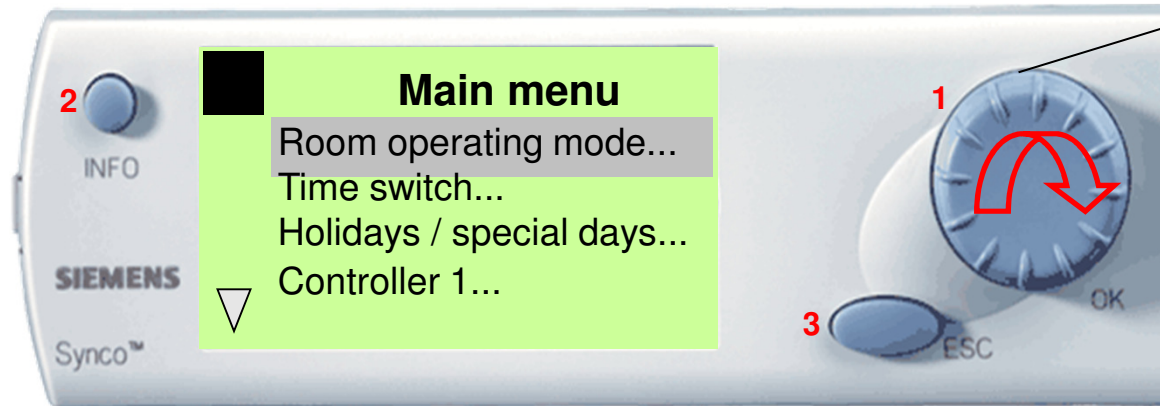

Turn =  
selection of menu  
option or changing  
a value

Press =  
confirmation of  
menu option or  
value

Press ESC

Returns to previous menu

Press INFO (From WELCOME Screen)

Shows:

Controller Setpoints & Actuals

Faults

O/A Temp

Press OK Button / Wheel

Enters a MENU

INPUTS – Shows Input Values

CONTROLLER – Shows Setpoints & Actual Value  
for specific controller

AGGREGATES – Shows current state of Outputs

FAULTS – Shows current Faults, with date & time

SETTINGS – Allows changes to settings



# Operating Instructions

SIEMENS

## **How to Enter COMMISSIONING MODE**

1. Press ESC & OK Button Together
  2. Scroll down to PASSWORD Level
  3. Press OK
  4. Scroll to Password No 7 – Press OK
  5. Main Menu will be displayed – Adjust to “Commissioning” – Press OK (Warning plant will STOP – Press ESC)
- The above steps take you into “Commissioning Menu”

## **How to Enter CONTROLLER MENU**

1. Scroll Down to “Settings” Menu
2. Scroll Down to either of 3 x Controllers (Temp Controller, Humidity Controller, Pressure Controller)
3. Press OK to enter required “Controller”

Once in the “Controller MENU” Screen will show “setpoints” or “Control Parameters”

## **How to Change SETPOINTS**

1. To change Setpoints, scroll onto “Setpoint” menu – Press OK
  2. Scroll to “Setpoint HIGH” to change HEATING Setpoint
  3. Scroll to “Setpoint LOW” to change COOLING setpoint
- (Note, Heating & Cooling Setpoints can NOT Cross Over, hence may need to adjust LOW down, to allow HIGH to be reduced & vice versa)

## **How to change CONTROL PARAMETERS**

1. To change Control Parameters, scroll onto “Control Parameters” menu – Press OK
2. Display will show S1 \\_ XP (Proportional Band for Heating), S1\\_Tn (Integral Time for Heating), S1\\_Tv (Derivative Time for Heating)
3. Display will show S4 \\_ / XP (Proportional Band for Cooling), S4 \\_/Tn (Integral Time for Cooling), S4 \\_/Tv (Derivative Time for Cooling)
4. Display will show “Control Timeout”
5. To change any Values (Proportional Bands or Integral Times), simply scroll Up or Down & Press OK, then adjust the values accordingly.