


INSTALLATION

Step 1

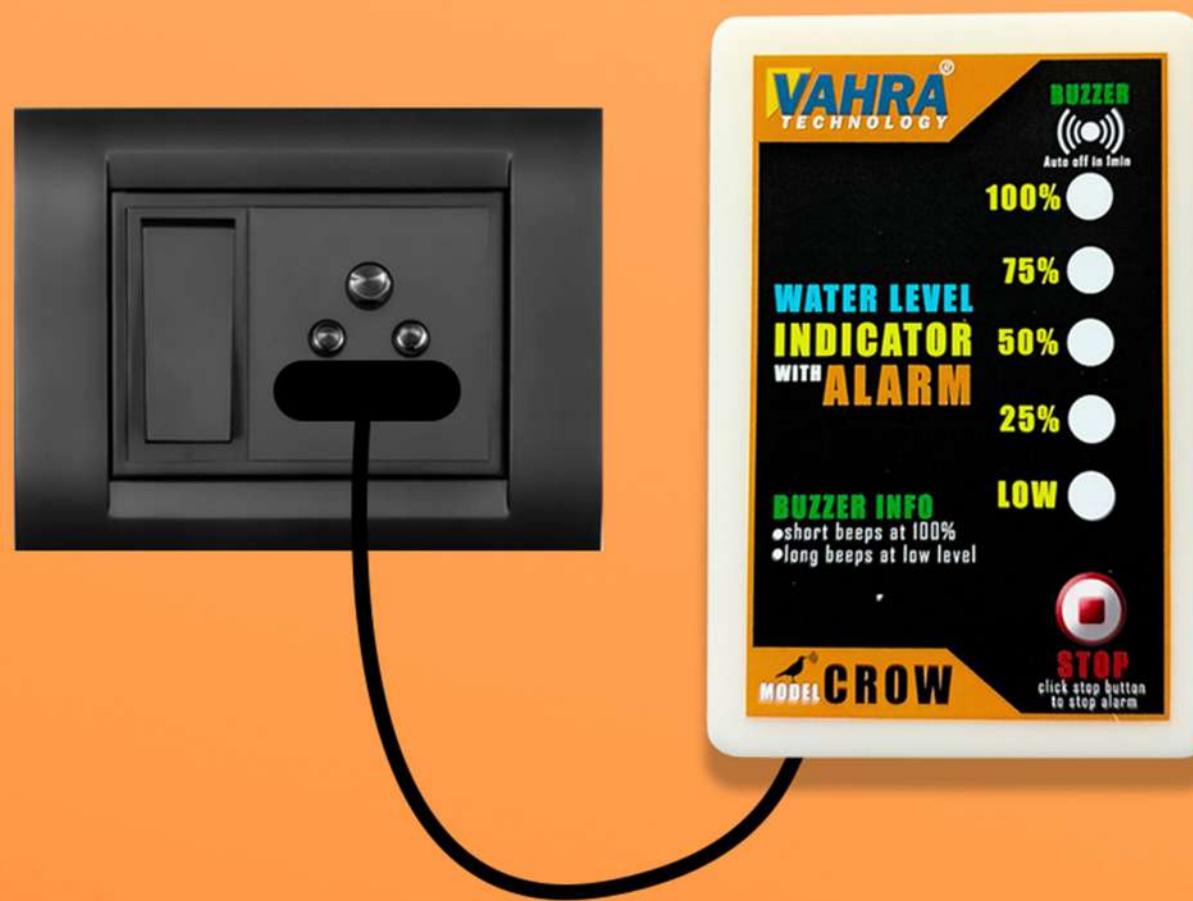


■ connect cable in 220v main

Step 2



■ connect two wires to device wires
, take that wires to overhead tank

Step 3

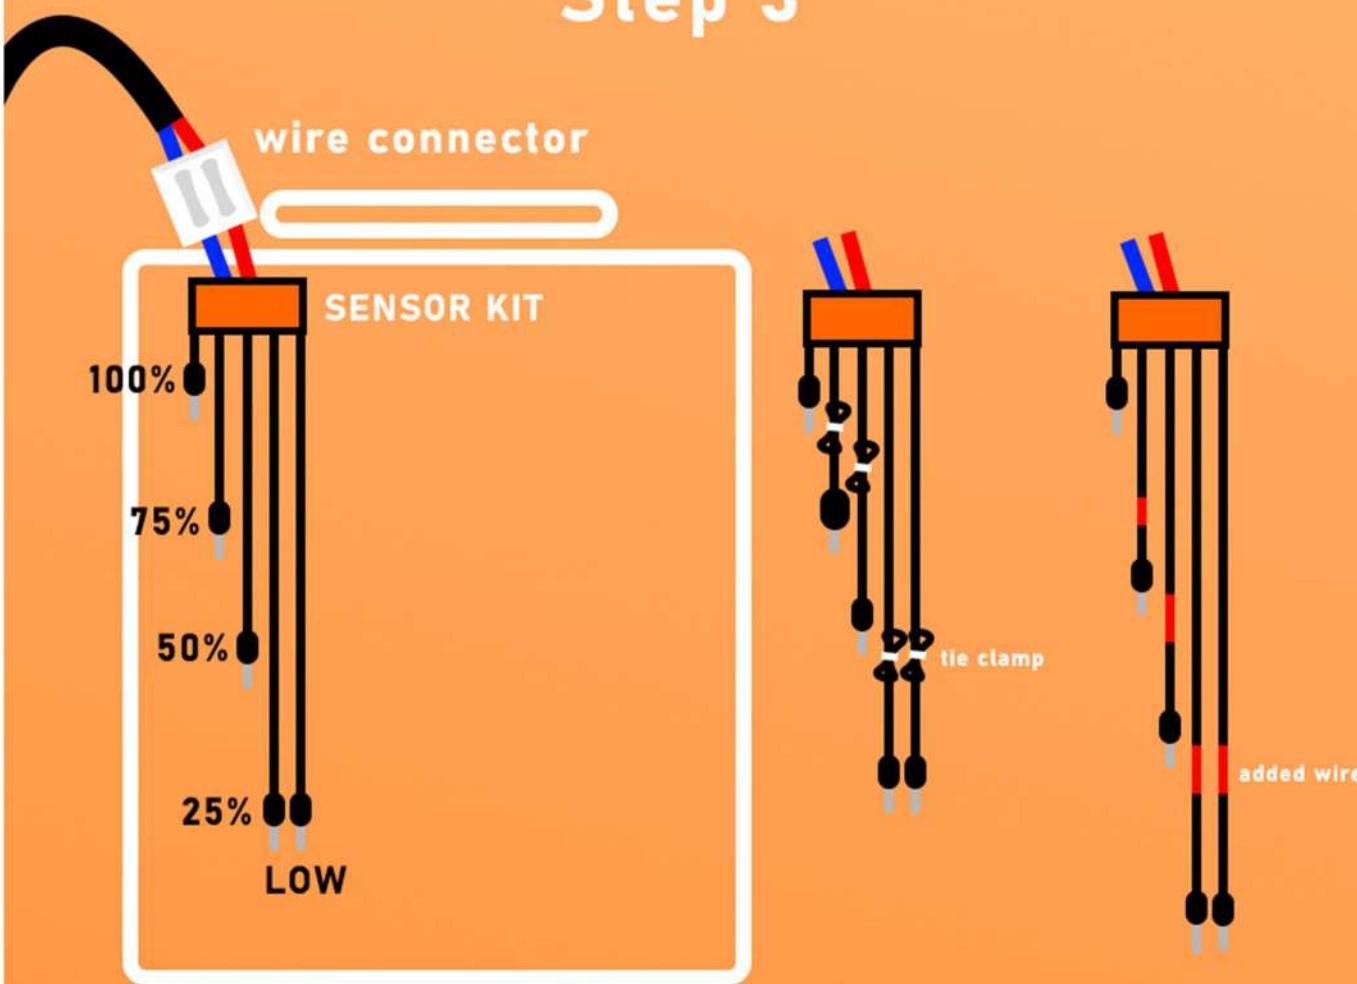

- Use tie clamps to knot sensor wire to adjust for tank
- Add extra wires to long the sensor wires for adjust in water tank
- Connect sensor wires to device wires**

ALARM



short beeps at



long beeps at



Alarm info



Alarm stop button



automatic off in 1 min