

House blower settings

To adjust the blower timer settings:

on plc the toggle switch must be in the middle position

take out and turn around the green screen DV 1000, (TWICE THE ICE, INSERT MONEY)
press the buttons as directed below.

chn pre button 1x

check to see what number is after blower off.

Blower off 1 is box dump

Blower off 2 is flap make x2

Blower off 3 is timer only

Adding time to timer 4 will add time to all blower off settings

To change blower off:

Chng pre 1x

Plus button (+) 1x

ENT button 1x

Cursor will now be on blower off 000x

Change the x to 1, or 2, or 3 with the (+ -) buttons.

For a double bagger set the above to 1, this usually works for most houses, and the time change below is not needed.

message button

done, test to see if the blower stays on longer.

To change time:

Chng pre 1x

Left arrow 2x (timers.)

Plus (+) button 3x (timer 4)

ENT Button 1x cursor will now be on 000x, change time to 0540.

Message button.

Done