



MUD MUNCHER CLEANING INSTRUCTIONS

NOTE: The sooner you clean your Mud Muncher after use, the easier it will be.

1. Pull quick release clips and remove Mud Muncher from the shield
2. Remove motorized housing bottom cover with motor and coil cord and put to side.
3. If film is not completely used up cut film with scissors.
4. Remove and dispose of used film.
5. Clean bottom cover and motor assembly with a damp cloth.
6. Try not to get any water in by the motor.
7. With a hose or bucket of water, clean shield and Mud Muncher with a soft brush.
8. Dry off completely.
9. Follow film loading instructions.

NOTE: Never clean the film guiding system with the drive motor still attached to the unit.

THE FILM ADVANCE BUTTON THAT IS INCLUDED WITH THE STANDARD MUD MUNCHER KIT IS GOOD FOR SOME APPLICATIONS. FOR THE BEST RESULTS AND RELIABILITY THE SWITCH SHOULD BE REPLACED WITH A HIGHER QUALITY SWITCH THAT FITS YOUR APPLICATION. (we offer another switch part #E112)

