



NO.	PART NO.	PARTS DESCRIPTION	QTY
1	HP-1500-01	Handle Body	1
2	HP-1500-02	Reverse Valve	1
3	HP-1500-03	O-Ring	1
4	HP-1500-04	Reverse Valve	1
5	HP-1500-05	O-Ring	1
6	HP-1500-06	Pin Valve Rod	1
7	HP-1500-07	Spring	1
8	HP-1500-08	Reverse Valve	1
9	HP-1500-09	Cone Spring	1
10	HP-1500-10	O-Ring	1
11	HP-1500-11	Air Inlet-BSP	1
	HP-1500-11	Air Inlet	
12	HP-1500-12	Screw	4
13	HP-1500-13	Spring Washer	8
14	HP-1500-14	Packing	1
15	HP-1500-15	Ball Bearing	2
16	HP-1500-16	Rear Plate	1
17	HP-1500-17	Cylinder	1
18	HP-1500-18	Rotor	1
19	HP-1500-19	Blade	7
20	HP-1500-20	Spring	7
21	HP-1500-21	Key	1
22	HP-1500-22	Front Plate	1
24	HP-1500-24	O-Ring	1
25	HP-1500-25	Housing	1
26	HP-1500-26	Valve Bushing	1
27	HP-1500-27	Reverse Valve	1

NO.	PART NO.	PARTS DESCRIPTION	QTY
28	HP-1500-28	O-Ring	1
29	HP-1500-29	Reverse Lever	1
30	HP-1500-30	Spring Pin	1
31	HP-1500-31	O-Ring	1
32	HP-1500-32	Anvil Rear Spacer	1
33	HP-1500-33	Hammer Cage	1
34	HP-1500-34	Hammer	1
35	HP-1500-35	Hammer Cam	1
36	HP-1500-36	Anvil Front Spacer	1
37	HP-1500-37	Anvil	1
	HP-1500-37	Anvil (+6")	
40	HP-1500-40	Bushing	1
41	HP-1500-41	Front Casing	1
42	HP-1500-42	Spring Washer	4
43	HP-1500-43	Screw	4
44	HP-1500-44	Pipe Plug	1
45	HP-1500-45	Handle	1
46	HP-1500-46	Screw	4
OUTER TRIGGER			
47	HP-1500-47	Spring Pin	1
48	HP-1500-48	Spring Pin	1
50	HP-1500-50	Trigger	1
INNER TRIGGER			
47	HP-1500-47	Spring Pin	1
48	HP-1500-48	Spring Pin	1
51	HP-1500-51	Trigger	1