

CATFISHSTUNNER.COM

MUST HAVE FLOWING WATER

CATFISH SHOCKER/STUNNER 12 VOLT (water temp over 70 degrees)
12 or 24 volt

1. THERE ARE THREE WIRES.
BLACK WITH RED END 12VOLT POSITIVE
WHITE WITH BLACK END NEG. POST OF BATTERY
GREEN WIRE WITH PLAIN END THAT CONNECTS TO DRAG WIRE
2. CONNECT THE RED END TO THE POSITIVE 12VOLT
CONNECT THE BLACK END TO THE GROUND OF THE BATTERY CONNECT THE SILVER
END (GREEN WIRE) TO THE WIRE THAT YOU WILL DRAG IN THE WATER
3. THE WIRE IN THE WATER NEEDS TO BE COATED. I HAVE FOUND THAT 10 GAUGE COATED
STRANDED WIRE WORKS BEST, IT DOES NOT BREAK WHEN CAUGHT IN LOGS OR ROCKS. AN
EXTENSION CORD WILL WORK FINE ALSO, JUST CUT THE ENDS OFF AND TWIST ALL THE WIRES
TOGETHER. THE WIRE NEEDS TO BE 30-50 FEET LONG. STRIP BOTH ENDS OF THIS WIRE FOR
ABOUT TWO INCHES. NOW TAKE A CHAIN or some metal item (AT LEAST 1 POUNDS AND AT LEAST
12 INCHES LONG AND CONNECT IT TO THE CHAIN WITH HOSE CLAMPS, (any metal weight will work). I
TIE THE WIRE TO THE CHAIN FIRST THEN HOSE CLAMP THE BARE END TO THE CHAIN. SO THE
END RESULT WILL BE A WIRE 30-50 FEET LONG TIED TO A CHAIN AND THE BARE END HOSE
CLAMPED TO THE CHAIN END. NOW THE OTHER END OF THE DRAG WIRE WILL CONNECT TO THE
GREEN WIRE OF THE SHOCKER UNIT.

4. THE BOAT OR THE MOTOR MUST BE GROUNDED TO THE
NEGATIVE SIDE OF THE SAME BATTERY THAT THE SHOCKER IS
CONNECTED TO.

5. THE GREEN LED LIGHT IN THE SHOCKER WILL FLASH 30 TIMES A SECOND WHEN
PROPERLY CONNECTED. IF THE LED LIGHT DOES NOT FLASH THE YOU HAVE CONNECTED THE
WIRES WRONG. DO NOT WORRY I HAVE HOOKED THE THING UP WRONG AND IT HAS NEVER
SHORTED OUT BUT DO NOT SHORT IT OUT FOR LONG. MAKE SURE THE GREEN WIRE DOES
NOT TOUCH THE OTHER TWO. IF IT DOES THEN UNPLUG THE UNIT AND REPLUG.

6. WORK YOU WAY DOWN STREAM WHEN USING AFTER YOU HAVE STOPPED FOR 1-2
MINUTES. THE FISH WILL SURFACE FOR 1-2 MINUTES THEN SWIM AWAY. AREAS WITH ROCKS
ON THE RIVER WORK WELL. YOU HAVE TO FIND THE FISH, BUT THEY WILL COME UP WHEN YOU
DO FIND THEM. I HAVE TESTED THE UNIT AND IT WORKS FINE.

7. I HAVE FOUND IT IS BEST TO RUN TO YOUR SPOT AND STOP
RIGHT AWAY AND KEEP YOUR CHAIN UPSTREAM FROM THE BOAT,
THEN TURN YOUR STUNNER ON.

TROLLING IN ONE DIRECTION DOES NOT WORK WELL. IF YOU
CAN NOT FIND FISH THEN MOVE 50 YARDS AWAY QUICKLY THEN
STOP AND START SHOCKING AGAIN. DO THIS UNTIL YOU FIND THEM.

HAVE FUN AND PLEASE DO NOT CATCH FISH IF IT IS ILLEGAL TO DO SO.

WWW.CATFISHSTUNNER.COM

Donald Kendrick Jr.

MUST HAVE FLOWING WATER

DONALD@CATFISHSTUNNER.COM

62 CREDEUR ROAD PINEVILLE, LA 71360 (318) 201-9587

**MUDDY WATER MAKES THE STUNNER LESS
EFFECTIVE**


must be grounded to boat or motor

Ground Wire



Black END
White WIRE

RED END
BLACK WIRE

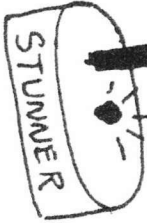

Green Wire

Alligator Clip

out put

30-50 ft. wire in water

HULL OF BOAT OR MOTOR IS NEGATIVE/

ELECTROFIED CHAIN END

on the bottom

WWW.CATFISHSTUNNER.COM

