

Emergency Notification Station (ENS)

Model: JR104-SC-4G

Quick User Guide

Document #: 019928



SMS Programming

The emergency phone allows you to program and to change setting by sending SMS message.

Here is the SMS programming instruction for emergency phone:

Note: Factory default password is 9999.

Command Format:

Password#Command Type Date#

To reset to the emergency phone to factory default password:

The command type is *#000# for reset the factory password.

Send SMS to emergency phone:



***#000#**

SMS response message from emergency phone:



***#000# OK**

Standard Programming instructions:

Modify SMS operation password (default 9999) as following example:

To change new password:

The old password is 9999. The command type is 00 for change new password. The data is 1325 for the new password.

Send SMS to emergency phone:



9999#001325#

SMS response message from emergency phone:



9999#001325# OK

Set the first group of emergency call numbers (max 16 digits) as following example:

To set emergency phone number:

The password is 9999. The command type is 11 for setting emergency phone number. The data is 911 for the emergency phone number.

Send SMS to emergency phone:

9999#11911#

SMS response message from emergency phone:

9999#11911# OK

12//Set the second group of emergency call numbers (max 16 digits)

13//Set the third group of emergency call numbers (max 16 digits)

14//Set the fourth group of emergency call numbers (max 16 digits)

20// talk time setting (default is 0~99 min)

21// relay trigger time 0-99 seconds

33//Set speaker volume (default 5 0~9)

34 //Set MIC volume (default 5 0 ~ 9)

41//Press the call button again to hang up

42//Signal strength is lower than certain value to send information

50//Set the number of the received information

51 // voltage is lower than certain value to send information

61//After a few rings, it will automatically answer (default 0, no automatic answer. Value range 0-9)

99//Factory reset

*#99#//Restore factory settings