



System 30 Time Change Instructions

1. Press the **SET-UP SYSTEM** key. If you have a lockout code setup in the programming, enter the lockout code and press **ENTER**.
2. Press + or - key until the following screen appears:

Set Up System Menus: <u>SYSTEM SETUP</u> Press + or - & ENTER
--

3. Press **ENTER** key, followed by the + or - keys to get the following screen:

System Setup <u>SET DATE/TIME</u> Press + or - & ENTER

4. Press **ENTER** key to get the following screen (the month will be flashing):

Date/Time Date: APR 12,05 Time: 10:09A Daylight Sav: NO
--

- a. Press + or - key until the correct month is displayed;
 - b. Press **ENTER** key to move to the Date field;
 - c. Press the number keys to enter the correct day of the month and year;
 - d. Press the number keys to enter the current time;
 - e. Press + or - key to select A (AM) or P (PM)
5. Press **EXIT** key three times to return to the main display.

Call our office at 714.696.6790 or 855.239.7444 for additional support.

Email requests can be sent to service@p1sound.com

5140 E. La Palma Ave. Suite 105, Anaheim, CA 92807
714.696.6790