
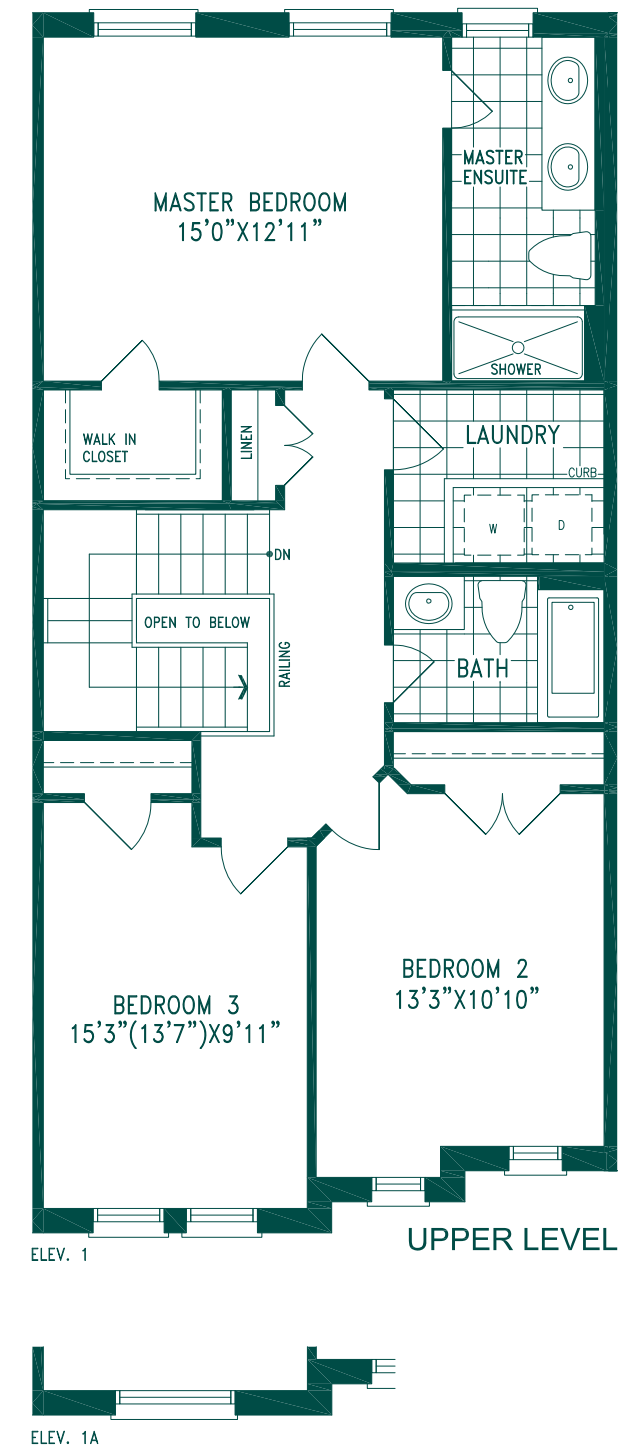
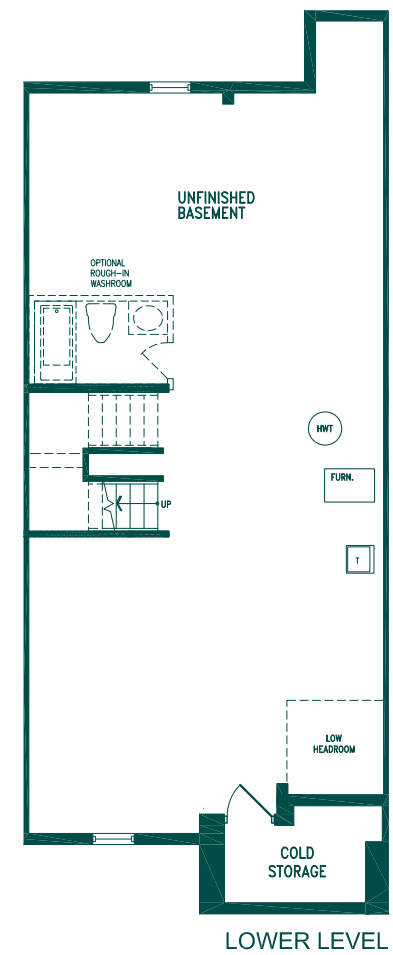


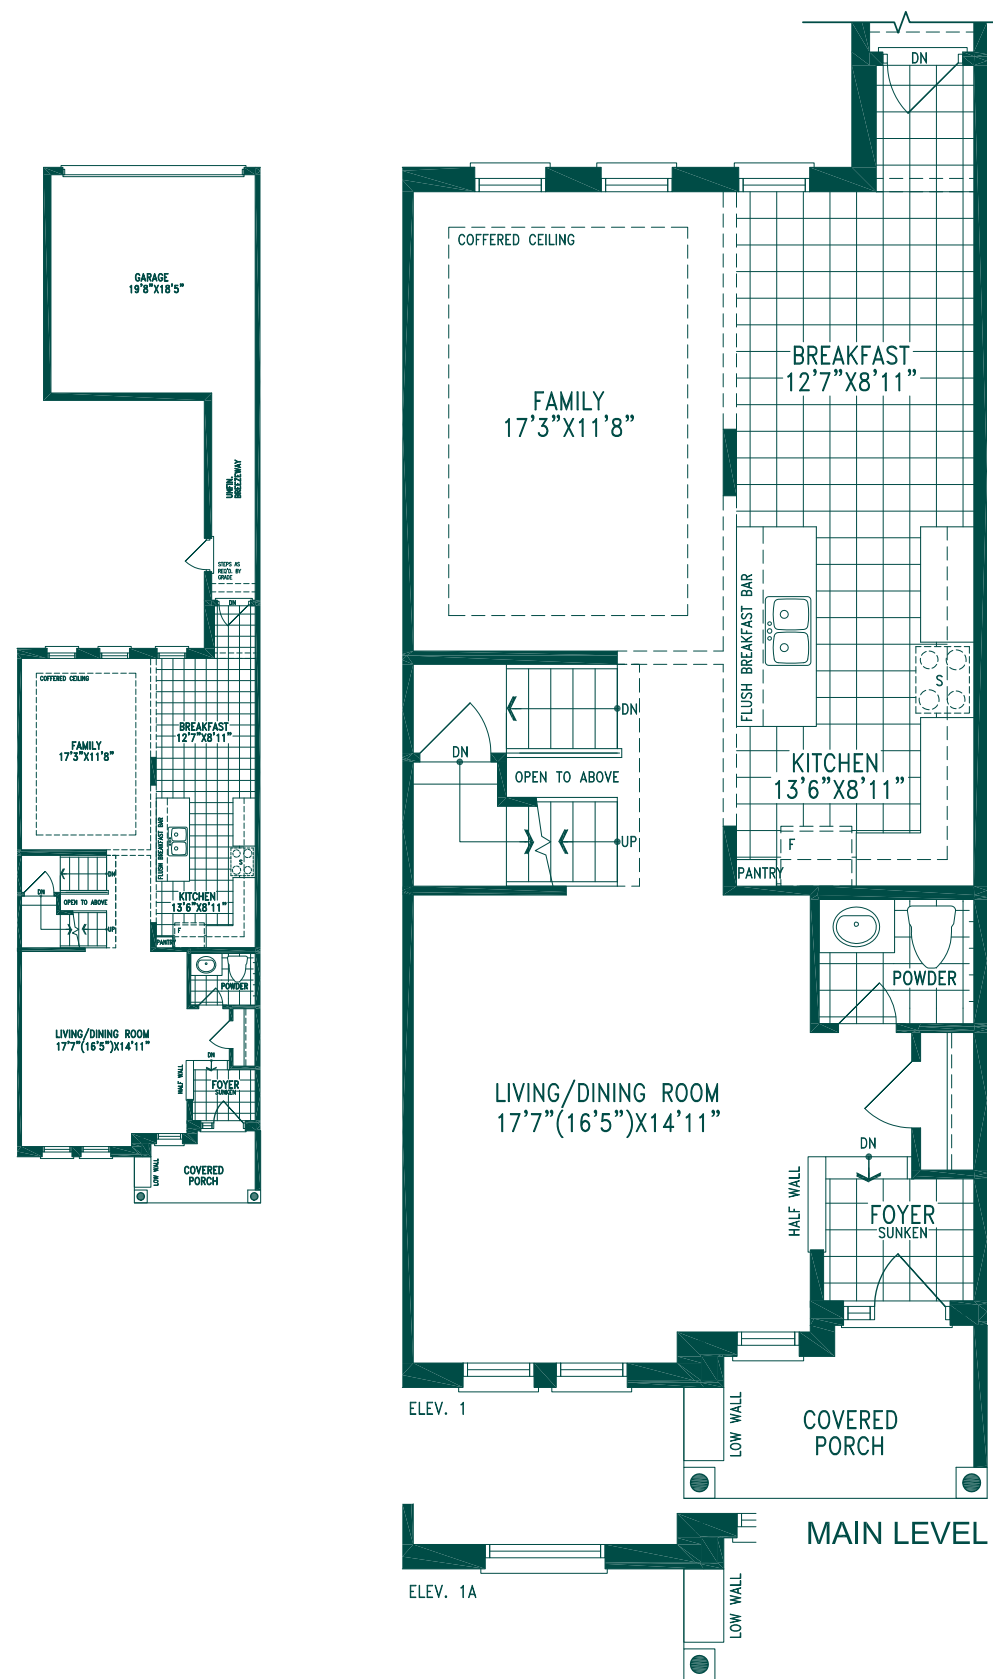

Plan is not to scale. Sole purpose of plan is to show approximate location of a lot/block within a subdivision. The numbering, size, dimension, area, shape and location of the lots/blocks may vary from what is shown on the plan. All dimensions are approximate. The Vendor tries to ensure the accuracy of the information at the time the plan is prepared, however modifications to the plan may have occurred since its preparation and errors do occur. E. & O. E.