 


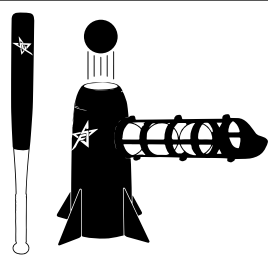

ELECTRONIC ROCKET PITCHING MACHINE

 

 
 

INSTRUCTION MANUAL



 
WARNING

1. HAIR CAN GET CAUGHT IN MAIN UNIT ROLLER MECHANISM. KEEP LONG HAIR PULLED BACK AND AWAY FROM MOVING PARTS.
2. CHANGES OR MODIFICATIONS ARE NOT ALLOWED.
3. FOLLOW INSTRUCTION MANUAL EXACTLY AS SHOWN.
4. NEVER PUT YOUR EYES OR FACE IN FRONT OF THE PITCHING HOLE.
5. NEVER USE OTHER TYPE OR SIZE OF BALL AS THIS WILL CAUSE DAMAGE TO THE MACHINE AND THE BAT.
6. ALWAYS TURN THE UNIT OFF WHEN NOT IN USE OR REPUT THE BALLS.

PART LIST

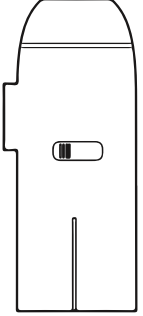 
 <p>1 X BASE</p>	 <p>1 X TELESCOPIC BAT</p>	 <p>5 X BALL</p>
	 <p>1 X BALL FEEDER</p>	 <p>4 X WING</p>

IDENTIFIER

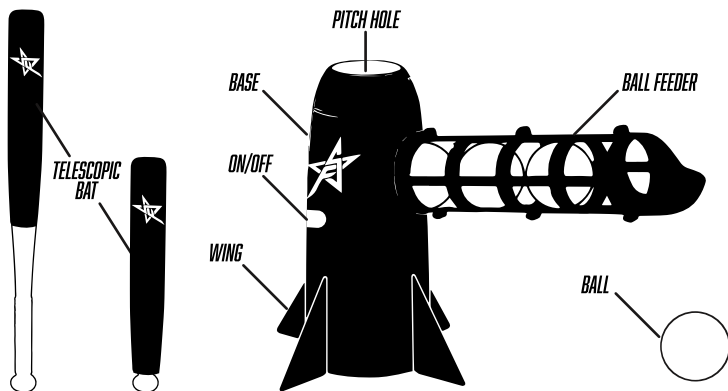

ASSEMBLY

ASSEMBLE THE UNIT ACCORDING TO THE PICTURE BELOW.

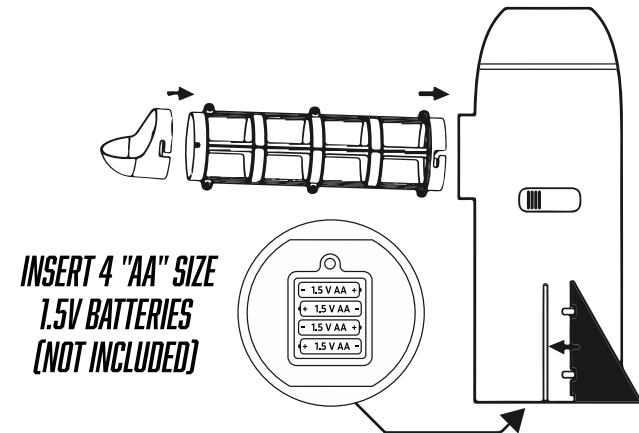

OPERATING INSTRUCTION

(PLEASE PLAY ACCORDING TO THE FOLLOWING GUIDES)

1. ENSURE THE SWITCH IS SET TO "OFF".
2. INSERT 4 "AA" SIZE 1.5V BATTERIES (NOT INCLUDED) AND INSERT 4 WINGS TO THE SLOTS AT THE BOTTOM OF BASE.
3. INSTALL THE BALL FEEDER AS THE PICTURE SHOWN ABOVE. PLACE ALL 5 BALLS INTO BALL FEEDER.
4. TURN THE UNIT ON AND BE READY TO HIT THE BALL. DO NOT FACE TO THE PITCHING HOLE.
5. BALLS TO BE PITCHED UPWARD ONE AFTER ANOTHER EVERY 7 SECONDS.
6. TURN THE UNIT OFF WHEN ALL THE BALLS HAVE BEEN PITCHED.
7. THE UNIT MIGHT NOT BE ABLE TO WORK IF THE BALL GETS STUCK DUE TO IMPROPER OPERATION OFBALL PLACEMENT. PLEASE ENSURE TO PUT ALL THE BALLS IN ONE-TIME.

REQUIRES BATTERIES 4x AA AA AA AA

*NOT INCLUDED



BATTERY WARNINGS

1. DO NOT MIX NEW AND OLD BATTERIES.
2. KEEP BATTERIES AWAY FROM FIRE, OR IT COULD RESULT IN EXPLOSION OR LEAK.
3. ALWAYS REMOVE EXHAUSTED BATTERIES FROM THE PRODUCT.
4. DO NOT SHORT CIRCUIT TERMINALS
5. DO NOT USE RECHARGEABLE BATTERIES.
6. ONLY USE THE RECOMMENDED TYPE OF BATTERIES.
7. CLEAN THE BATTERY CONTACTS AS WELL AS OTHER PARTS PRIOR TO BATTERY INSTALLATION.
8. PLEASE REMOVE ALL BATTERIES IF PRODUCT LEFT UNUSED FOR LONG TIME TO PRESERVE THE BATTERIES.

IMPORTANT NOTES:



WARNING: CHOKING HAZARD - SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

1. CHECK ALL PARTS ARE INCLUDED BEFORE ASSEMBLY.
2. ALWAYS ASSEMBLE OR DISASSEMBLE THIS PRODUCT UNDER ADULT'S SUPERVISION.
3. PLEASE STOP ASSEMBLING IF THERE IS ANY DAMAGE ON THE PRODUCT.
4. PLEASE CHECK THE UNIT EVERY TIME BEFORE USING.
5. ALWAYS TURN THE UNIT OFF WHEN THE PRODUCT IS NOT IN USE.