

How to Save Scenes from USB Thumb Drive to TouchMix-8/16

1. You will need a USB thumb drive - format FAT32
**Note: Formatting a USB drive erases all its contents.*
2. Copy the scene files (*.scene.dqx only) onto the USB drive:
 - *Example Trio*
3. Turn on the TouchMix-8. Power (Standby) button on front panel.
4. Insert USB drive into available USB port on rear panel of mixer.
5. Press "Menu" Button.
6. Touch "Scenes".
7. Two section columns are displayed: Mixer and USB. With your drive inserted, its contents appear under righthand "USB" column.
8. Save each desired Scene from the USB drive onto the Mixer:
 - A. Select *Example Trio* by touching its name under the USB column.
 - B. Touch "Copy To Mixer" at bottom of USB column.
 - C. A confirmation prompt appears. Verify Scene name is *Example Trio*.
 - D. Touch Yes to copy Scene to Mixer storage. *Note: If Mixer storage already contains a Scene with the identical name (Example Trio), the prompt will also ask you to verify whether you wish to "overwrite" the Scene on the Mixer using this new Scene from your USB device.*
 - E. Wait 10 seconds to ensure process completes.
 - F. Visually confirm that the Mixer column now contains your copied Scene named *Example Trio*.

You may now remove your USB drive from the TouchMix.