

## How To Save Scenes from TouchMix-8/16 to a USB Drive

**You will need a thumb drive format FAT32 - \* Note if you are reformatting a USB thumb drive you will lose the existing contents.**

1. Power on mixer - Power button found top right corner
2. Insert thumb drive into one of the two USB ports found on rear panel of mixer
3. Press "Menu" Button
4. Touch "Scenes"
5. You should see two boxes, one for Mixer and one for USB - you should now be able to see the contents, if any of the USB thumb drive in USB box
6. Select your first scene to save from the Mixer to the USB
  1. Select Scene by touching it on Mixer (left side)
  2. At the bottom of the box you will touch "Copy to USB"
  3. Verify file name matches what is on the Mixer
  4. Read the action box that comes up
  5. Touch "Yes" to confirm copy to USB drive
  6. Wait 10 second for action to complete

After these steps are complete you may remove the USB thumb drive from the TouchMix