

# Owner Instructions

Warning! Read instructions before using the machine

**NRV 200**

RV 370

VR 370


RV 380


RV 470



[www.numatic.com](http://www.numatic.com)

# Using the Machine

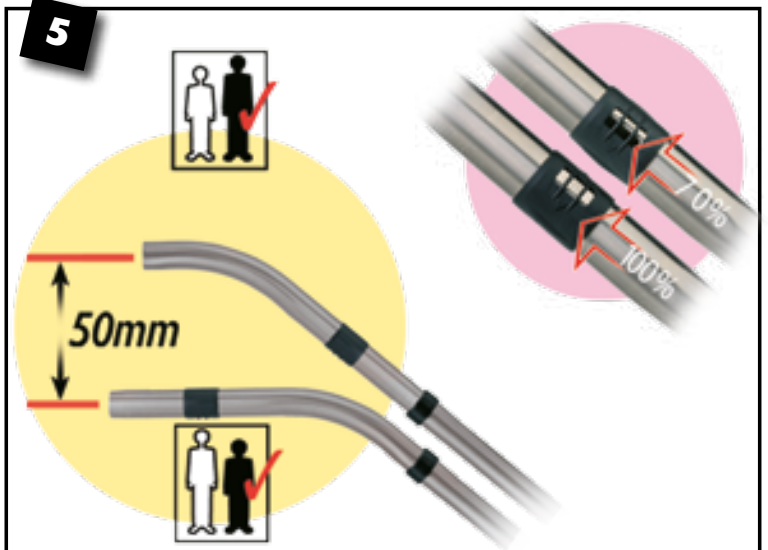

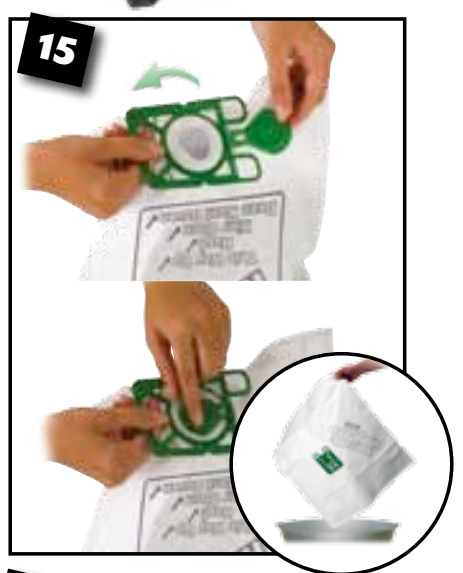

# Wand docking

Machine pictured is for demonstration purposes.

